



# Fairphone SIM Card Replacement

Remove or replace your Fairphone's SIM card.

Written By: Sam Goldheart



## INTRODUCTION

Use this guide to replace either, or both, of the two SIM cards, and the microSD card.

## Step 1 — Back Cover



ⓘ There is a small indentation in the side of the phone near the bottom of the back cover.

- With the indentation as leverage, use your fingernail to pry the bottom portion of the back cover from the phone.

## Step 2



- Slide the back cover down and remove it from the phone.

## Step 3 — Battery



ⓘ There is a small indentation in the back of the phone just below the battery.

- Use a fingernail in this indentation to push the battery toward the top of the phone
- Pull the battery out away from the phone.

## Step 4



- Remove the battery from your Fairphone.

## Step 5 — SIM and MicroSD Card



- Use your finger to slide the SIM card straight down out of its tray.
- Remove the SIM card from your Fairphone.

*(i)* Repeat this procedure if you have a second SIM card.

 Be sure to remove all SIM cards before servicing your phone.

## Step 6



- If you have a microSD card, use your finger to slide it straight out of its slot.
- Remove the microSD card from your phone.

To reassemble your device, follow these instructions in reverse order.