




# Farberware FSTO100 Indicator Light Replacement

The light indicating the toaster is on will not work. This guide is will lead you to steps that will repair the light.

Written By: Tony Wang

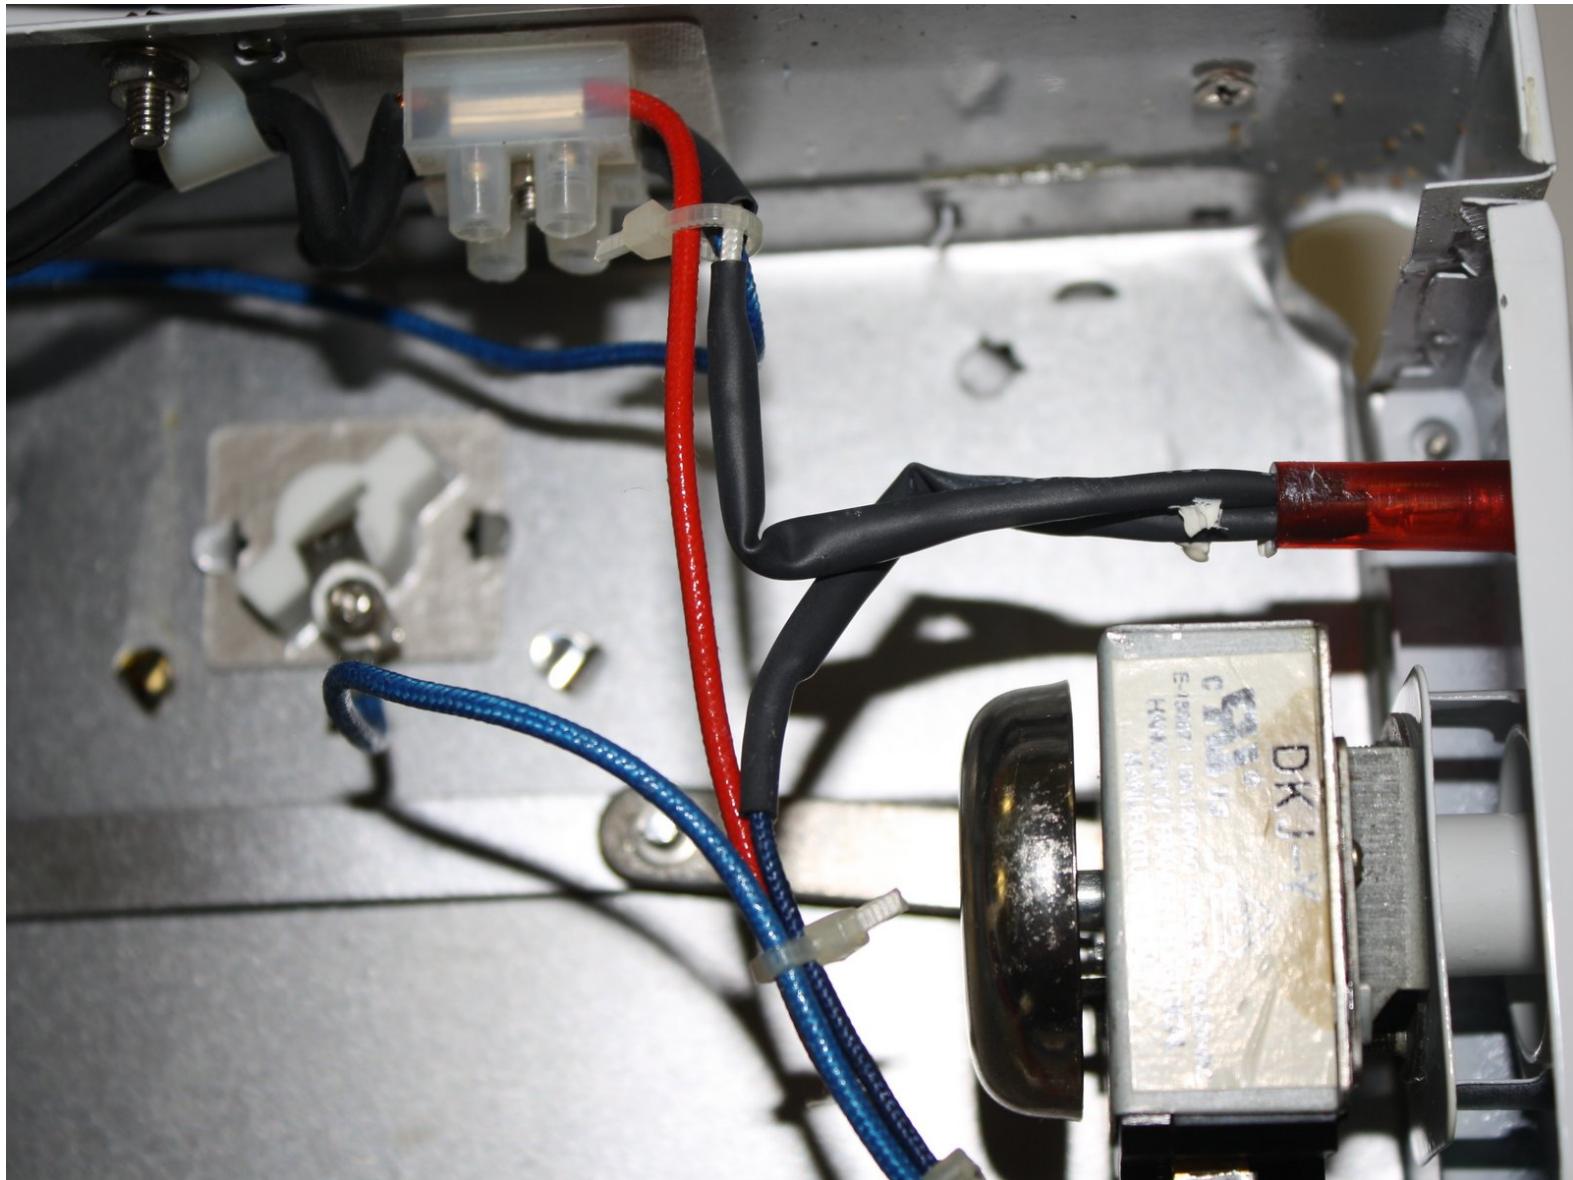

This document was generated on 2019-10-17 12:35:59 PM (MST).

## INTRODUCTION

Use this guide to repair the clear indicator light. This guide will help you through replacing the light bulb.

### TOOLS:

- Electrical Tape in 6 Assorted Colors (1)
- Large Needle Nose Pliers (1)
- Phillips #0 Screwdriver (1)


## Step 1 — Indicator Light



⚠ Make sure toaster is unplugged.


- Turn toaster upside down so screws on bottom side are facing toward the ceiling and the door is facing towards you.

## Step 2

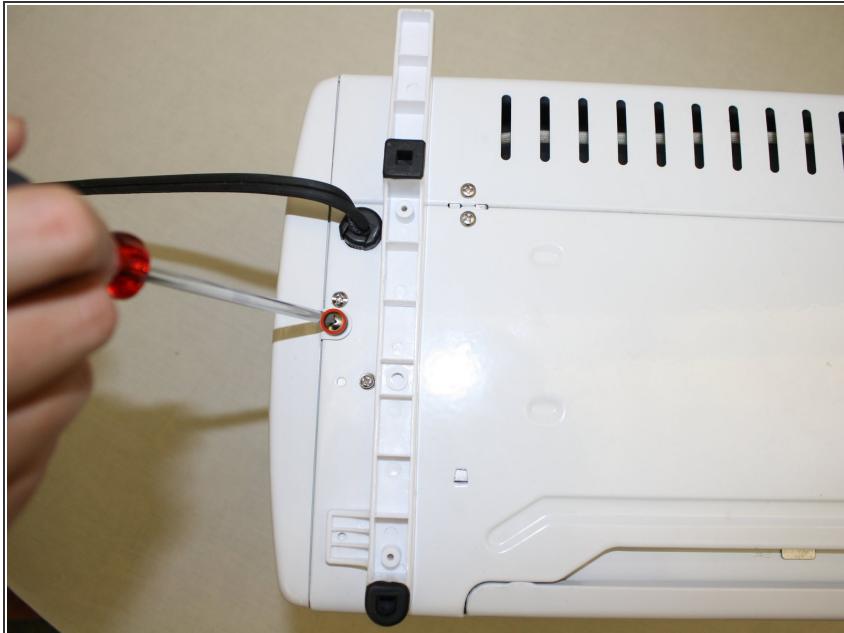

- On the left hand side, unscrew the middle screw.

## Step 3

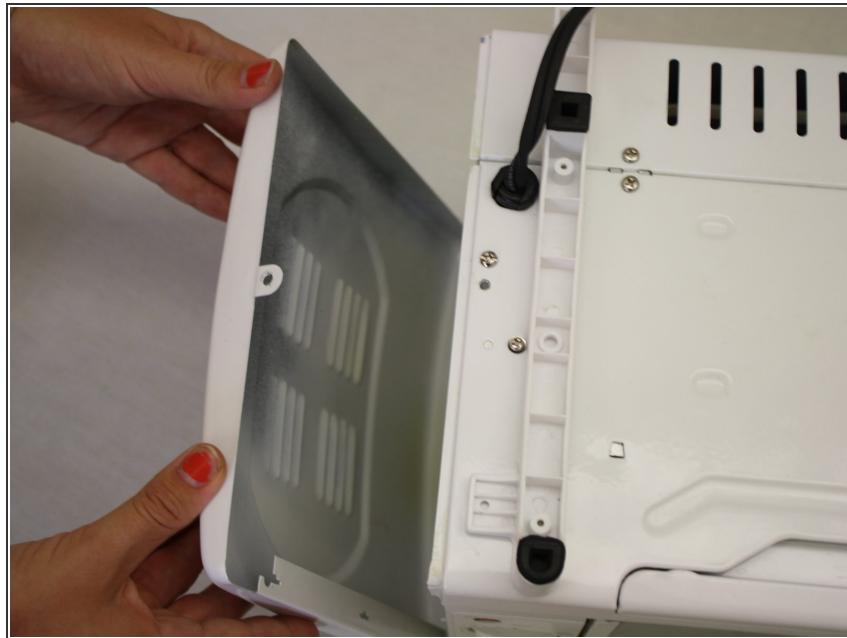



- Remove the panel on the left hand side. The indicator light is located in the red tube that has wires covered by black tubing coming out.

## Step 4




- Pull the black wires to remove the indicator light from the red tube.

## Step 5

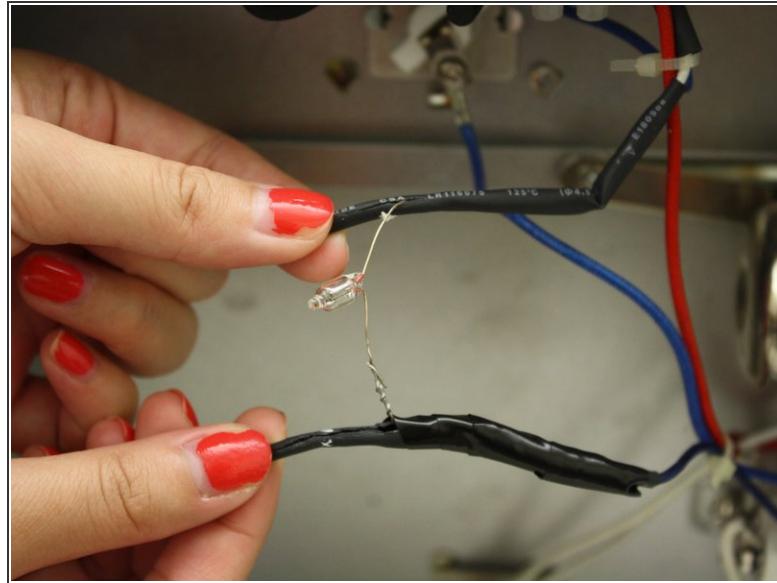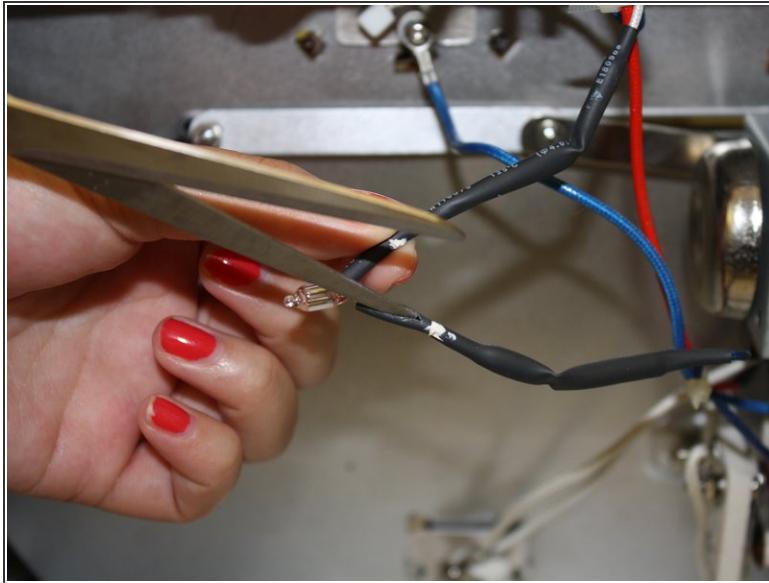


- Use scissors to cut open cord sheathing and peel back.

## Step 6

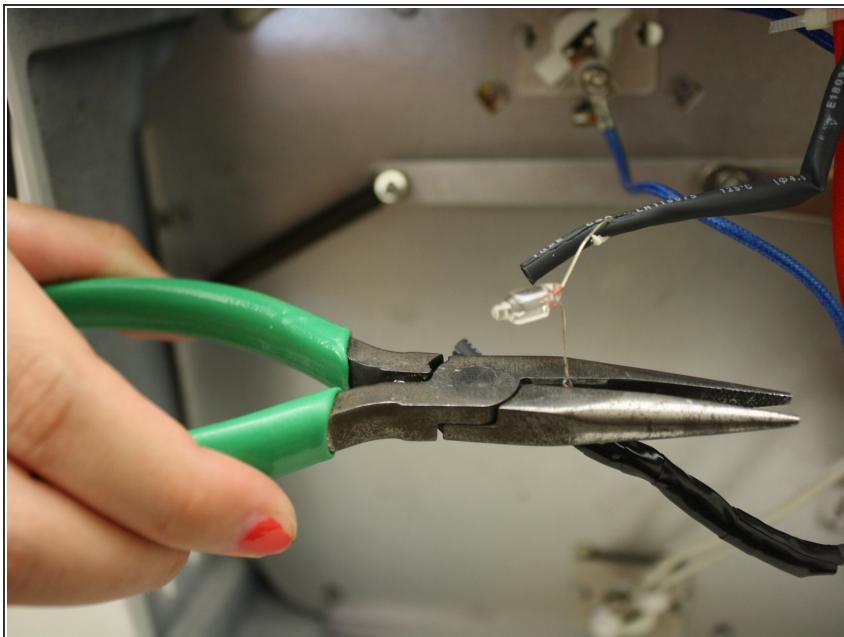


- Use the wire-cutters to remove the light bulb.

## Step 7

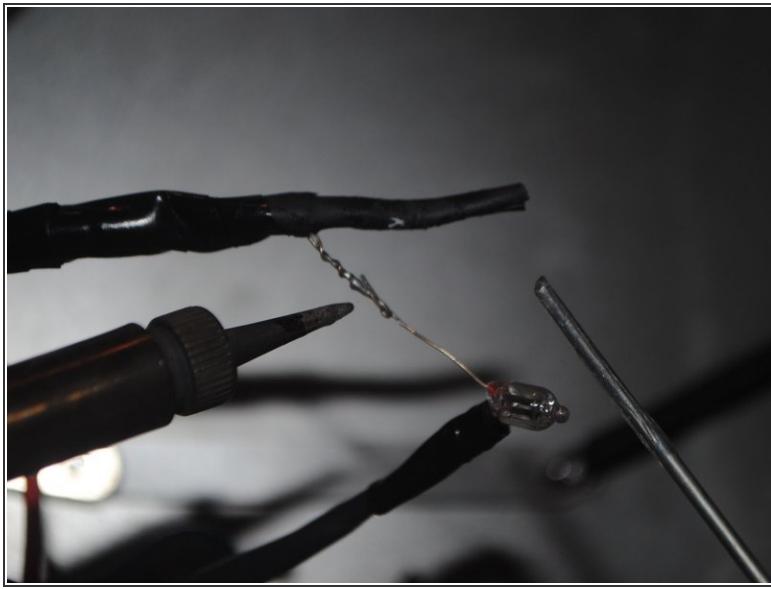


- Solder the replacement light bulb back onto its original position.

## Step 8

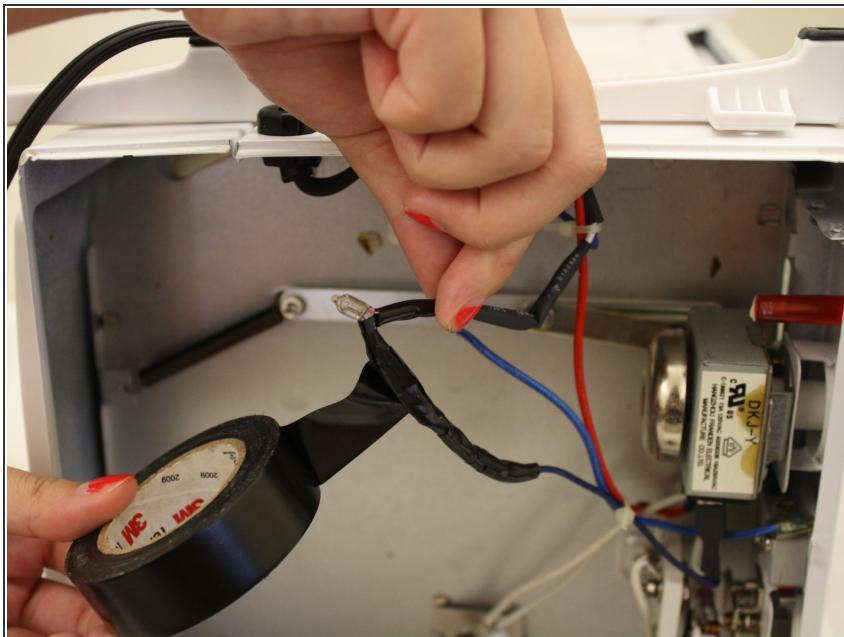

- Use electrical tape to reseal the sheathing.

## Step 9

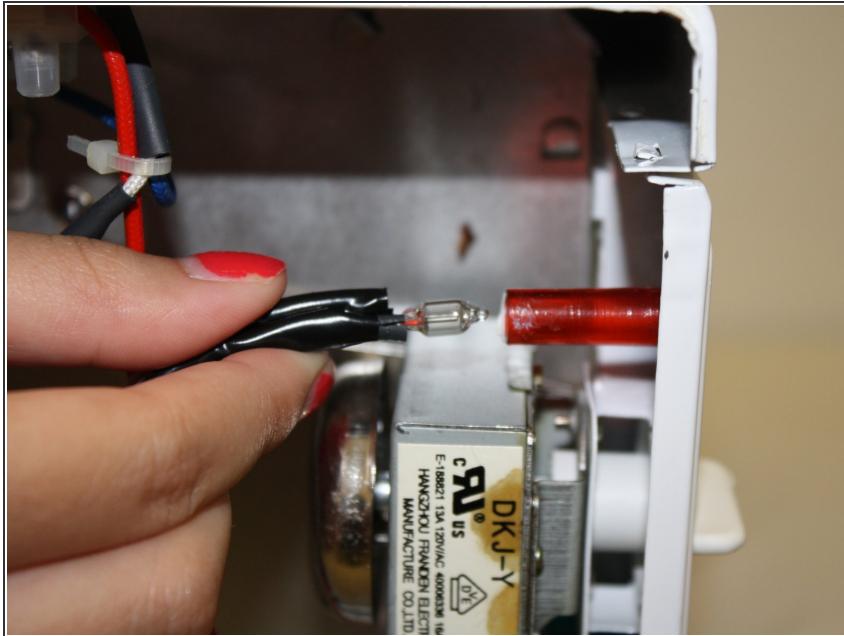


- Reinsert the indicator light back into the red tube.

## Step 10



- Turn toaster upside down so screws on bottom side are facing toward the ceiling and the door is facing towards you.

## Step 11

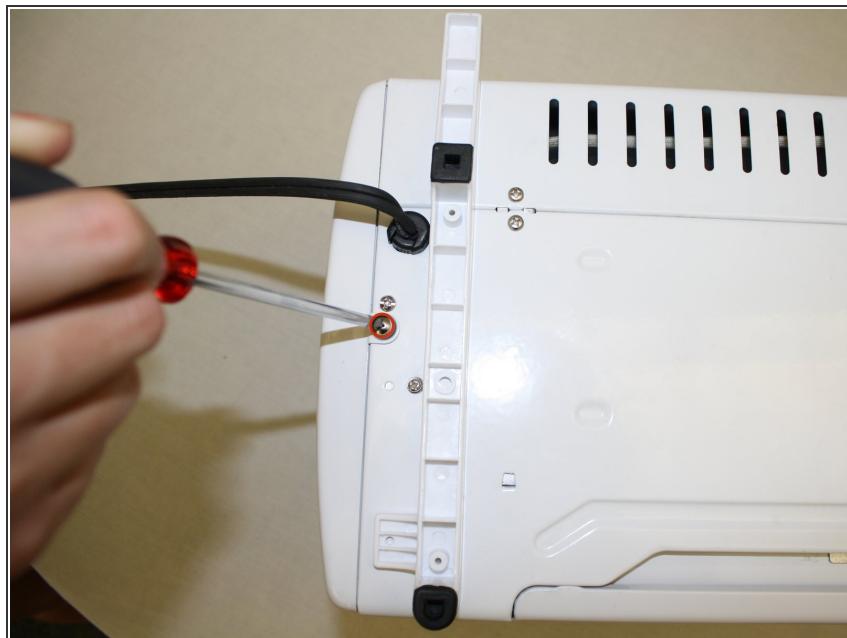

- On the left hand side, screw the middle screw back in.

To reassemble your device, follow these instructions in reverse order.