




# Farberware FSTO100 Oven Door Spring Replacement

The door is cracked, will not fully close, or hinges are busted. This guide is specific in fixing the spring that holds the door together.

Written By: Tony Wang

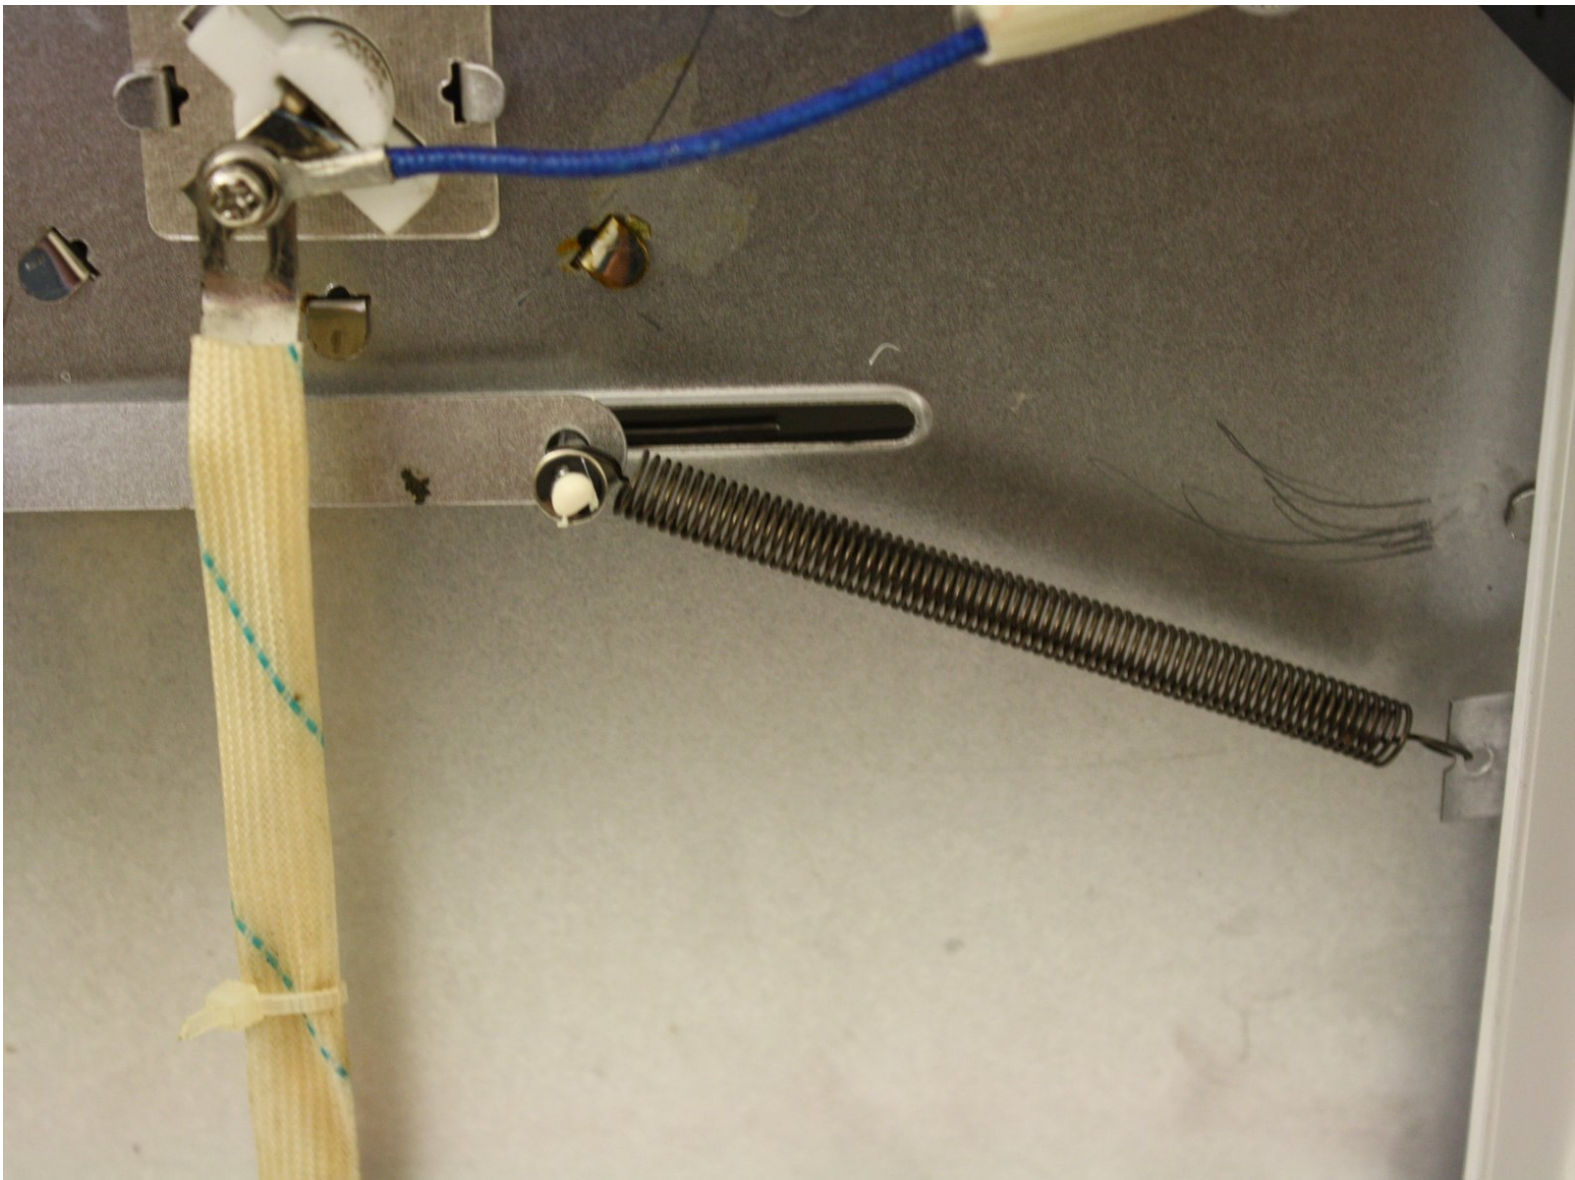

---

## INTRODUCTION

Use this guide to reattach and secure the door spring.

---



### TOOLS:

- [Large Needle Nose Pliers](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Oven Door Spring



- ★ Make sure the door is closed before you start repairing the spring.
- If the spring is detached reinsert it back into the bracket.

## Step 2



- Use pliers to bend the spring back into place if necessary.

To reassemble your device, follow these instructions in reverse order.