



Fast Fix HP ProLiant ML310e Gen8 v2 Ram Replacement

This guide will show users how to install RAM in the HP ProLiant ML310e Gen8 v2.

Written By: Michael Bondurant



INTRODUCTION

If you have a bad ram chip or simply want to replace the current ram chip with more ram (a lot of software requires more ram to run smoothly) for the HP ProLiant ML310e Gen8 v2. This is a guide to show you how it's done. It's a how to step by step for those who never done this before or unsure how it done. The type of ram that the system use is DDR3 ram (any other ram will not fit). You will need an anti-static wrist-let and a Phillip screwdriver (in case the tapping screw is too tight to unscrew by hand). Make sure the computer is unplugged from the power before attempting to replace the ram. As always, its best to backup the hard drives before doing any computer works.

TOOLS:

- [Anti-Static Wrist Strap \(1\)](#)

Step 1 — HP ProLiant ML310e Gen8 v2 Ram



- Before you begin, make sure the power is unplugged from the computer. Use key to open the front cover, take off the cover and lay it on the side.

Step 2



- Unscrew the self tapping screw in the back of the PC. (If the screw is on too tight, you can use the Phillips screwdriver). The screw will not come off, leave it like it is.

Step 3




- Pull the side cover off by putting fingers in the side cover holder and pull back. Take the cover and lay it on the side.

Step 4




- Lay the computer on the side with the uncovered side facing up.

Step 5

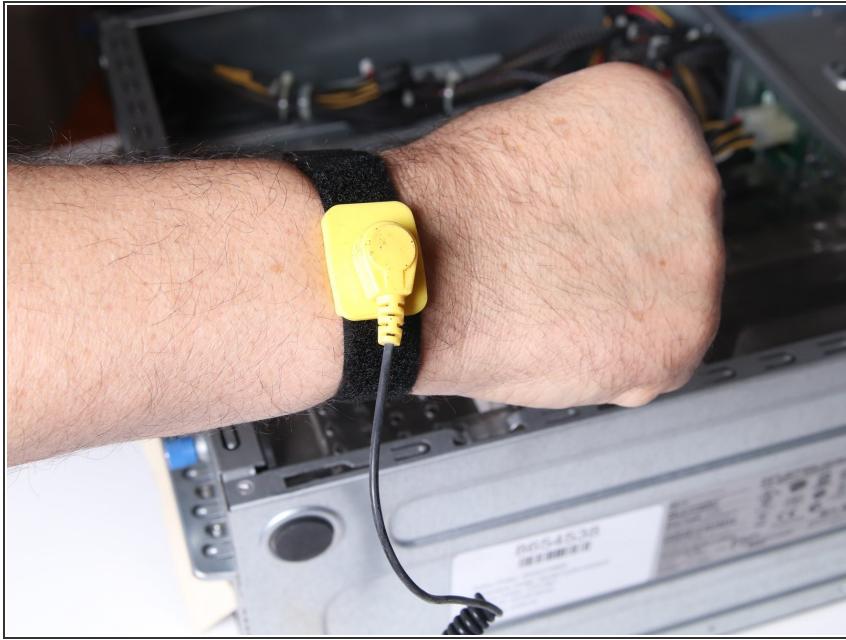


- Attach the anti-static wrist strap. Clip the other end of the anti-static wrist strap to any metal piece on the computer. This will keep the computer from being fried.

Step 6

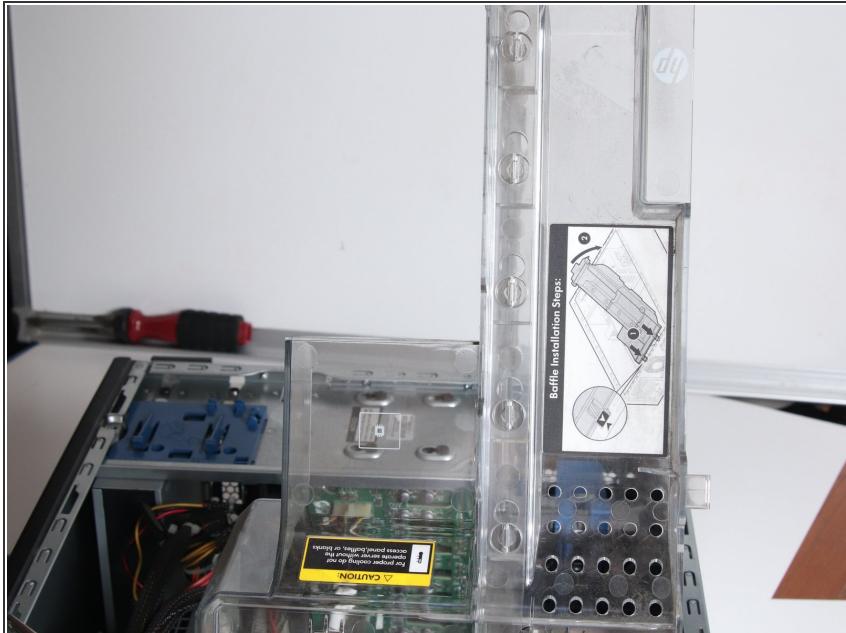

- Take the air cover off and lay it off on the side.

Step 7

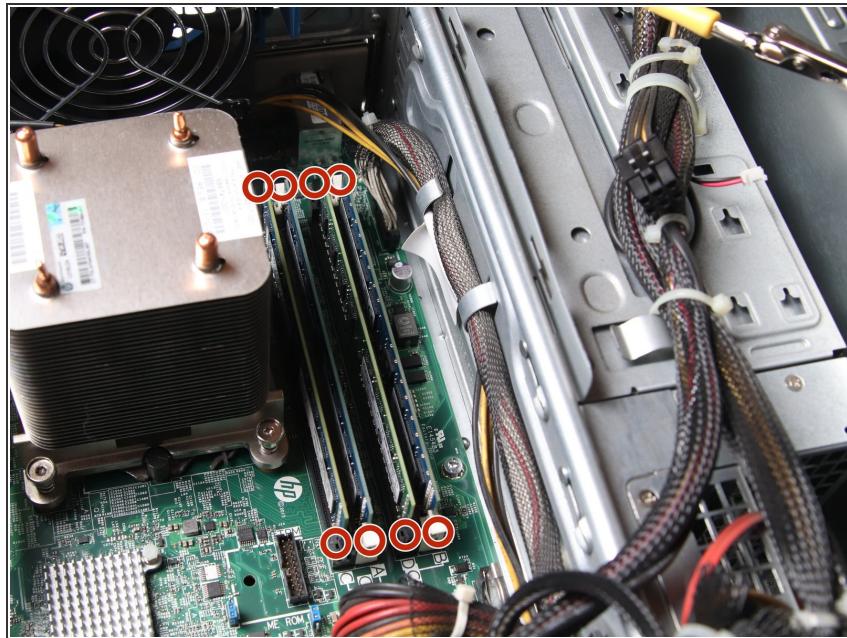

- Push the clips at each end of each slot to release the RAM sticks.

To reassemble your device, follow these instructions in reverse order.