



First steps of disassembling an Asus N56VM

This is a prerequisite for all guides.

Written By: Stanky



 **TOOLS:**

- Mako Driver Kit - 64 Precision Bits (1)

Step 1 — Remove battery



- Remove the battery and the AC power

Step 2 — Remove bottom cover



- Remove the M2x4 screw of the bottom cover
- Remove the bottom cover by sliding it downwards

To reassemble your device, follow these instructions in reverse order.