



Fisher and Paykel DEGX1 dryer no heat fix

this will show how to get in the dryer and fix on possible cause for not heat in the dryer.

Written By: Dan Dunham

Fisher and Paykel model DEGX1 No heat fix



INTRODUCTION

this will show how to get in the dryer and fix on possible cause for not heat in the dryer.

TOOLS:

- Phillips #2 Screwdriver (1)
- Slip Joint Pliers (1)

Step 1 — Fisher and Paykel DEGX1 dryer no heat fix

Fisher and Paykel model DEGX1 No heat fix



- take a look at this short video

To reassemble your device, follow these instructions in reverse order.