



# Fixing Epson Stylus Photo 1400 Paper Jam

How to repair paper jams for the Epson Stylus Photo 1400.

Written By: Xin Chen



## INTRODUCTION


This guide shows how to repair a paper jam. This process requires no necessary tools or knowledge of the device.

## Step 1 — Fixing Epson Stylus Photo 1400 Paper Jam



- ⓘ The paper indicator light blinks red if a paper jam occurs. It might have an unusual clicking noise.
  - Press paper button to eject paper.
  - If previous step does not work, turn off the printer and proceed to step 2. Else, proceed to step 4.

## Step 2

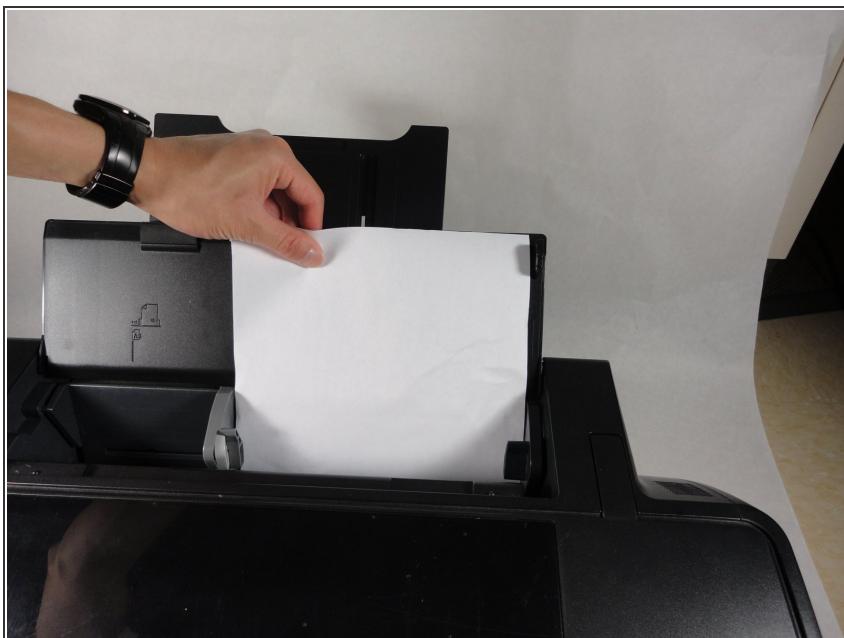

- Attempt to remove paper by gently and slowly pulling the paper out from the top.
- ⓘ Pull the paper as straight as possible.
- If this does not work, proceed to step 3. Else, proceed to step 4.

## Step 3



- Open cover of the printer.
- Gently pull out the paper through the hatch.
- *(i)* If ink cartridge is in the way, gently push it off to the side.
- Close cover.

## Step 4



- If you had success in step 1, paper indicator light should now return to the normal color green.
- If you had success in step 2 or 3, turn on printer and press paper button.

To reassemble your device, follow these instructions in reverse order.

