



Flexible vacuum hose detaches from wand ...too easily

Shark support says there is no fix for hose detaching from wand clip too easily ...there is an easy fix

Written By: Michael Williams



INTRODUCTION

We will be replacing the factory detent springs with stronger springs commonly used in faucets.

TOOLS:

- Phillips #2 Screwdriver (1)

PARTS:

- two faucet springs (1)

Step 1 — Detach flexible hose from wand



- Likely it will already be detached since the detent clip springs are so weak

Step 2 — Remove screw that holds detent clip holder



- #2 Phillips screw driver

Step 3 — Replace the two springs



- By compressing the springs you can remove the clip and spring. Replace these weak springs with stronger springs that are commonly carried at hardware stores for faucet repair

Step 4 — Reassemble in reverse order.



- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.