



# Ford Taurus Air Re-Circulation Door Motor Replacement

If your Taurus is making a loud clicking/grinding sound when using both the A/C and heat while using the air recirculation feature, the motor is bad.

Written By: Alec



This document was generated on 2019-11-17 12:52:34 PM (MST).

## INTRODUCTION

This guide will show you how to replace the Air Re-Circulation Door Motor in your 2008 Ford Taurus.

### TOOLS:

- 11mm Socket (1)
- 3/8" Drive Ratchet (1)

### PARTS:

- Motorcraft YH-1779 Motor Assy (1)

## Step 1 — Time to drop the glovebox (Not literally)



- Tired of the clicking/grinding when using the air re-circulation feature in your Taurus? Follow this guide, and there will be no more of it.
- Make sure to empty out your glovebox, so when you drop it down, all of your stuff doesn't fall out.
- Once your glovebox is empty, gently press in on both sides to release the latch, and the glovebox will fold down towards the floor.

## Step 2



- Looking ahead, you'll see the white motor with two 11mm mounting screws.
- First pull the wire connector from the harness by pressing the harness clip, and gently pull the wire out. Now it is disconnected, and you can let it dangle. (Don't worry it won't run off)
- Now you can use an 11mm socket attached to a ratchet to quickly unscrew the two screws. Once the screws are free, gently pull the motor out.
- Replace with Motorcraft YH-1779 Motor Assy.
- When installing the new motor, ensure the teeth on the spindle match up to the direction they are in on the connector. Don't worry about lining it up perfectly with the screw holes when installing it, as you can make the adjustment when it pops in.
- Lastly, tighten down the two 11mm screws, but be careful not to crack the plastic by tightening them too tightly. Now connect the electric wire into the harness, and you can gently push both sides of the glovebox back in, and lift it back into place. Good job, no more grinding!

To reassemble your device, follow these instructions in reverse order.