



# Fugoo Style XL Fabric Case Replacement

This guide will summarize how to remove Fugoo Style XL's fabric casing.

Written By: James Gifford



## INTRODUCTION

The Fugoo Style has a fabric case that can be removed for cleaning, replacement, or to begin accessing the interior of the speaker.

## Step 1 — Fabric Case



- Using your hand, unscrew the large screws underneath the speaker.

## Step 2



- Using your hand, gently lift the large plastic tab secured to the rubber holding (the holding is within the orange square). While lifting the tab, push the speaker out of the case.

**⚠** Ensure the tab is lifted only slightly above the rubber holding. Bending the plastic tab too far could result in damage to the case.

## Step 3



- Slide the speaker completely out of the fabric casing.

To reassemble your device, follow these instructions in reverse order.