



# FujiFilm FinePix XP10SE Front Cover Replacement

This guide will help you to remove and replace the front case/cover of the FujiFilm FinePix XP10SE Camera.

Written By: Bryan



This document was generated on 2019-09-25 03:07:49 PM (MST).


## INTRODUCTION

This guide deomonstrates how to remove and replace the front cover of the FujiFilm FinePix XP10SE Camera in order to protect the device.

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Front Cover

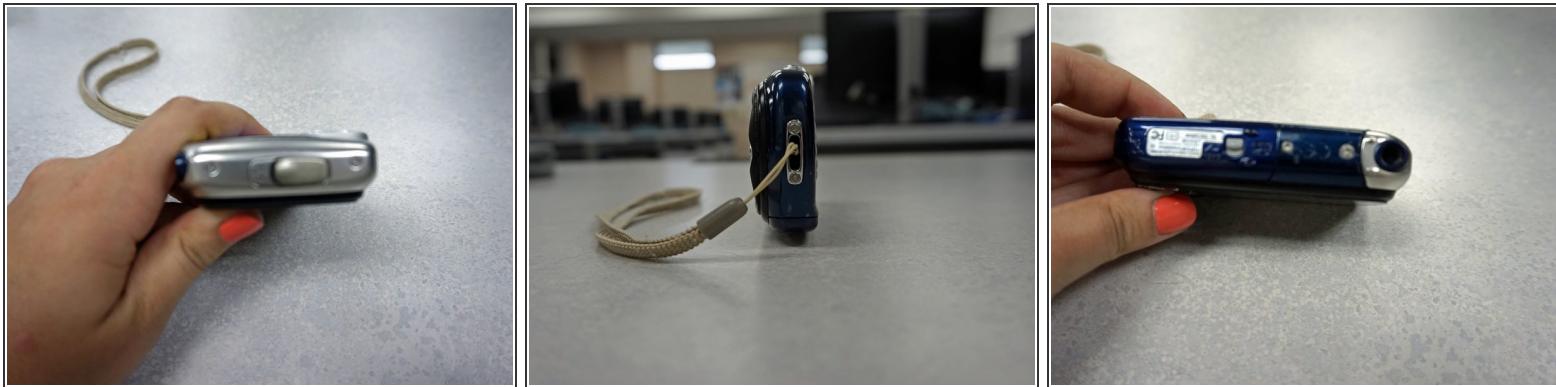

- Use a screwdriver to remove the four screws from the top and bottom of the camera. Remove the screws securing the lanyard as well.
- Use a T5 Torx bit to secure the exterior decorative cover of the device.

## Step 2



- Use a plastic opening tool to detach the case.

## Step 3



- Use the plastic opening tool to cautiously pry the casing off of the camera.

## Step 4



- Carefully slide the case to the left. Avoid cracking the case on the lens.

To reassemble your device, follow these instructions in reverse order.