



FujiFilm FinePix XP10SE Lens Replacement

These steps will show you how to replace a cracked or scratched lens.


Written By: Bryan



 **TOOLS:**

- [T5 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Front Cover

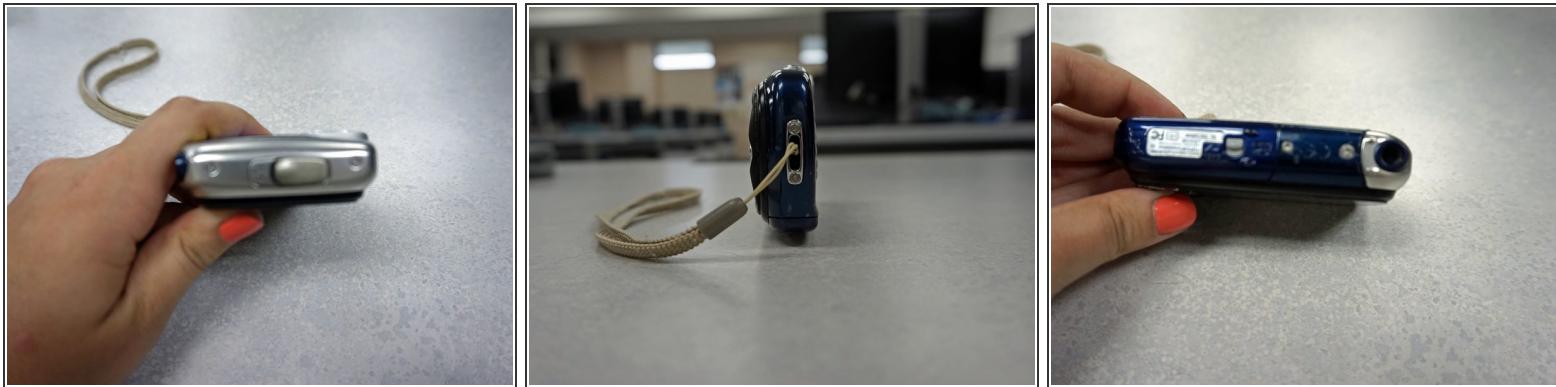



- Use a screwdriver to remove the four screws from the top and bottom of the camera. Remove the screws securing the lanyard as well.
- Use a T5 Torx bit to secure the exterior decorative cover of the device.

Step 2



- Use a plastic opening tool to detach the case.

Step 3

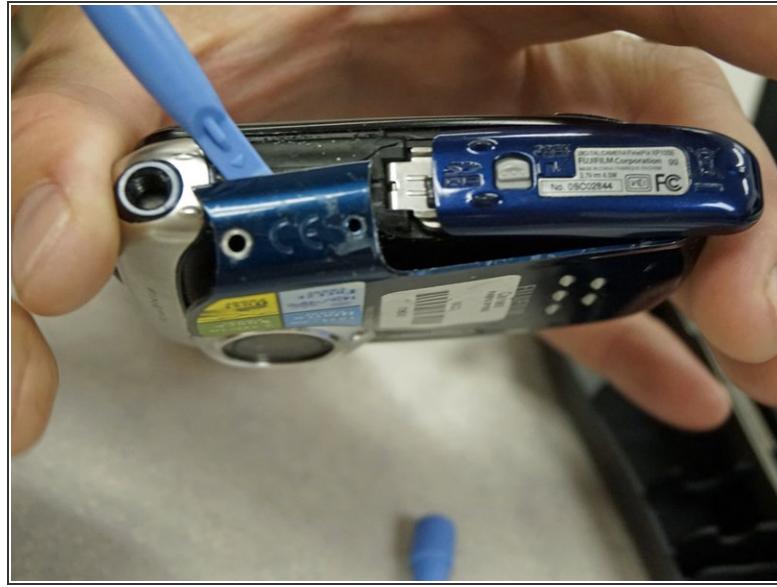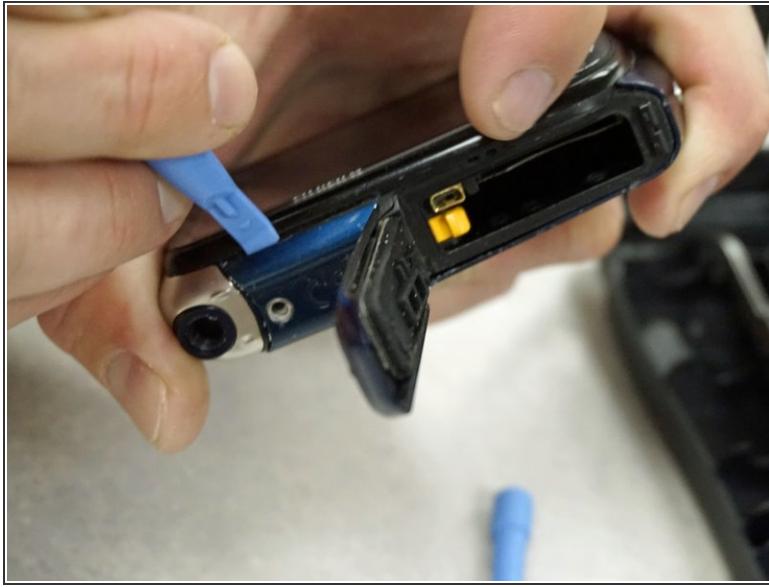

- Use the plastic opening tool to cautiously pry the casing off of the camera.

Step 4



- Carefully slide the case to the left. Avoid cracking the case on the lens.

Step 5 — Lens



- Remove the screws from the lens cover

Step 6



- Remove the screws from the side metal cover of outer case.

Step 7



- Gently remove the Lens from the housing.

To reassemble your device, follow these instructions in reverse order.