



Fujifilm Fine S1800 LCD Screen Replacement

LCD Screen Replacement for the Fujifilm Finepix S1800 Camera.

Written By: Ryan Rockford



INTRODUCTION

This guide explains how to replace the old broken LCD screen.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS Driver Set](#) (1)

PARTS:

- [Fujifilm Finepix Parts](#) (1)
- [Fujifilm FinePix S1800 LCD Screen](#) (1)

Step 1 — Back Cover Assembly



- Use a J000 screwdriver to unscrew all the four 4mm screws on the left-hand side of the camera.

Step 2





- Use a J000 screwdriver to unscrew the four 4mm screws on the right-hand side of the camera.

Step 3



- Use a J000 screwdriver to unscrew three 4mm screws on the bottom of the camera.


Step 4

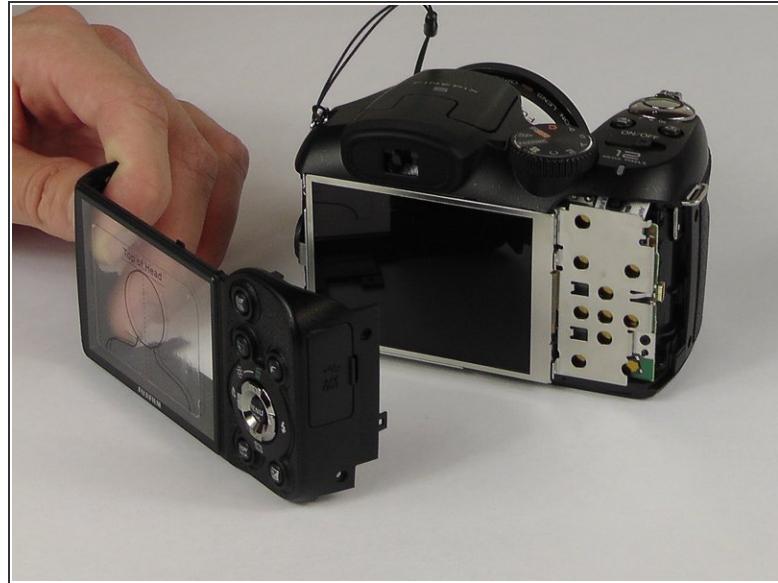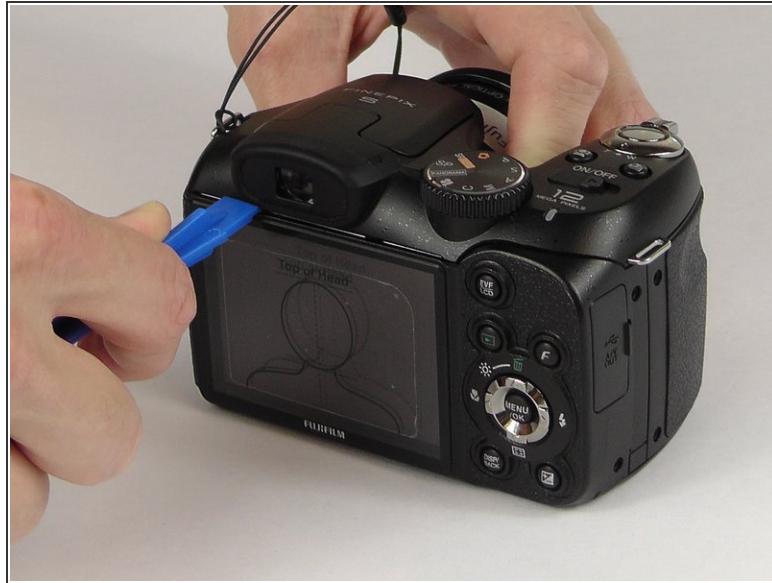

- After all the 4 millimeter screws are taken out, take plastic opening tool and the cover will pop out.

(i) You may have to work the back cover from different sides to get it to pop off.


Step 5 — LCD Screen

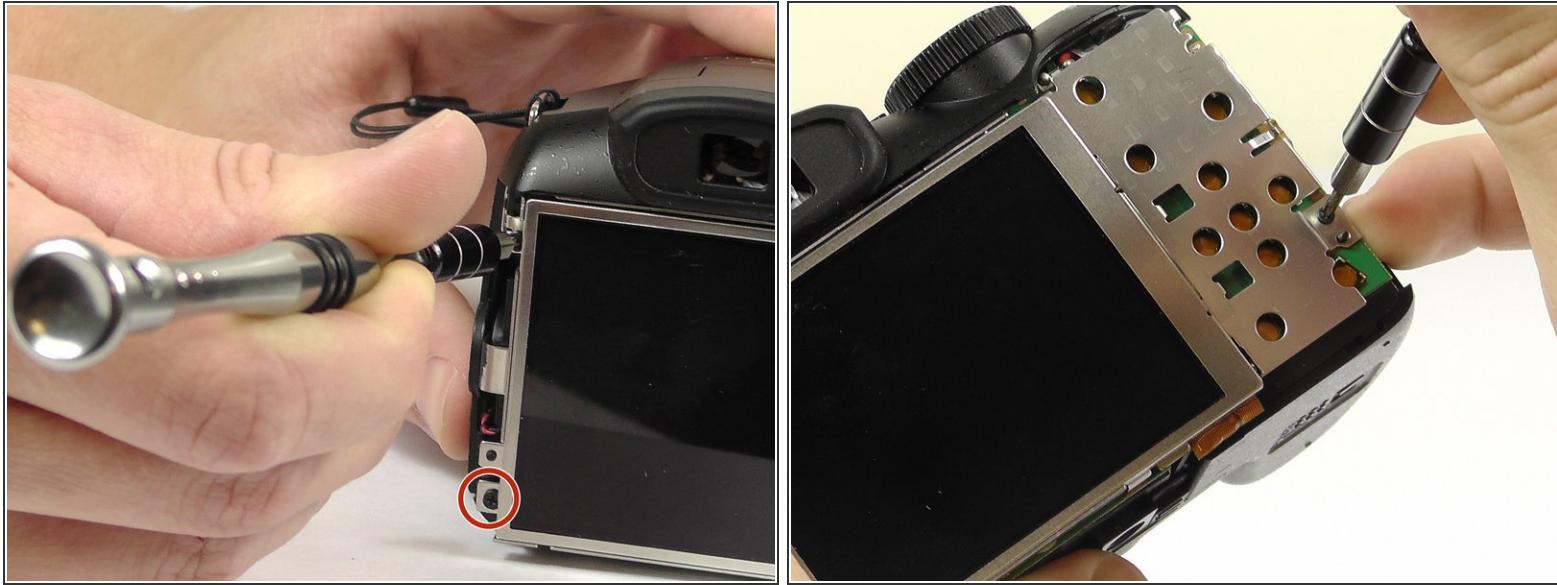

- Use a screwdriver to remove the three 2 mm screws from the back cover plate.
- Gently lift the back cover away from the device, but do not pull or yank free.

⚠ The LCD screen is still connected to the motherboard via a small ribbon cable.


Step 6

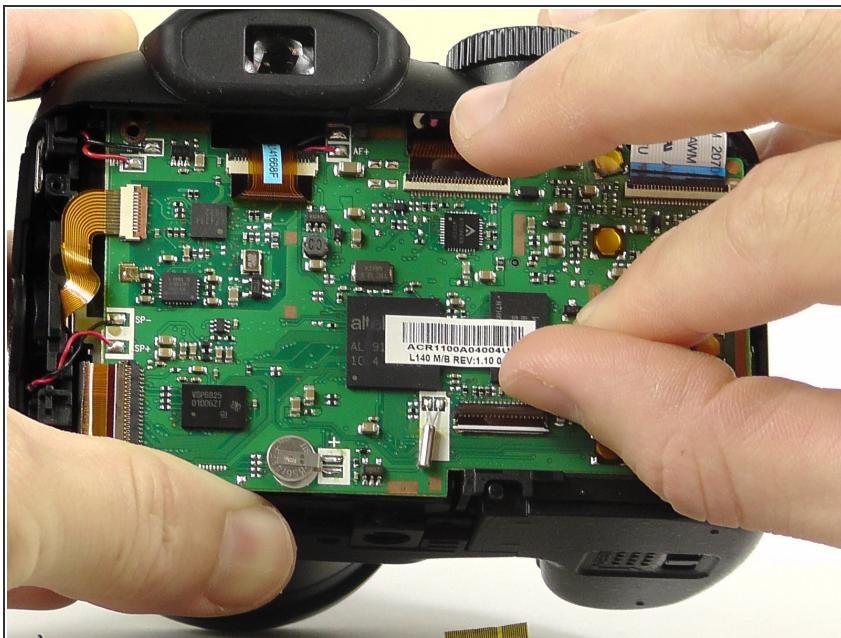

- Move the lever to disconnect the ribbon cable from the circuit board.

⚠ Avoid ripping the fragile micro ribbon cable.

Step 7

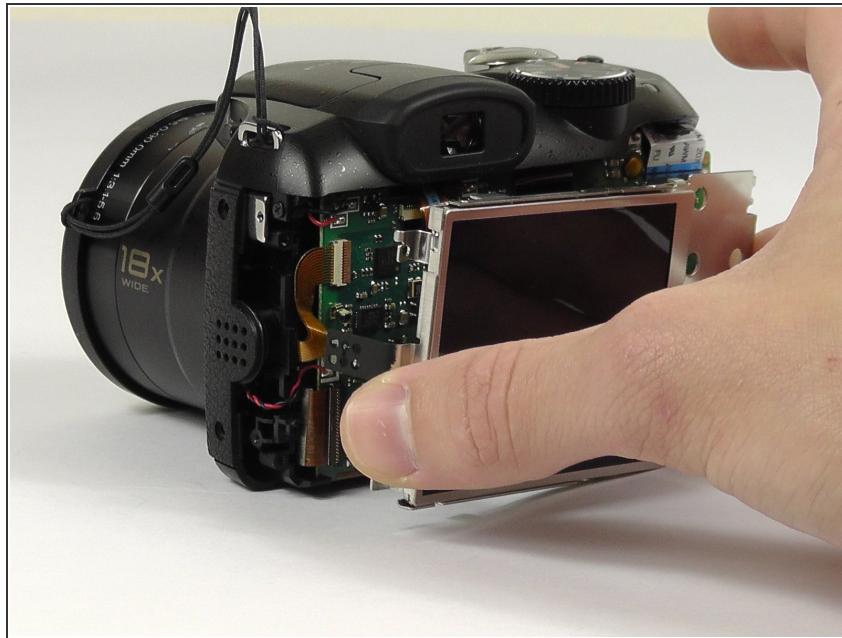

- Gently remove the LCD screen.
Avoid touching it directly.

To reassemble your device, follow these instructions in reverse order.