



Fujifilm FinePix A350 Battery Replacement

This guide offers instruction to remove and replace the batteries.

Written By: Jaxon Cramer



INTRODUCTION

This guide to battery replacement is also a safety prerequisite for subsequent guides. No tools are required for completion.

Step 1 — Batteries



- Locate the battery hatch on the bottom side of the camera, opposite the side with the power button.
- Using your thumb, slide the hatch away from the center of the camera.
- Flip the hatch toward yourself to open it. The batteries are spring-loaded; once the hatch is open, they will protrude far enough to be removed by hand.

To reassemble your device, follow these instructions in reverse order.