




Fujifilm FinePix A350 Memory Card Replacement

This guide offers instruction to remove and replace the memory card.

Written By: Jaxon Cramer

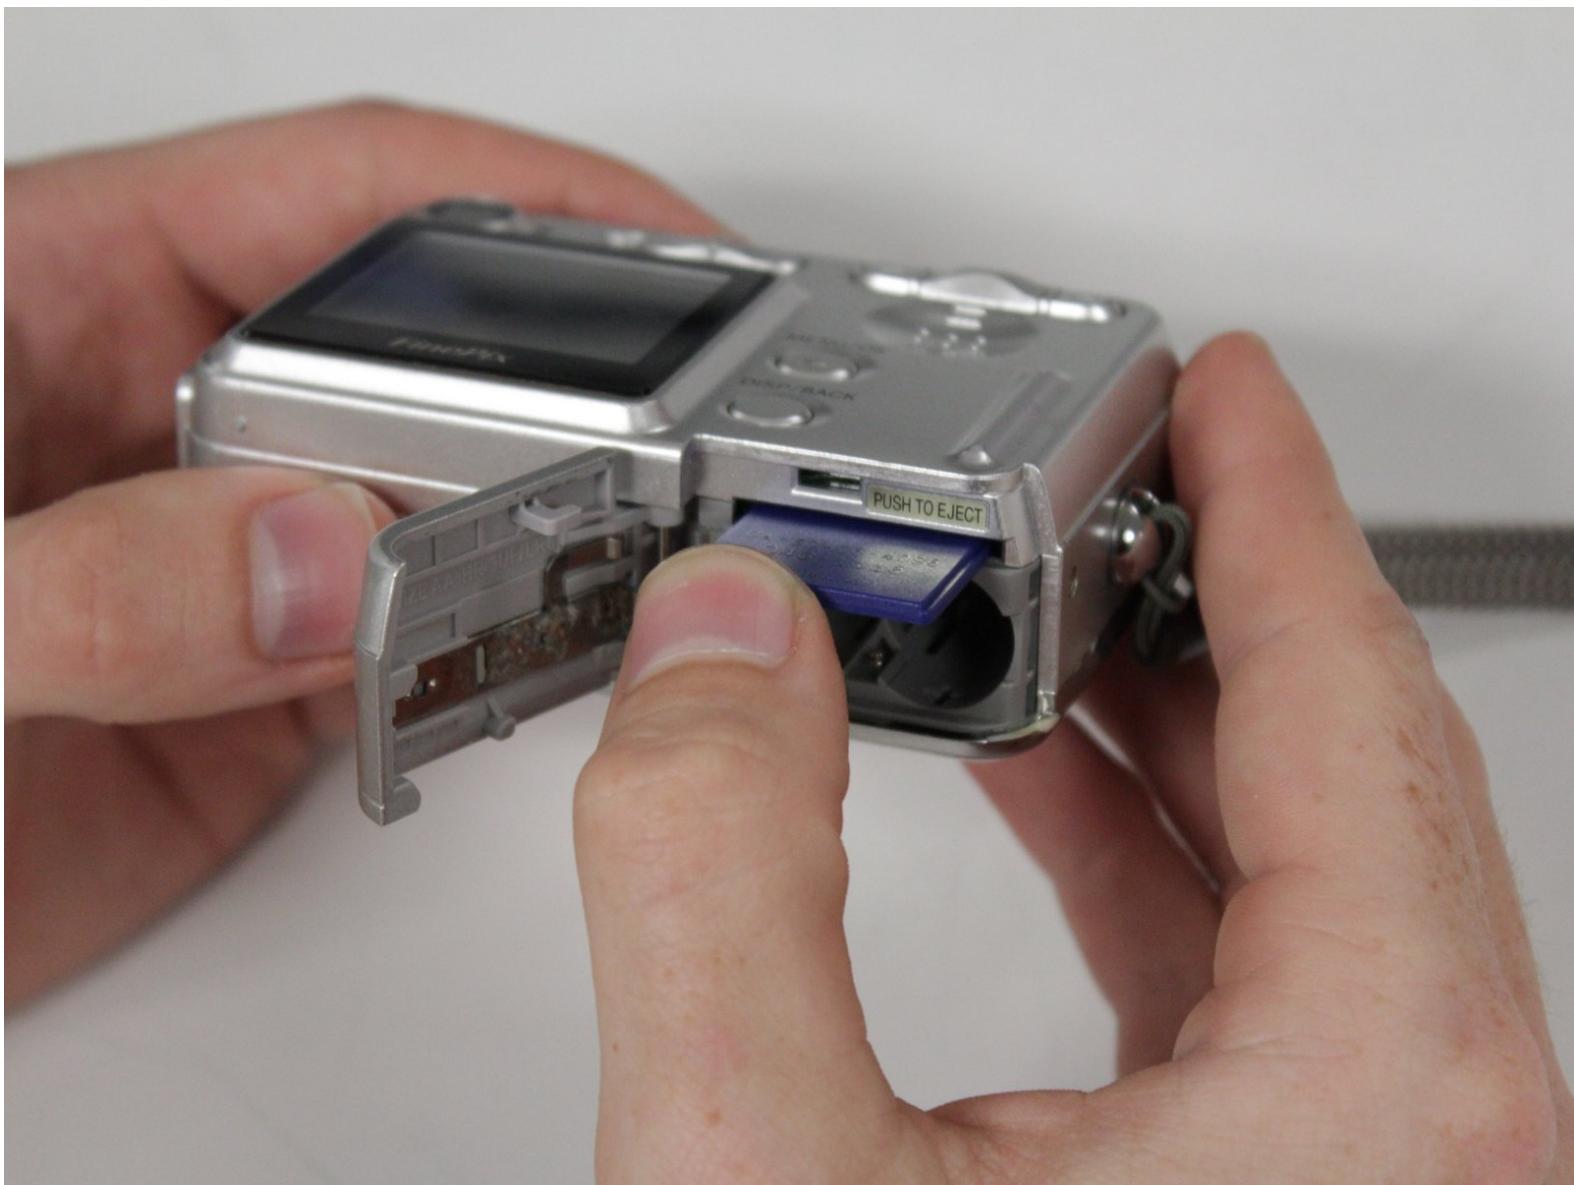

INTRODUCTION

If the memory card is full, no new photographs or video can be taken. No tools are required.

Step 1 — Batteries



- Locate the battery hatch on the bottom side of the camera, opposite the side with the power button.
- Using your thumb, slide the hatch away from the center of the camera.
- Flip the hatch toward yourself to open it. The batteries are spring-loaded; once the hatch is open, they will protrude far enough to be removed by hand.

Step 2 — Memory Card



- Locate the memory card in the long, thin slot above the battery compartment.
- Using your thumb, push the memory card farther into the camera.
- The memory card is spring-loaded and will pop out of the camera far enough to be removed by hand.

To reassemble your device, follow these instructions in reverse order.