



Fujifilm FinePix HS30EXR Frame Replacement

How to replace a Fujifilm FinePix HS30EXR frame.

Written By: Andrew Scouten



INTRODUCTION

This guide serves as a tear-down of the frame and is meant to be used with the intention of removing it. This action is needed to access the inside components.

Warning: The frame may be damaged in this process, as well as the ribbon cable that connects the motherboard with the LCD Screen. Be very careful with the removal of the frame to avoid any damage.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

Step 1 — Frame



- Flip the camera so that it is now upside down.
- With a screwdriver, unscrew all highlighted screws.

Step 2



- Flip the camera so that it is now on the right side.
- With a screwdriver, unscrew all highlighted screws.

Step 3



- Flip the camera so that it is now on the left side.
- Move or remove the flap hiding the camera ports.
- With a screwdriver, unscrew all highlighted screws.

Step 4



- Flip the camera so that it is now on the top side.
- With a spudger, pry off the highlighted metal piece of the camera.

Step 5



- With a screwdriver, unscrew all highlighted screws.

Step 6



- Pull the LCD Screen up and out of the way.
- With a screwdriver, unscrew all highlighted screws.

Step 7



- With a spudger, pry off the frame.

(i) If the frame does not easily dislodge after a few attempts, ensure that all screws are taken out.

To reassemble your device, follow these instructions in reverse order.