


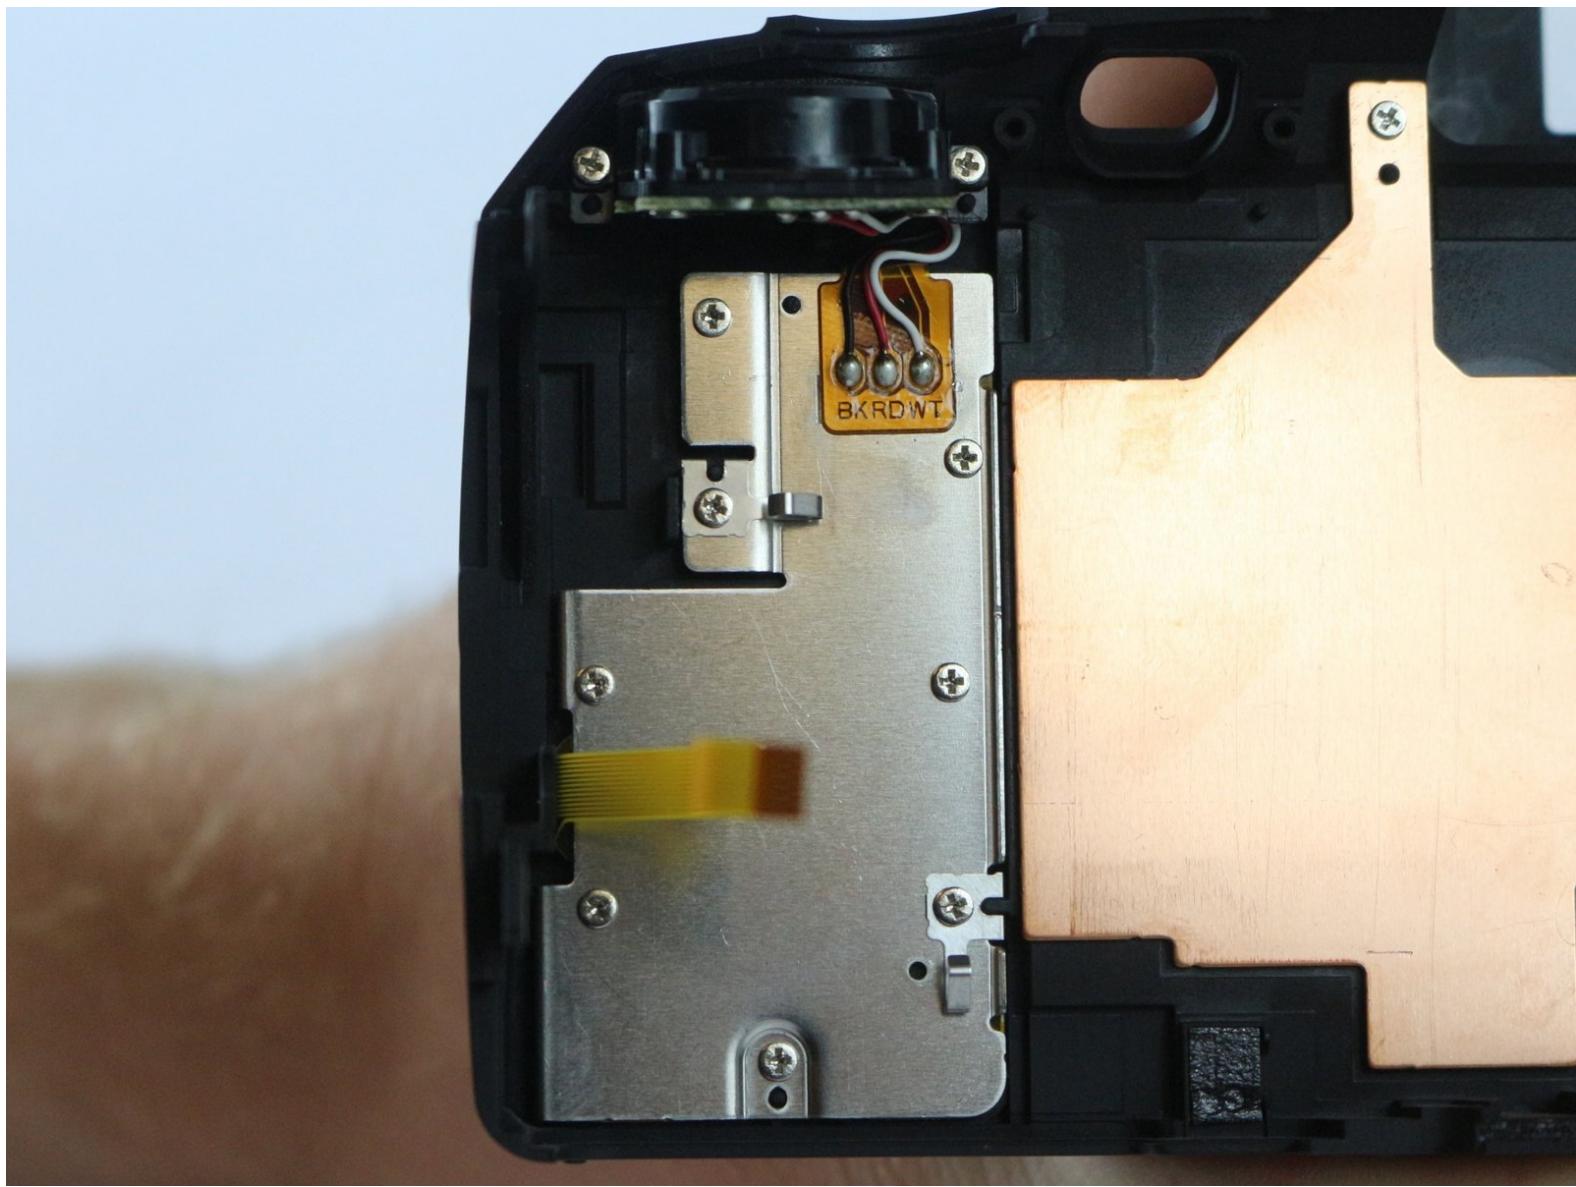

# Fujifilm FinePix S1 Camera Interface Buttons Replacement

Replace the primary camera interface buttons to control your camera again.

Written By: Brandon Benavente




## INTRODUCTION

Removal of camera interface buttons includes removal of the back camera body and removal of the EVF/LCD button.

### TOOLS:



- Essential Electronics Toolkit (1)

## Step 1 — Camera Interface Buttons

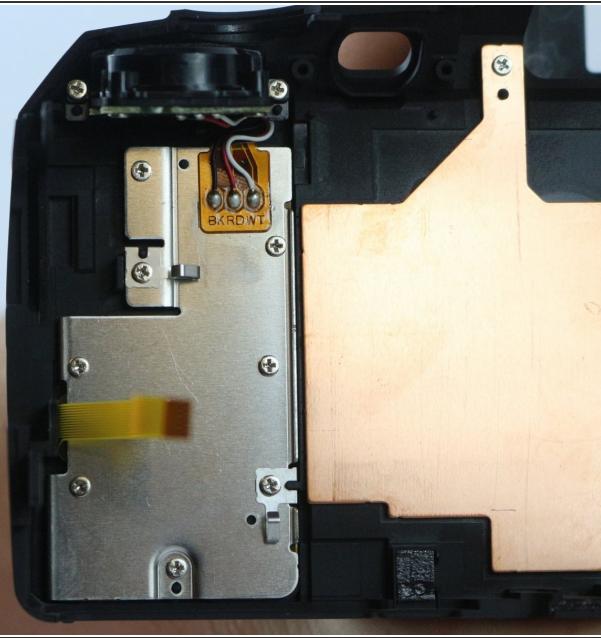

- Remove all 10 screws from the metal fitting inside the back of the camera.

## Step 2

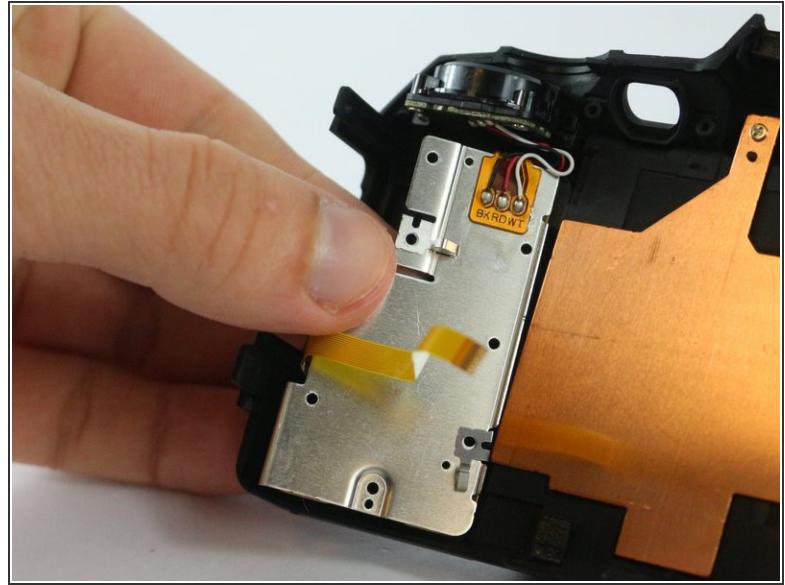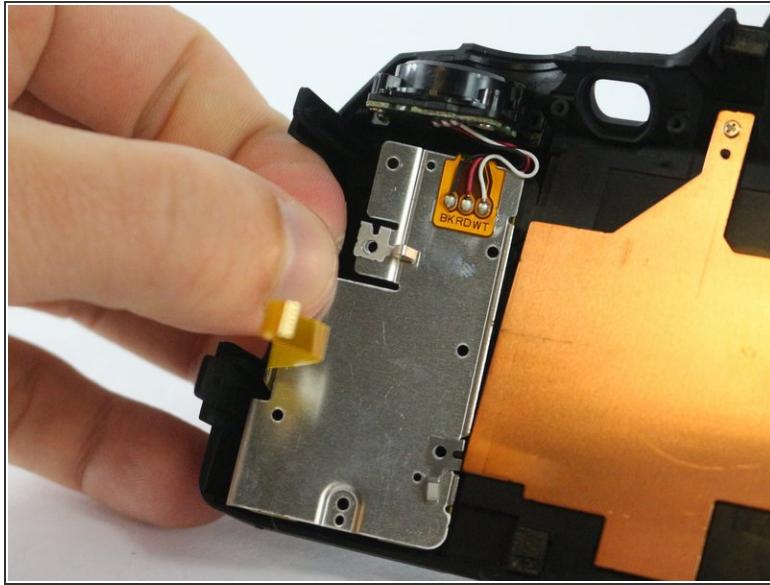

- Lift up on the metal fitting and pull it out of the camera.

To reassemble your device, follow these instructions in reverse order.