



# Fujifilm FinePix S4200 Battery Replacement

The following guide will demonstrate how to replace drained batteries from your powerless camera.

Written By: Jackie Acevedo



## INTRODUCTION

If your camera will not start, replacing the batteries might be a good solution.

## Step 1 — Battery



*(i)* Assure that your camera is off.

- Begin with the camera upside down so that the battery compartment is showing.

## Step 2



- Slide the latch down towards the lens.
- Push the battery cover out to the right, toward the HDMI and USB ports.

## Step 3



- Lift the battery cover up so that you can view all four batteries.
- Remove the batteries from the compartment.

To reassemble your device, follow these instructions in reverse order.