



Fujifilm FinePix S4800 Battery Replacement

This guide will help you to replace the batteries in the Fujifilm FinePix S4800.

Written By: Stephen Calabrese



INTRODUCTION

When a camera's batteries loose their charge, they either need to be replaced or recharged. Also, whenever you want to service the camera, it's a good practice to remove the batteries before going any further with your repairs.

Step 1 — Battery



i Make sure that the camera is powered off before continuing.

- Rotate the camera so that the label on the base of the camera is facing up.
- On the battery compartment door, there is a slider that says "open". Slide it down and push the door to the right to release the door.

Step 2



- Remove all four batteries and set them aside.

★ When replacing the batteries, be sure to note the markings on the face of the battery compartment. These markings let you know which side of the battery ("+" or "-") needs to be facing up in each slot.

To reassemble your device, follow these instructions in reverse order.