



# Fujifilm FinePix S8630 Battery Door Replacement

How to replace the battery door of your Camera.

Written By: Colton Lancsarics



## INTRODUCTION

We will give a step by step instruction on how to replace the battery door of your camera.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS Driver Set](#) (1)

## Step 1 — Battery Door



- Remove the M3 x 4mm screws from the bottom of your device as indicated by the picture. using the Philips Head J0 Screw Driver Bit .

## Step 2



- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the left side of the device as indicated by the pictures.

## Step 3




- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the right side of the device as indicated by the pictures.

## Step 4



- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the camera flash lid as indicated by the picture.
- Remove the plastic cover from the flash lid by gentle pulling them apart or using the plastic opening tool.

## Step 5

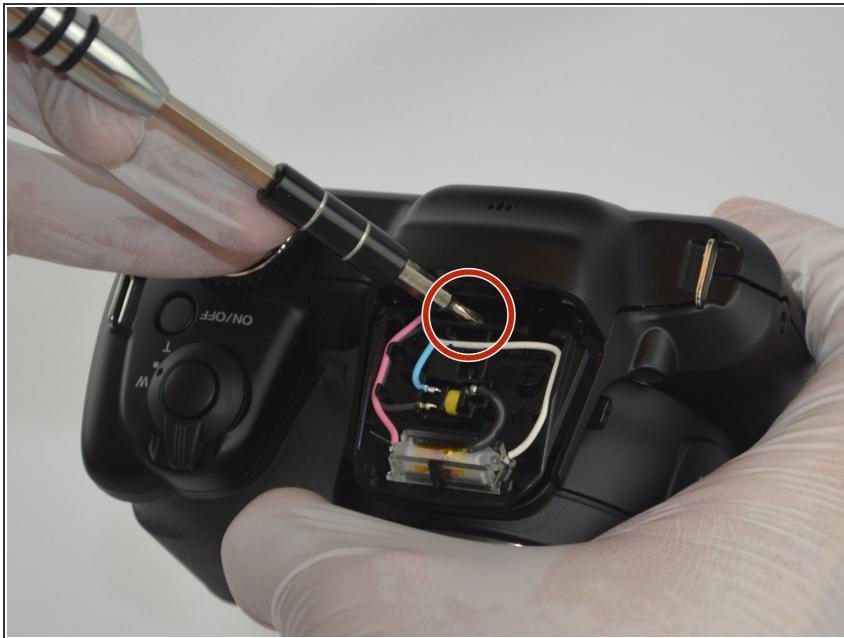

- Fold the lid down in order to access and remove the final M3 x 4mm screw using your Philips Head Screwdriver.

## Step 6



- Use the plastic opening tool to pry the back and front casings of the camera apart.
- Once pried apart use your hands to pull off the back plate of the camera.
- You will need to apply a little bit of force to remove the back plate.

## Step 7



- Once the back plate is removed twist the battery cover clockwise and it should easily dislodge.

To reassemble your device, follow these instructions in reverse order.