



Fujifilm FinePix S8630 Flash Lid Spring Replacement

This will replace the springs in the Flash Lid so that the lid opens up properly.

Written By: Colton Lancsarics



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [JIS Driver Set \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Battery Door



- Remove the M3 x 4mm screws from the bottom of your device as indicated by the picture. using the Philips Head J0 Screw Driver Bit .

Step 2



- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the left side of the device as indicated by the pictures.

Step 3




- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the right side of the device as indicated by the pictures.

Step 4



- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the camera flash lid as indicated by the picture.
- Remove the plastic cover from the flash lid by gentle pulling them apart or using the plastic opening tool.

Step 5

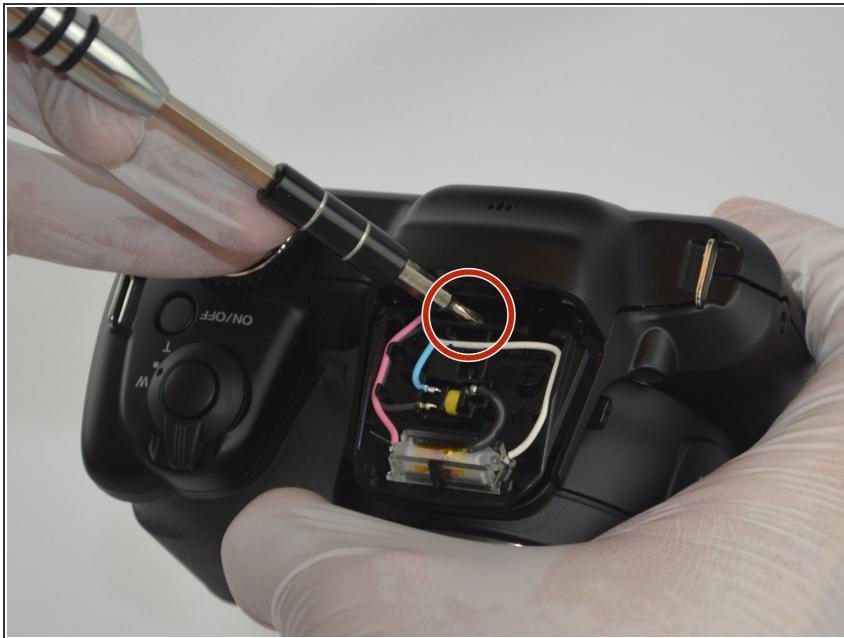

- Fold the lid down in order to access and remove the final M3 x 4mm screw using your Philips Head Screwdriver.

Step 6



- Use the plastic opening tool to pry the back and front casings of the camera apart.
- Once pried apart use your hands to pull off the back plate of the camera.
- You will need to apply a little bit of force to remove the back plate.

Step 7



- Once the back plate is removed twist the battery cover clockwise and it should easily dislodge.

Step 8 — Flash Lid Spring



- Firmly grasp the flash bulb lid and remove the lid from the camera.

Step 9



- Locate the spring and grasp with the tweezers.
- Pinch and compress the spring to remove it from the camera housing.
- Slide the lever that was holding the spring out of the camera housing.

To reassemble your device, follow these instructions in reverse order.