




Fujifilm FinePix XP70 Back Panel Replacement

Prerequisite only

Written By: Olivia A

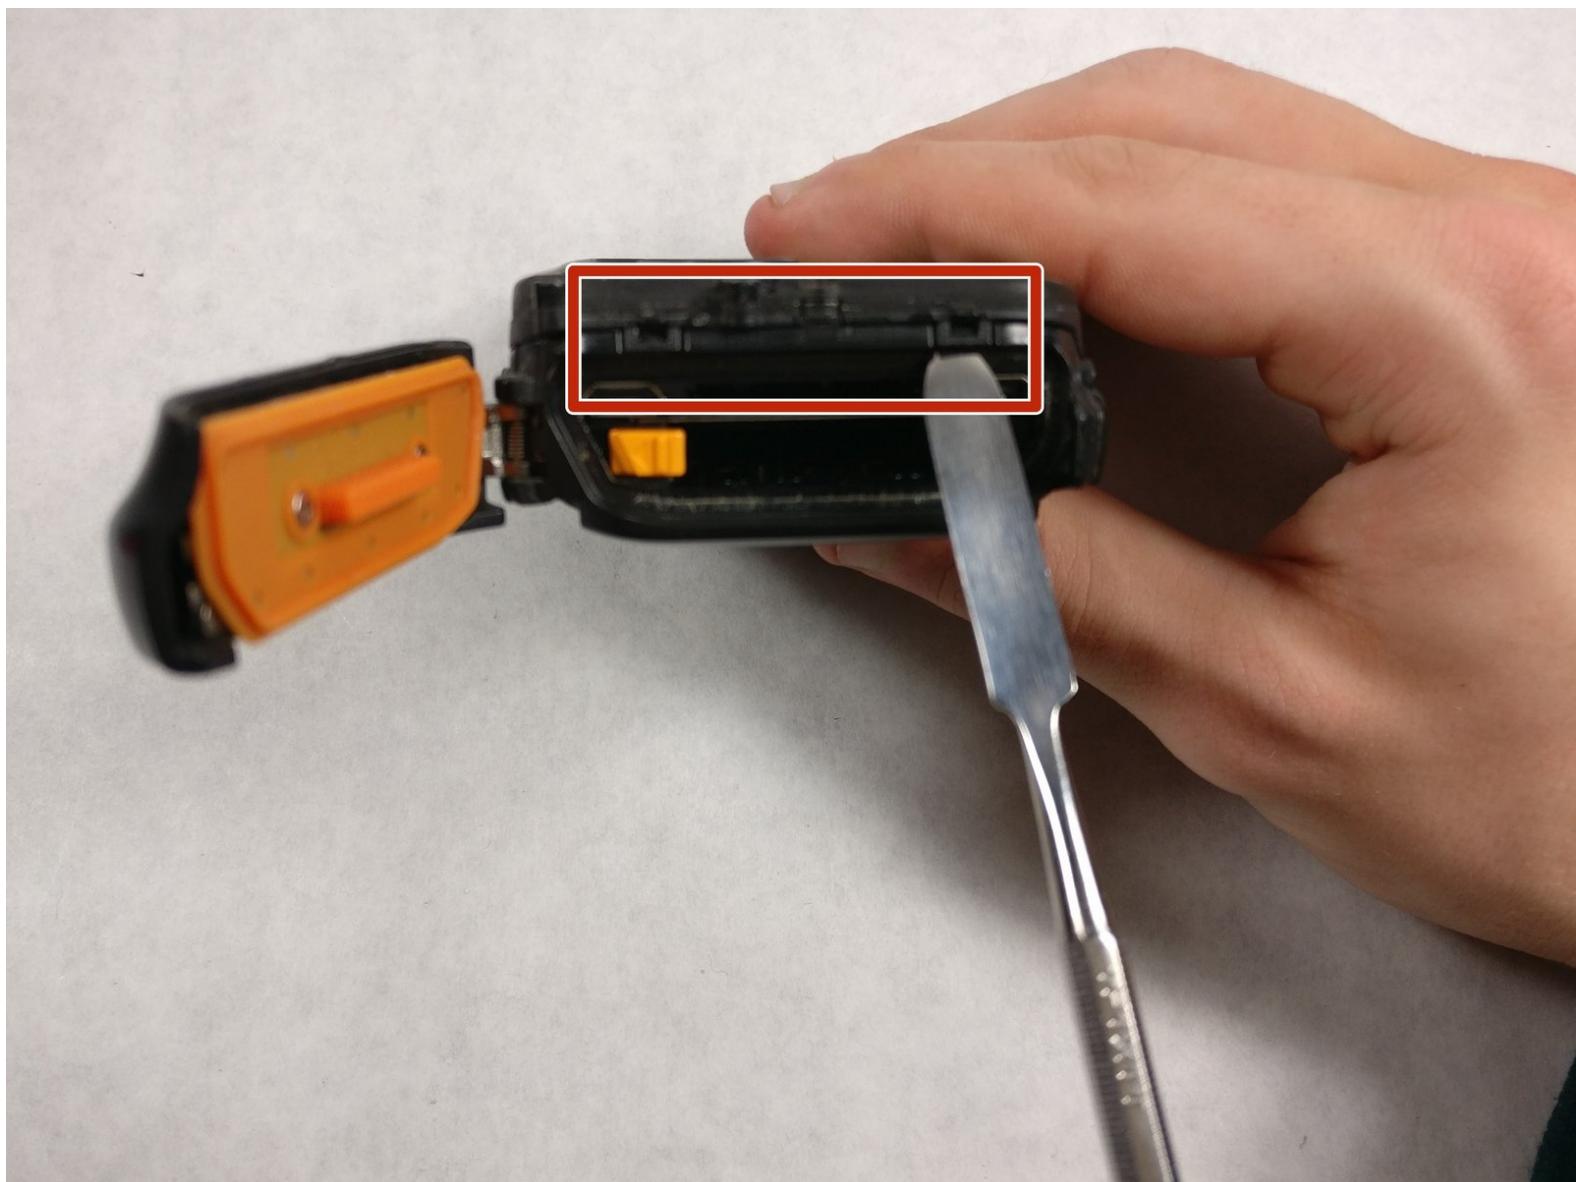

INTRODUCTION

Prerequisite only

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [1.5mm Hex Screwdriver](#) (1)

Step 1 — Battery



- Power off the camera.

 Leaving the camera on while removing presents the risk of electrical shock or permanent data loss.

Step 2




- Push down on the center button and turn the dial on the side counterclockwise to open the battery compartment.

Step 3



- Pull the orange tab towards the hinge to release the battery.

Step 4 — Button

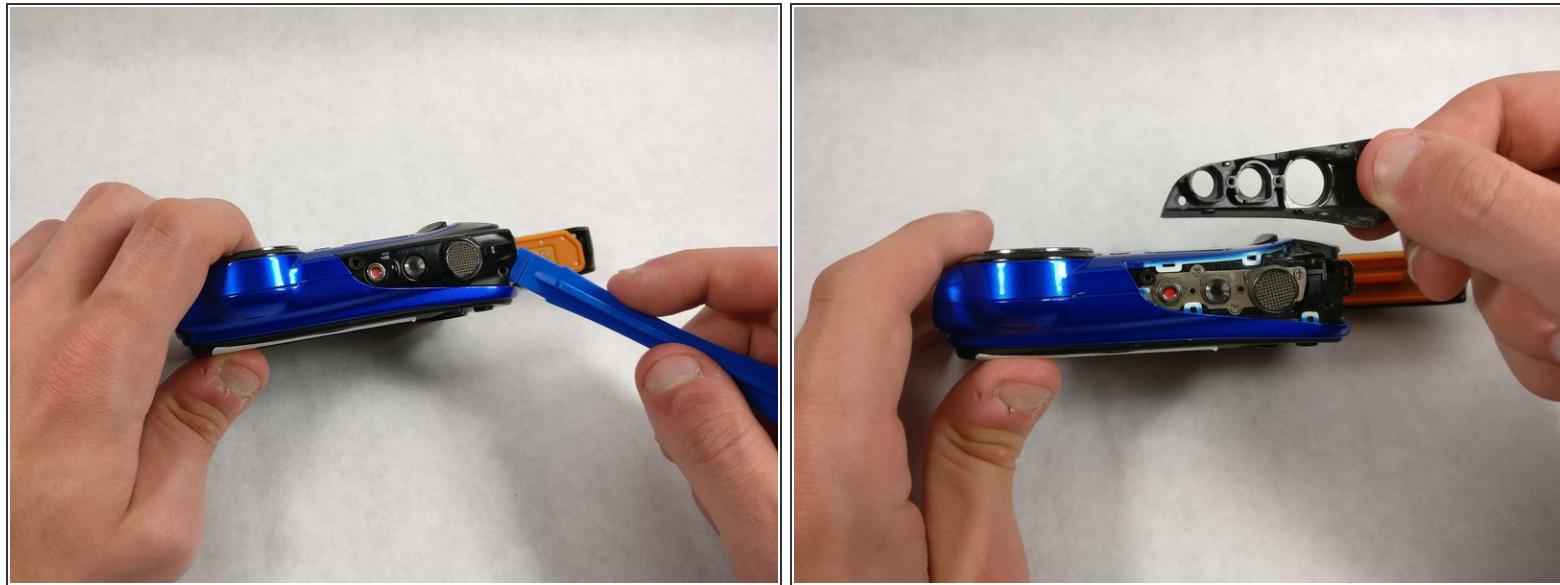

- Pry the black button plate off using a plastic opening tool.

i Buttons can fall out easily.

i It's easiest to start from the side exposed by an open battery compartment.

★ When putting this plate back on, orientate the buttons as shown to properly fit back into the plate.

Step 5



- Pull the three buttons out.

Step 6 — Front and Back Panel



- Remove one Phillips screw with a Phillips head 0 screwdriver
- Remove one hex head screw with a hex 1.3 screwdriver bit.

Step 7



- Unscrew two 4.0mm long hex head screws with a hex 1.3 screwdriver bit.

Step 8




- Unscrew five 4.0mm screws with a Phillips head 0 screwdriver

Step 9



- Pry the black bottom plate off using a plastic opening tool.
- *i* It is easier to start on the side of the open battery compartment.

Step 10

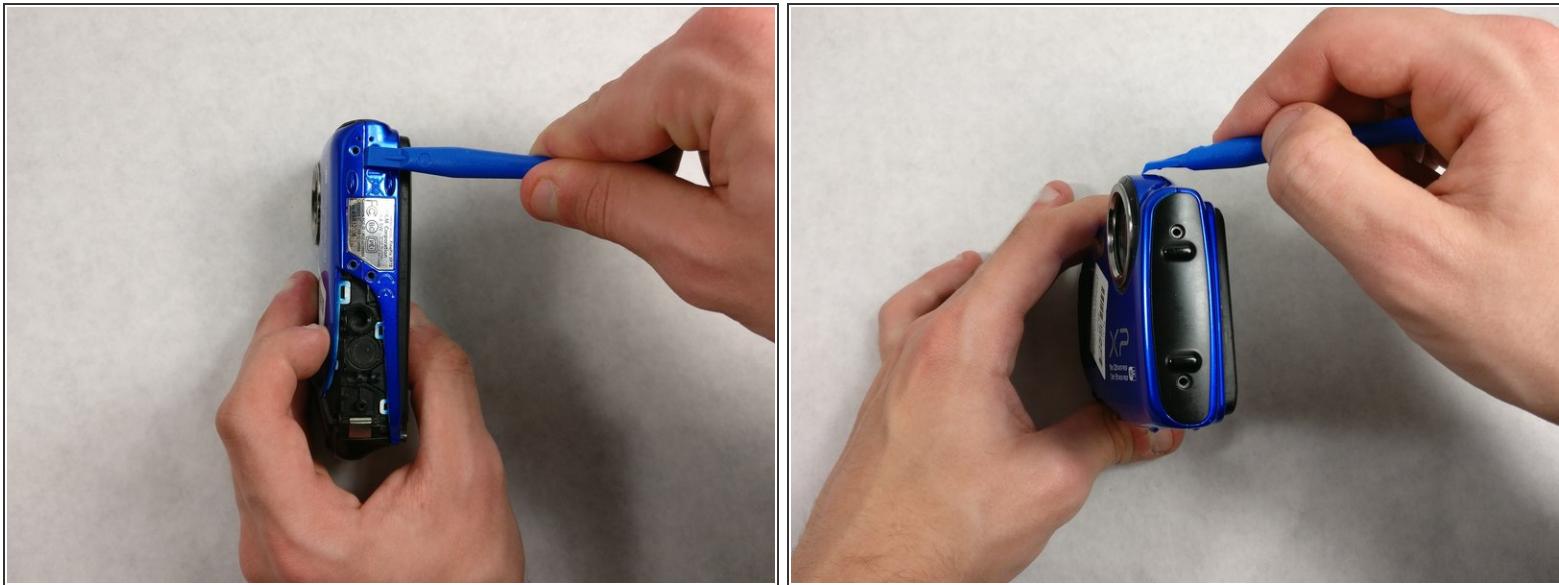

- Pry the front plate off using a plastic opening tool.
- *i* It's recommended to start at the ridge on the top or bottom side.

Step 11




- Lift off the front plate.

Step 12




- Pry the back plate off with a plastic opening tool

Step 13 — Back Panel

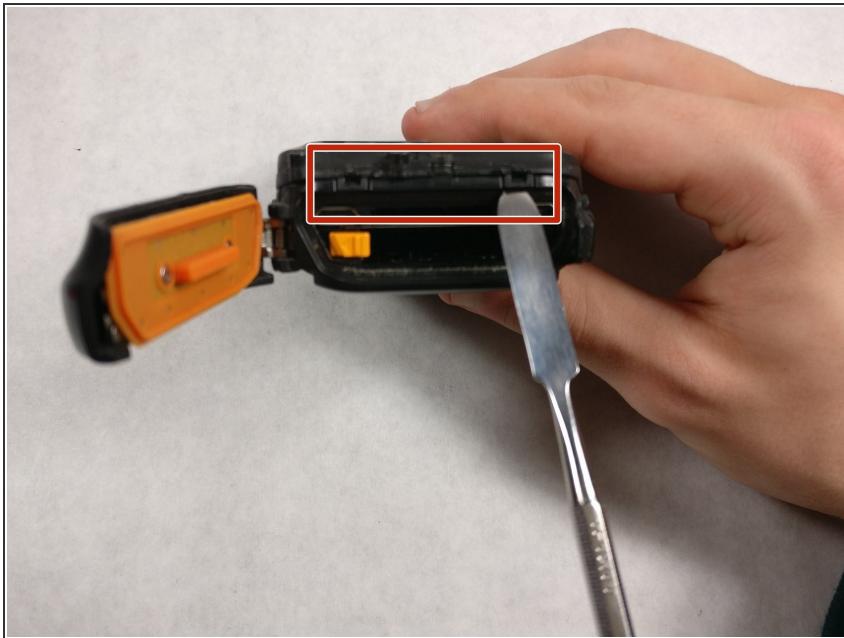


- Pry the two latches off using a spudger.
- *i* It takes some force to pry the latches off, so be careful to not break them.

Step 14

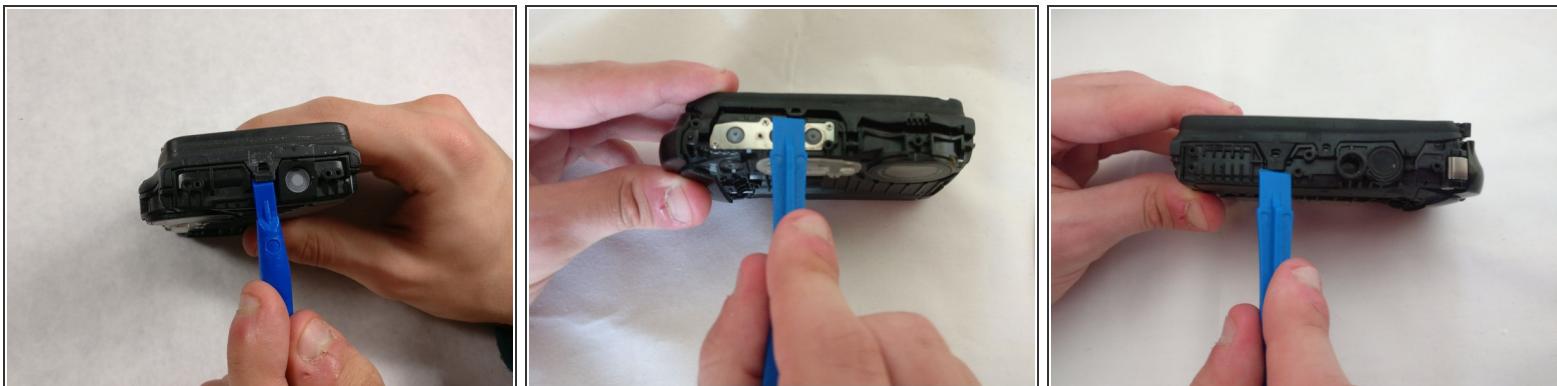

- Pry the remaining latches with a plastic opening tool.
- *i* It's best to start on the opposite side. Then pry off the top and end at the bottom.
- *i* It may take some force to remove this, but be careful to not break the latches off.



Step 15

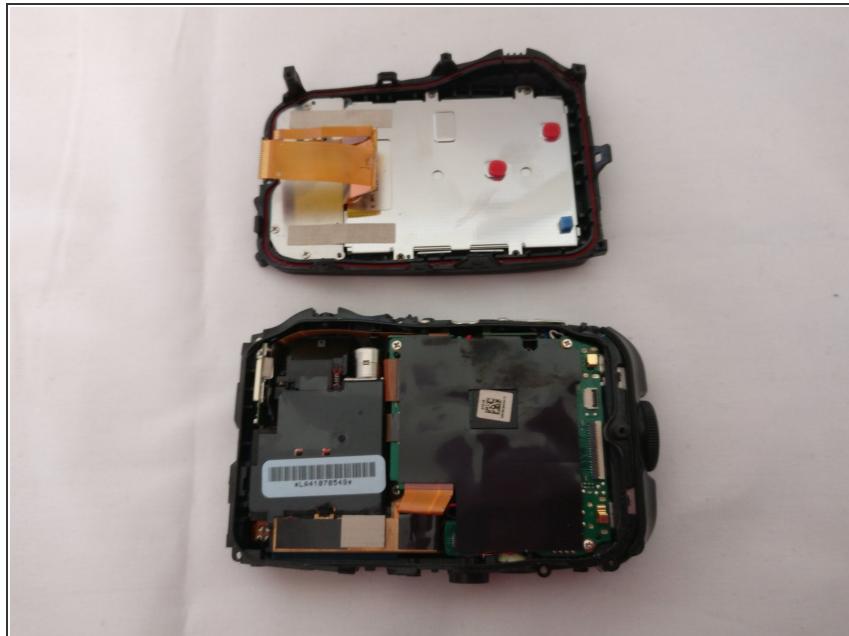

- Pull the two halves apart.

- ➡ Reattach the LCD ribbon cable into the slot before closing the halves when reassembling.

Step 16

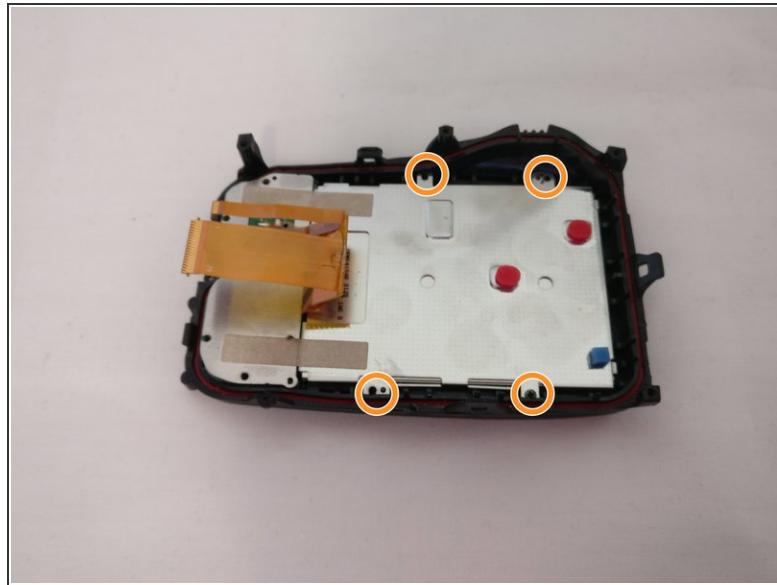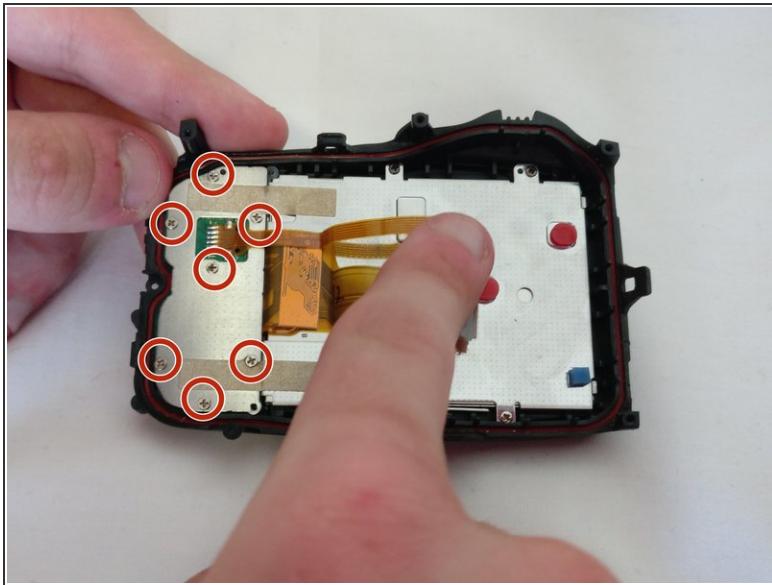

- Unscrew seven 4.0 mm screws with a Phillips 00 screwdriver.
- Unscrew four 3.0 mm screws with a Phillips 00 screwdriver..

To reassemble your device, follow these instructions in reverse order.