


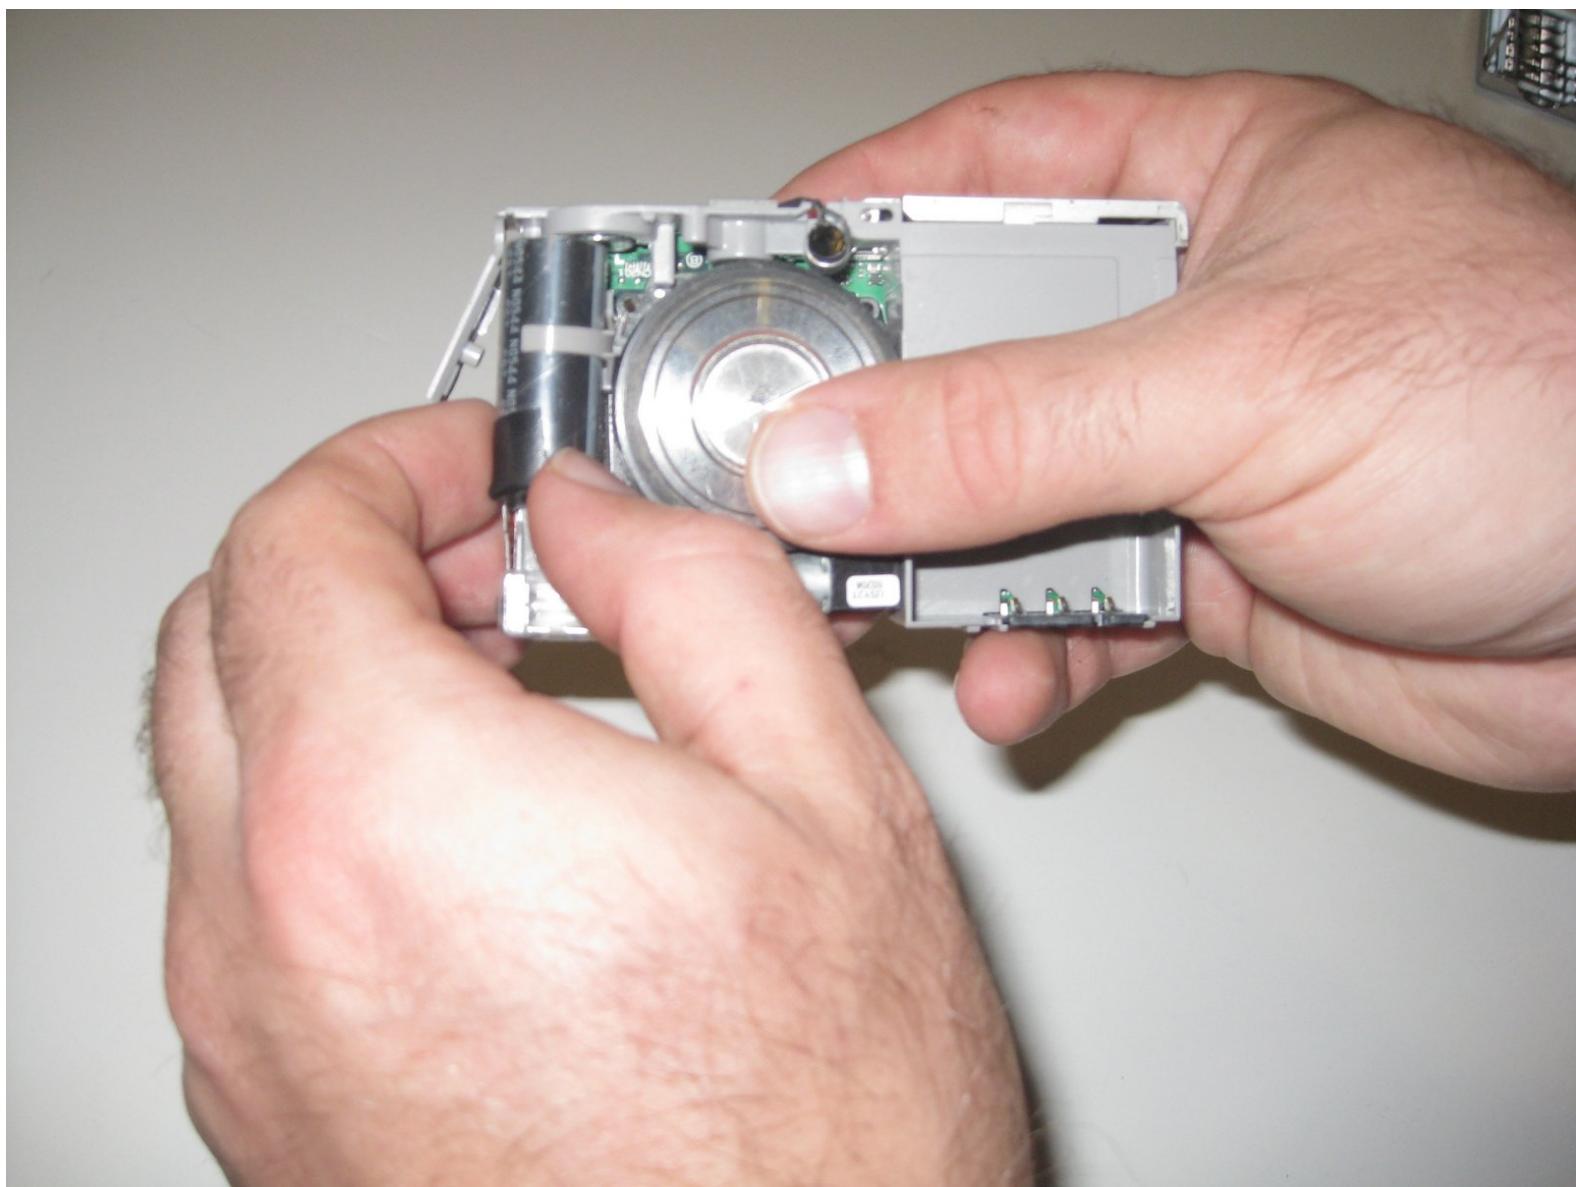

Fujifilm Finepix F10 6.3 MP Flash Battery Replacement

If flash fails to work and other troubleshooting has failed, install a new flash battery.

Written By: Sarah Looper



INTRODUCTION

The flash battery provides the power necessary to create the flash. This guide describes how to find and remove this battery in order to install a new one.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tri-wing Screwdriver](#) (1)

Step 1 — Back Cover




- Remove the screws from the bottom of the camera using the tri-wing screwdriver.
 - Three 5.4 mm tri-head screws.

Step 2




- Remove screws from charger side of camera using the Phillips 00 screwdriver.
 - Two 3.3 mm Phillips #00 screws.

Step 3

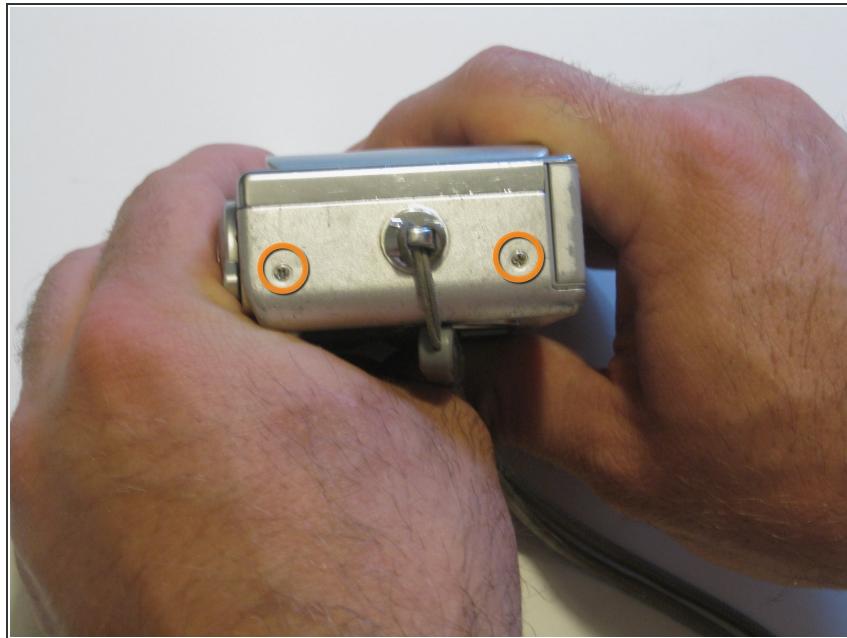


- Remove screws from wrist-strap side of camera using the Phillips 00 screwdriver.
 - Two 3.3 mm Phillips #00 screws.

Step 4

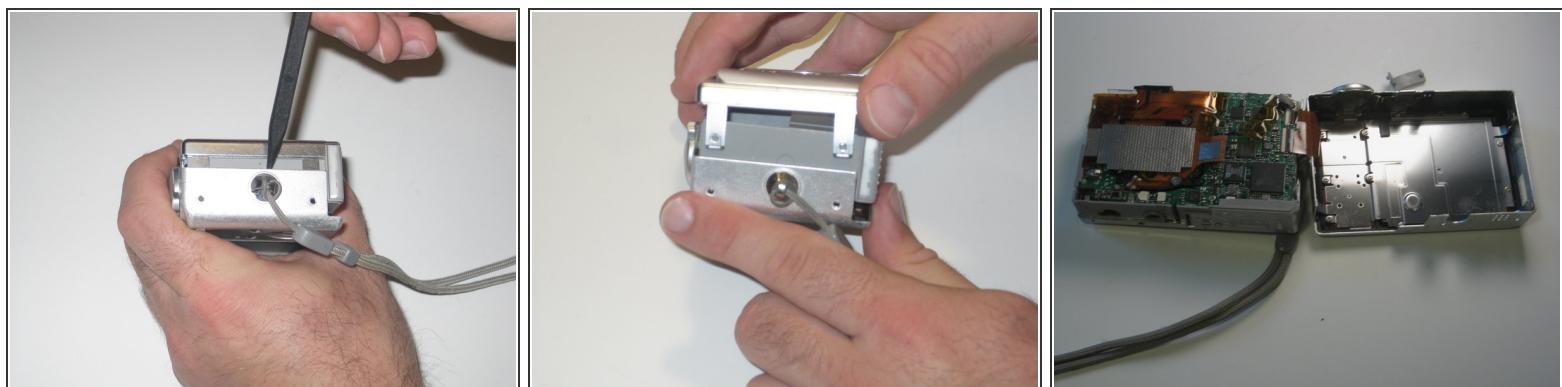


- Separate the front and back casing using the spudger.
- Gently pull apart the two casings.
- Pull the back casing away from the camera.

Step 5 — Front cover

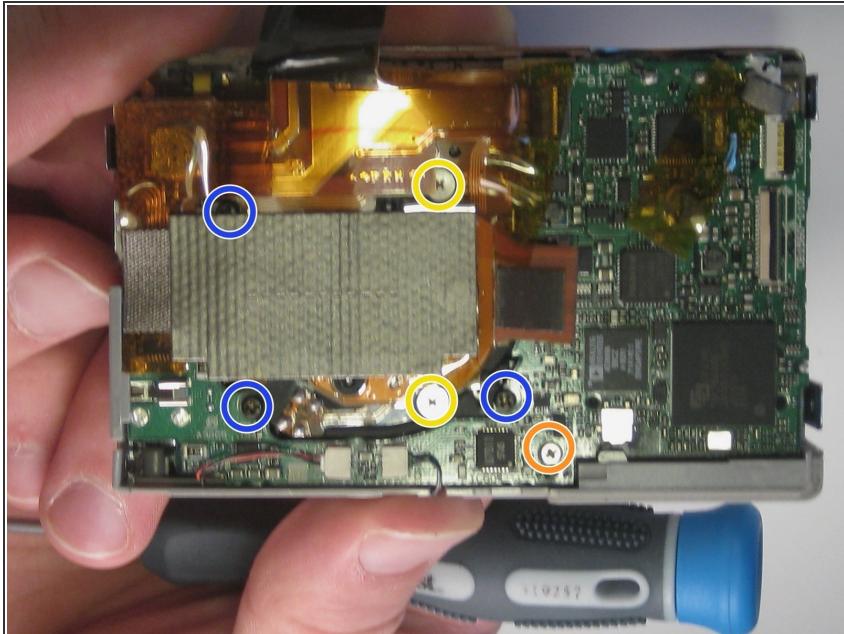


- Remove screws from motherboard using the Phillips 00 screwdriver.
 - Two 2.5 mm widehead Phillips screws
 - One 3.3 mm #00 Phillips screws
 - Three 2.5 mm #00 Phillips screws (black screws)

Step 6

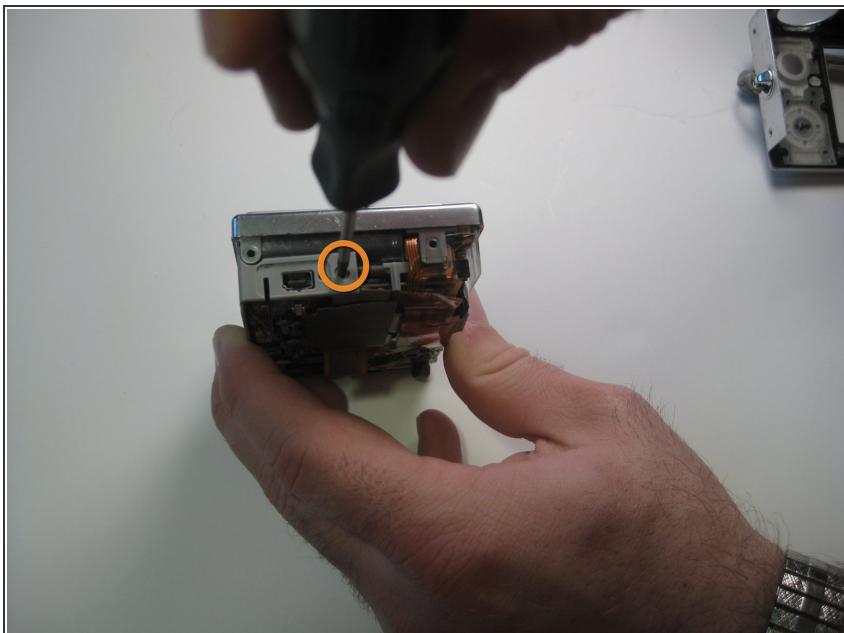


- Rotate the front cover clockwise onto its side and remove the single screw on the side using a Phillips 00 screwdriver.
 - Remove 3.3 mm #00 Phillips screw from the side of the front screen.

Step 7

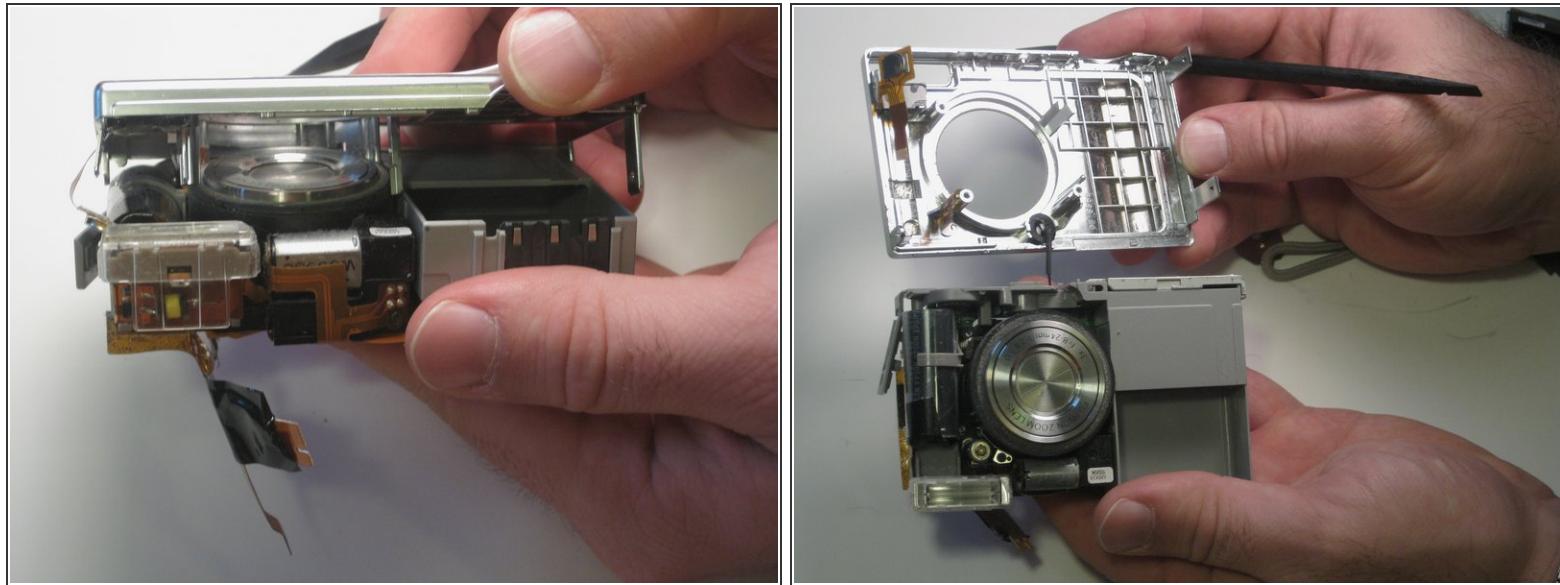

- Firmly grasp both the motherboard and front cover. Slowly pull the front cover away from the motherboard.
(i) Do not be alarmed if it takes substantial pressure to separate the two.

Step 8 — Flash Battery

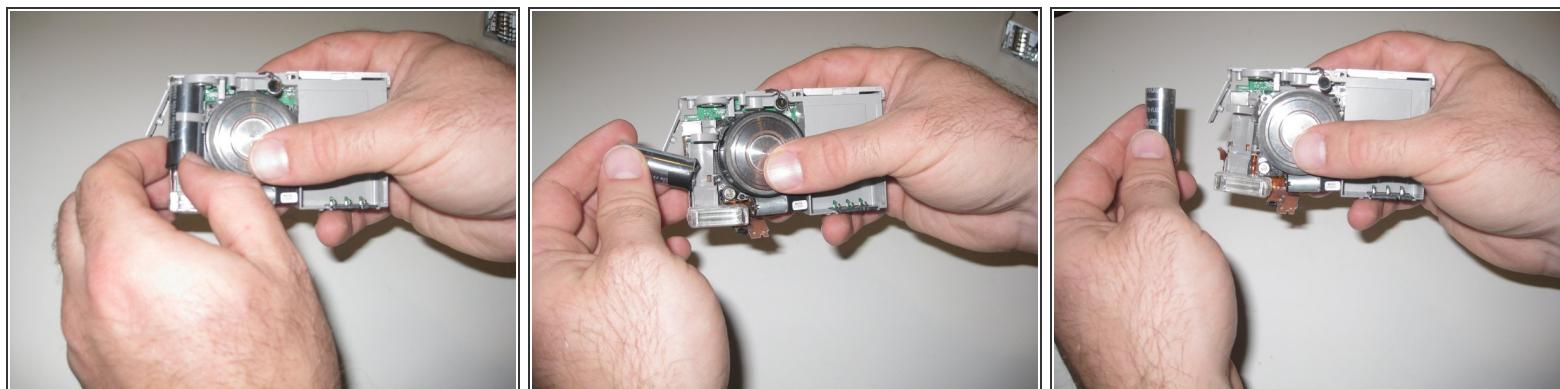

- Gently remove battery from casing.

To reassemble your device, follow these instructions in reverse order.