



# Fujitsu Lifebook Stylistic Q584 Camera Replacement

Remove the camera from the Fujitsu Lifebook Stylistic Q584

Written By: Connor Stanton



## INTRODUCTION

If you need to replace the camera this guide will provide step-by-step instructions on how to disassemble and replace your camera.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Back Case




- Remove the white sticker covering the screws (*if applicable*).
- Use the PH1 screwdriver to remove the four 2 mm screws from the the backside of the device.

## Step 2




- Insert the plastic opening tool along the seam of the back case.
- Gently slide the plastic opening tool along the entire seam popping the clips free.

## Step 3

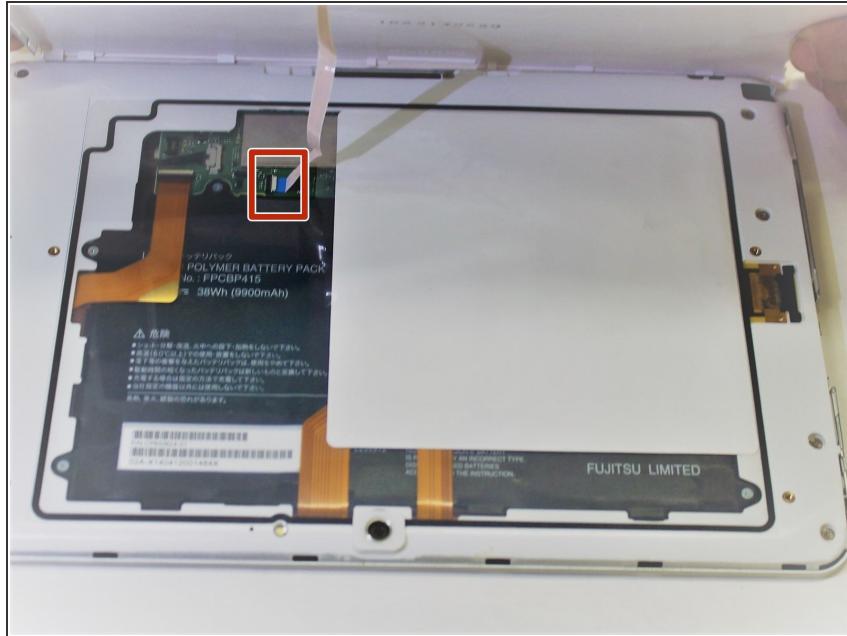


- Carefully lift the back case and remove the smartcard ribbon from the motherboard.

## Step 4 — Inner Back Shield

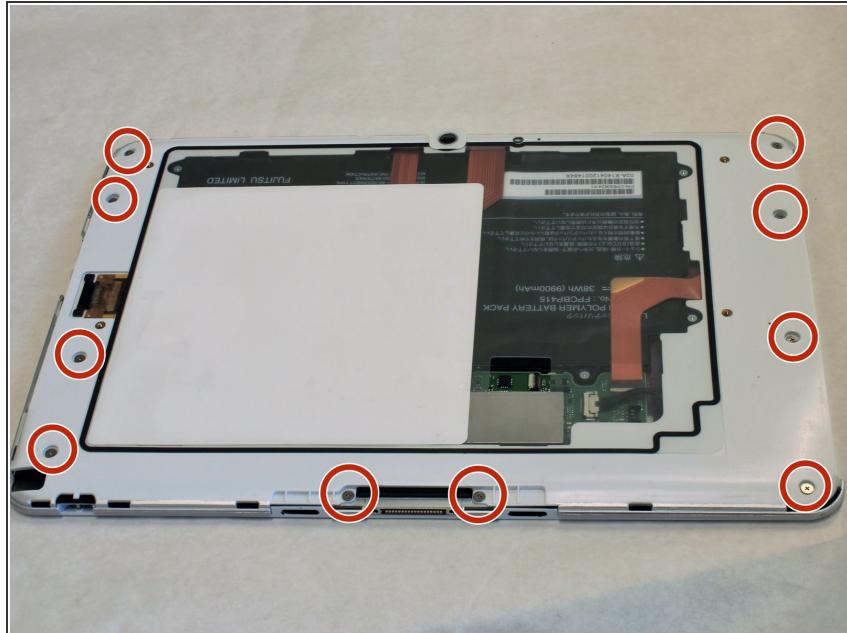


- Remove the ten 3mm screws with a PH00 screwdriver from the shield.

## Step 5

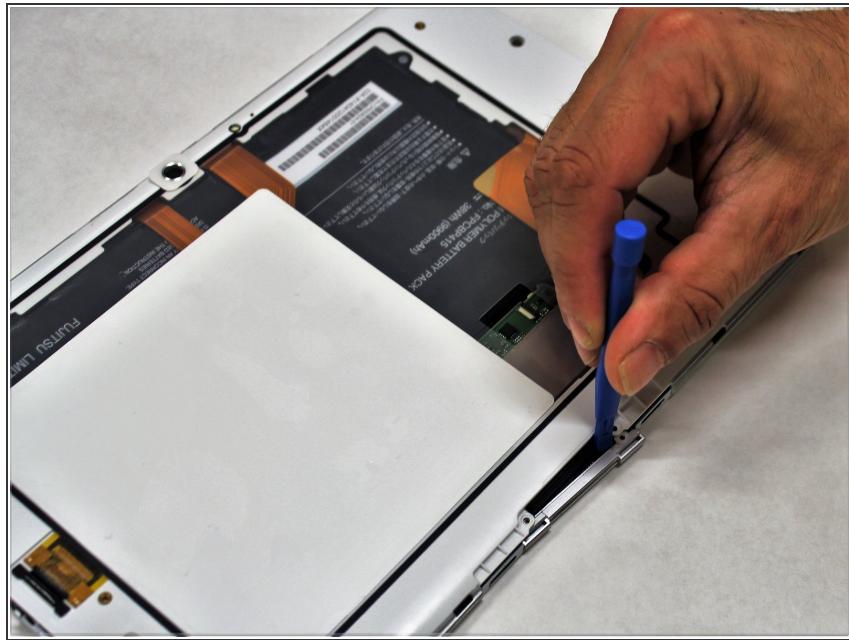

- Remove the grey docking station port cover.

## Step 6

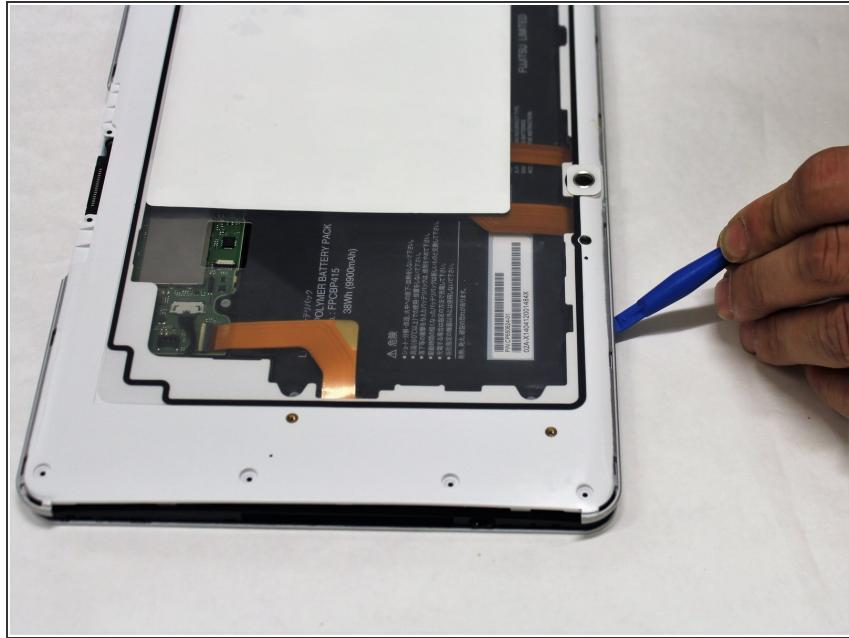



- Gently slide the plastic opening tool along the entire seam popping the clips free.

## Step 7



- Lift the shield away from the device and remove the fingerprint scanner's ribbon from the motherboard.

## Step 8 — Camera

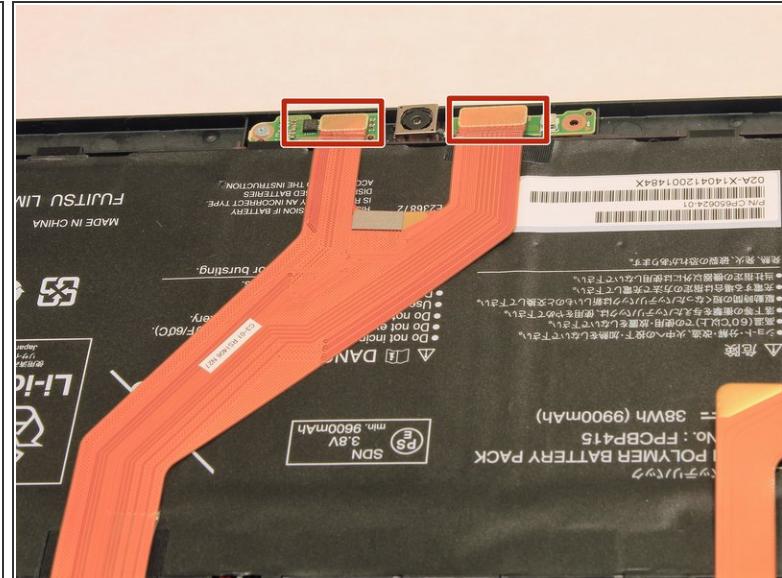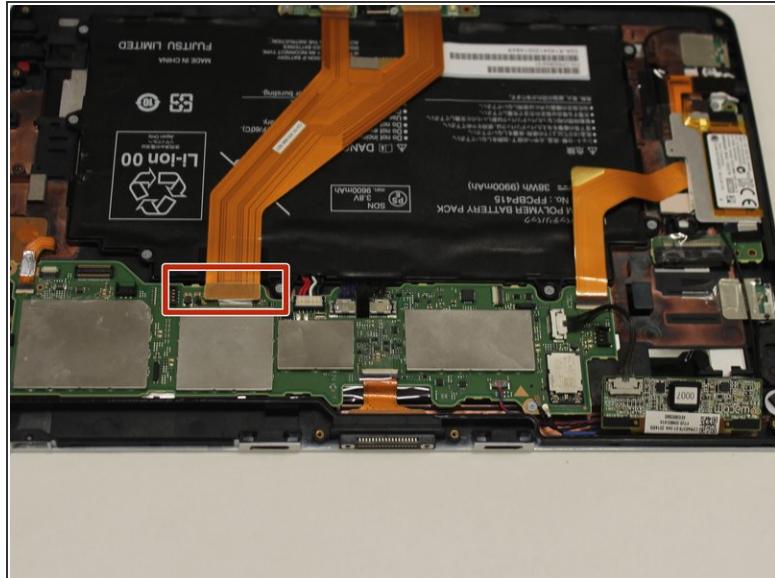

- Pull up the cord that connects the battery to the motherboard

## Step 9



- Pull the ribbon straight up from the back of the camera board

## Step 10



- Remove the single 2mm screw using a PH000 screwdriver from the camera board.

To reassemble your device, follow these instructions in reverse order.