




G&G BlowBack RK-47 Airsoft Disassemble

This guide will show you how to disassemble a G&G ak with its specialized blow back parts.

Written By: 101 Tech USA

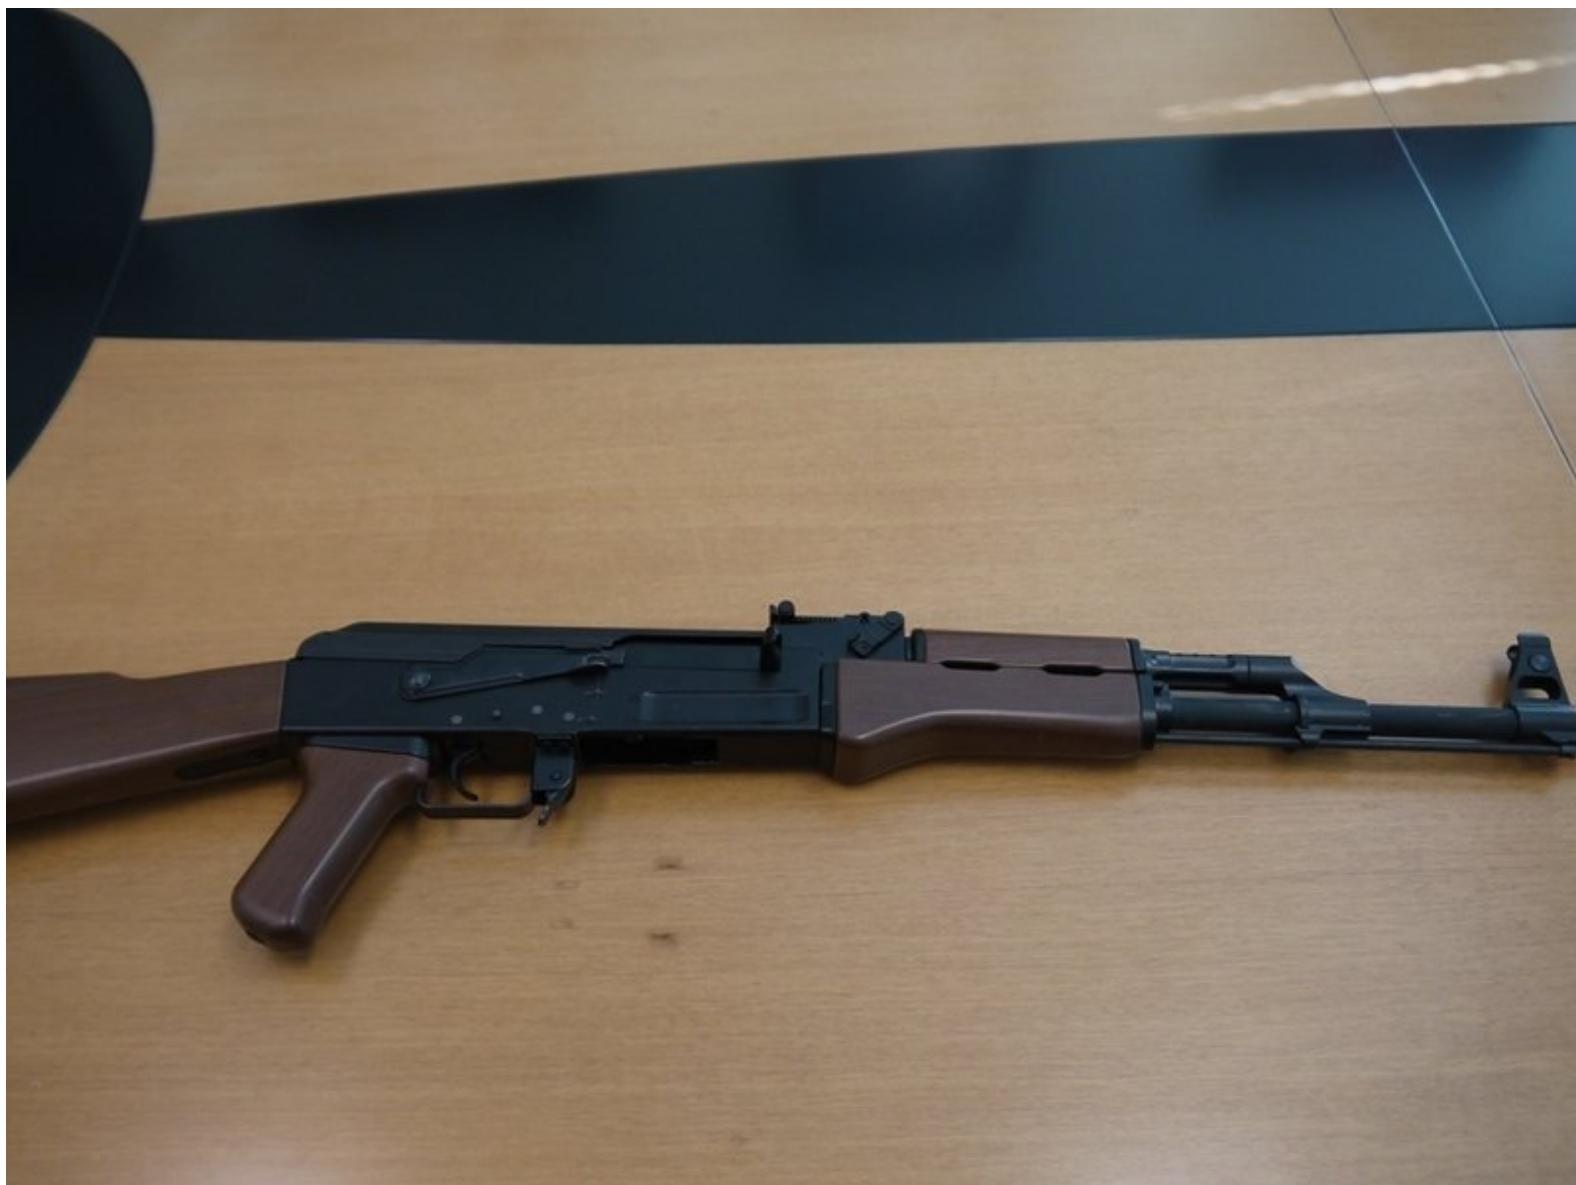

INTRODUCTION

Although the blow-back AK's are very similar to the other AK lines there are some slight differences to watch out for.

Step 1 — G&G Top Tech RK47



- Before disassemble dry fire the AEG twice on semi auto and then remove the battery.
- First step of disassemble is to remove the dust cover by pressing in the button at back of the gun.
- Now lift off the dust cover from the back.

Step 2



- The following step can be done at almost any time.
- Start removing the bolt by taking off the C-clip shown below.
- Now remove bolt by slide it back and then off.

Step 3



- Begin by removing the Philips screw at the very bottom of the grip.
- Now slide of the pistol grip by pulling it downward once the screw is removed.

Step 4



- Now remove the four 2mm hex screws found at the bottom of the receiver.
- Now the front half of the receiver can slide forward and off the other half.

Step 5



(i) This step is not necessary for those trying to access the gearbox.

- Yellow circle: To remove the hop-up and inner barrel remove the screws shown.
- Green circle: With hop-up and inner barrel out you can separate the hop-up from the barrel. First slide the hop-up to its lowest setting. Now removing the plastic clip piece.
- Black circle: Slide off the hop-up to expose a green rubber seal piece called the bucking.

⚠ Warning: Do not lose the hop-up nub. Which is a very small cylinder shaped piece that fits onto the hop-up arm.

Step 6



- Yellow circle: Now use a flat head screw driver to pry off the cap on the selector.
- Black circle: Remove the screw that was directly underneath the cap.
- Black circle: The selector lever can now be taken off.

Step 7



- Underneath the selector is a circular metal piece. This can be removed with pliers and is the last thing hold the gearbox in place. Often times this piece will come off when the lever is removed which is works as well.

Step 8



- Now while making sure not to let the rear wiring get caught on anything slowly pull the gearbox out of the receiver.
- The best way to get the gearbox moving is by pushing from the bottom up.

Step 9



- Now remove the selector pieces on the right side of the gearbox.
- To take off the last piece on the left remove the 2mm hex screw shown.
- Now flip the gearbox over and remove the piece shown.

Step 10




- Remove the screws holding the motor cage.
- Pull off motor connectors on either side of the motor.
- Now the motor and cage and be put to the side.

Step 11



- Take pull the wire out of place in the area shown.
- Now use a punch to remove the 2 retainer straps hold the blow-back cylinder in place.
- Once the straps are removed you can take the blow back cylinder out.

Step 12

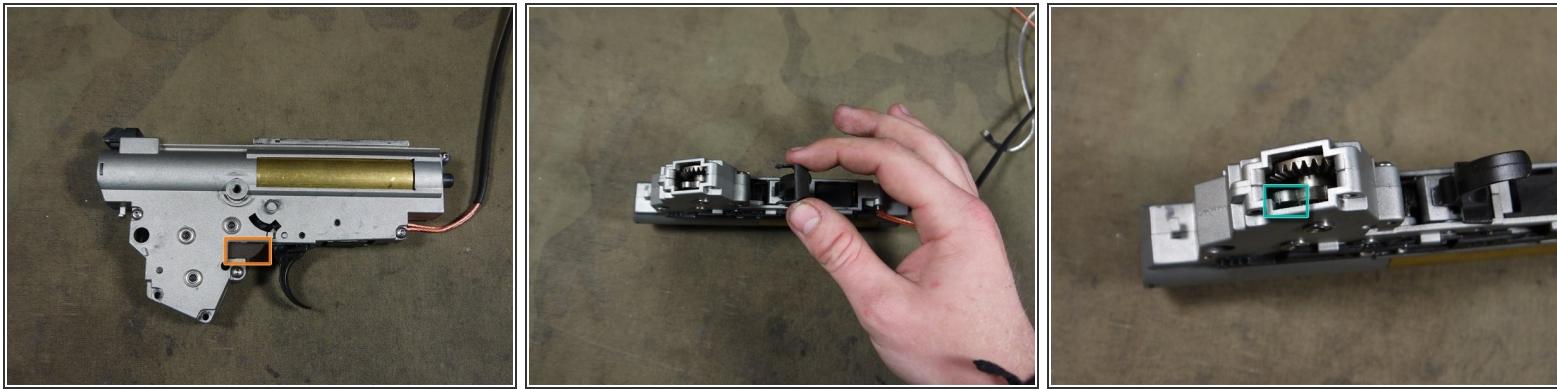


- Remove the plastic piece behind the trigger. You should be able to pry it off with your fingernails or in extreme cases a Flathead screw driver.
- If you did not fire the gun in semi auto before disassemble or the piston didn't reset properly you can use a tool with a hook or needle nose pliers to release the anti-reversal latch shown hear.

Step 13



- Now remove the screws shown
- Start cracking open the gearbox starting from the back end. While doing so hold down the piston cylinder and spring to prevent part from flying around.
- Once the top half of the shell is off quickly remove the spring guide and spring so you no longer risk pieces flying out.

Step 14

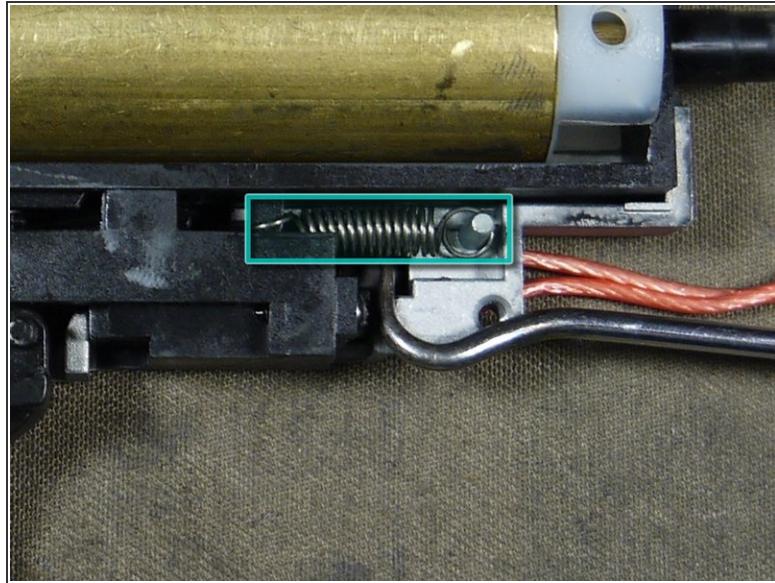

- Detach the spring shown from the post of the gearbox shell.
- Now remove the cylinder and all the parts attached (shown in the second picture) to gain access to the gears.

Step 15



- If you wish to remove the gears remember not to lose any of the shims (little washer looking things) unless you already know how to shim.
- Here is a guide for [G&G AEG Shimming Guide Airsoft](#)

- If you have no reason for removing the trigger it is easiest to leave it in place. It can be tricky sometimes to get into place. However if you need remove it it can just simple be pried out.

To reassemble your device, follow these instructions in reverse order.