



# Game Boy Advance Speakers Replacement

Written By: Adam



# INTRODUCTION

Use this repair guide in order to replace the speakers.

## TOOLS:

- [Desoldering Braid \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Solder \(1\)](#)
- [Soldering Iron \(1\)](#)
- [Tri-point Y0 Screwdriver \(1\)](#)

## Step 1 — Battery



- Take the battery cover off by releasing the locking tab and hinging the cover away.

## Step 2 — Back Panel




- Remove the six back panel screws using a Tri-wing Screwdriver.

## Step 3



- Remove bottom back panel screw with a Phillips #1 screw driver.


## Step 4

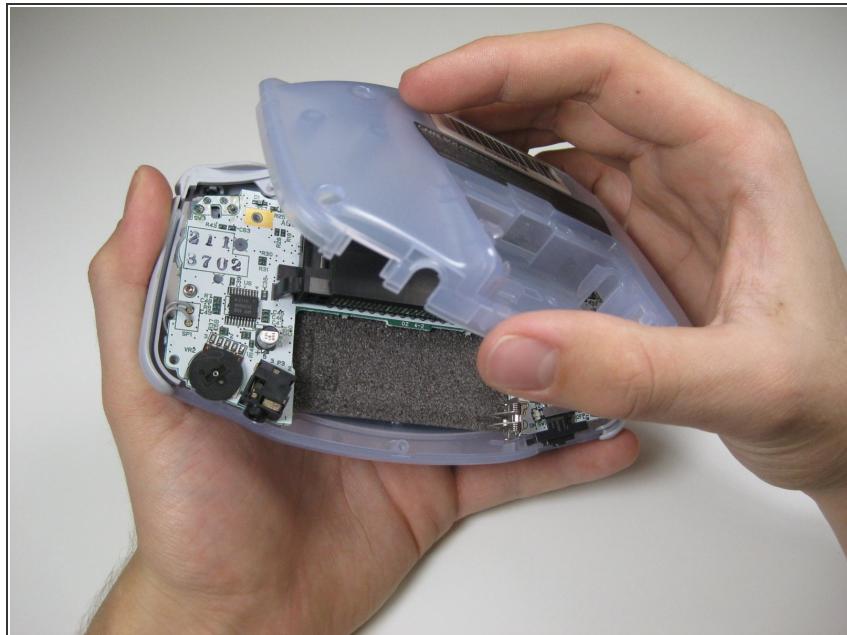

- Remove the back panel by pulling away with one hand and the front secured in the other hand.

 Removal of the back panel may cause shoulder buttons and side panels to come loose and fall off.


## Step 5 — Shoulder Button and Side Panels

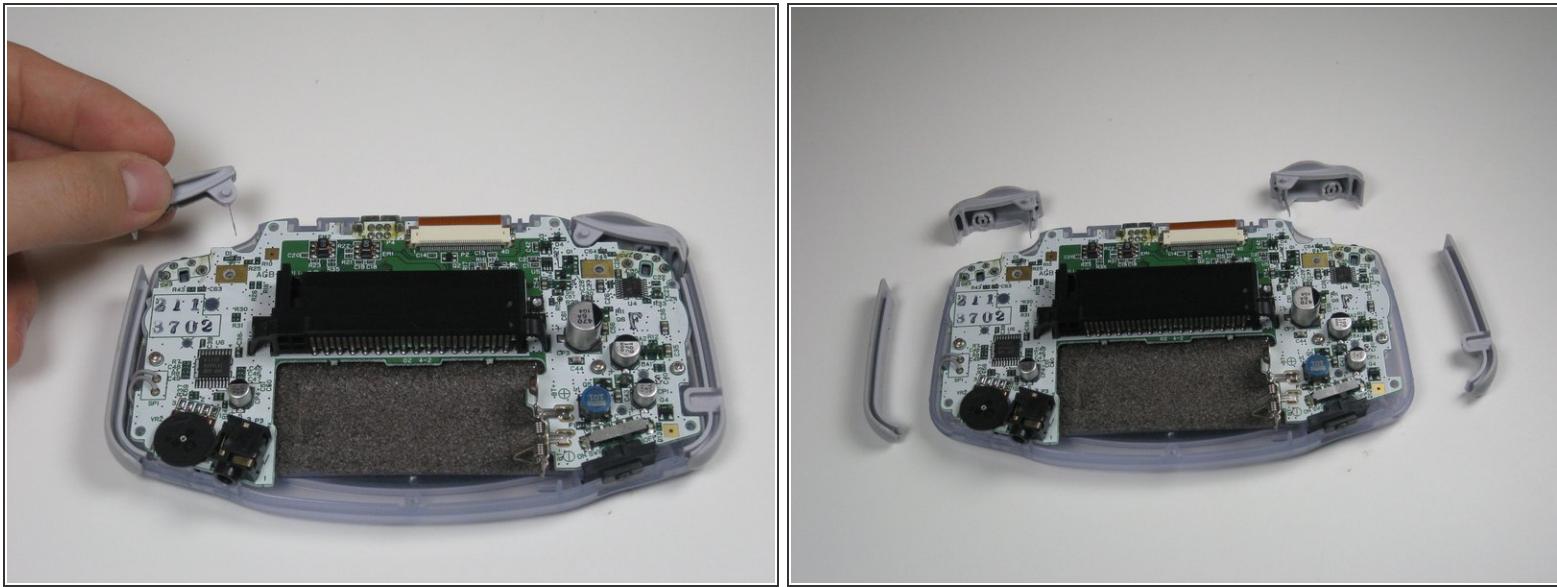

- Remove left and right triggers by lifting and pulling them away from the system.
- Do the same for side panels


*(i)* For finicky or jammed triggers only. Adjust and correct triggers and reassemble. Most jammed triggers are caused by buttons misplaced or jammed in its enclosure.

## Step 6 — On/Off Switch

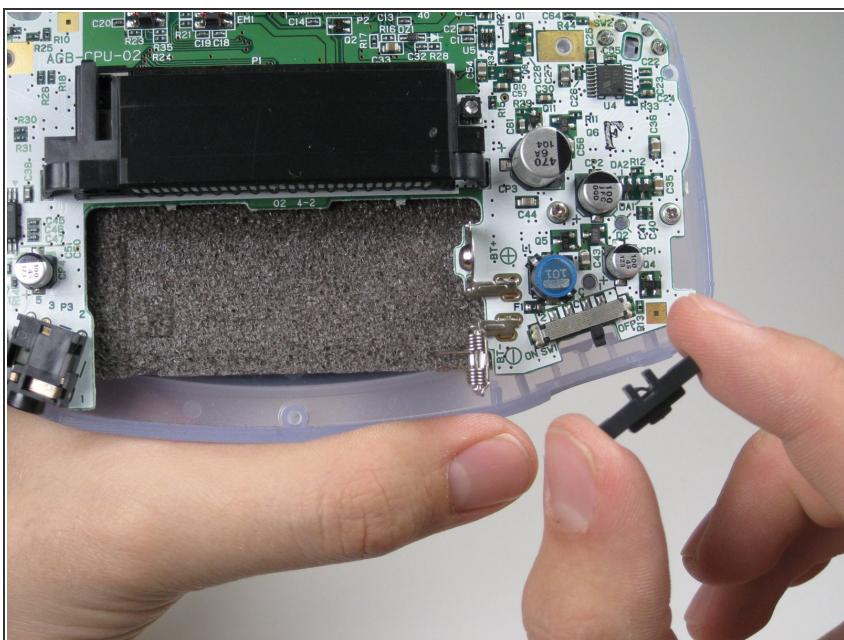

- Remove the gray On/Off Switch by pulling up and away from the unit. Replace with another switch if necessary.

## Step 7 — Buttons

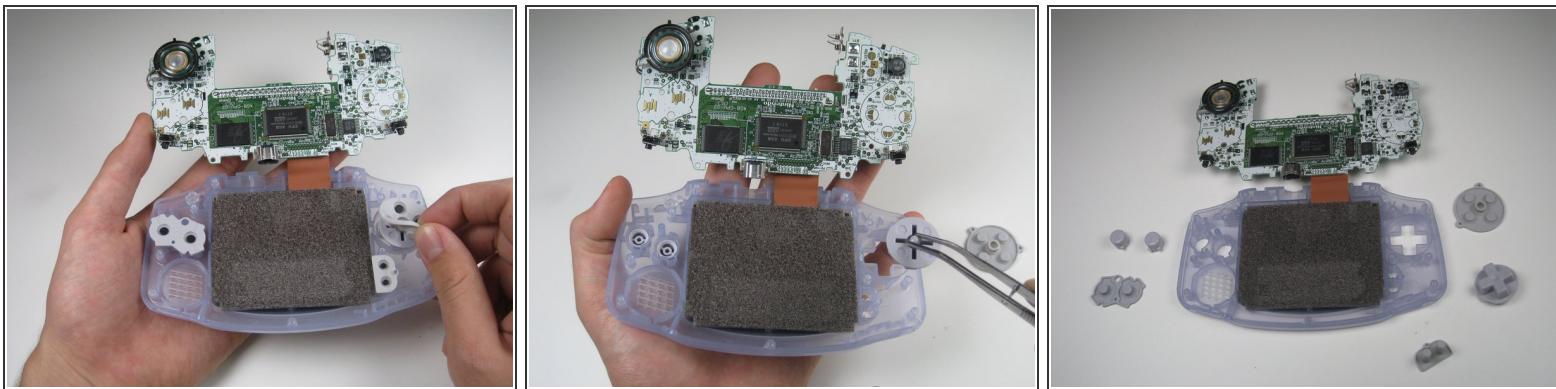


- Remove the rubber button pads from their pockets.
- Remove the plastic buttons and the D-pad from beneath the rubber pads with tweezers or by hand.

## Step 8 — Speakers



- Using the tweezers, gently pull the ribbon from the logic board.

## Step 9

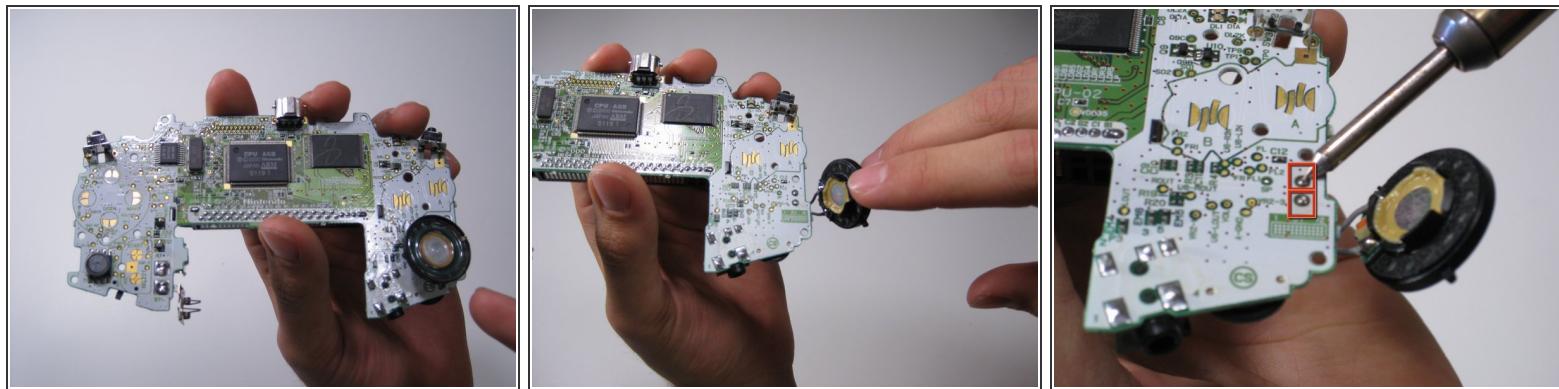

- Slightly move the speaker to the right and desolder the two wires from the logic board.

 Beware of over heating the soldering kit will damage the logic board.