


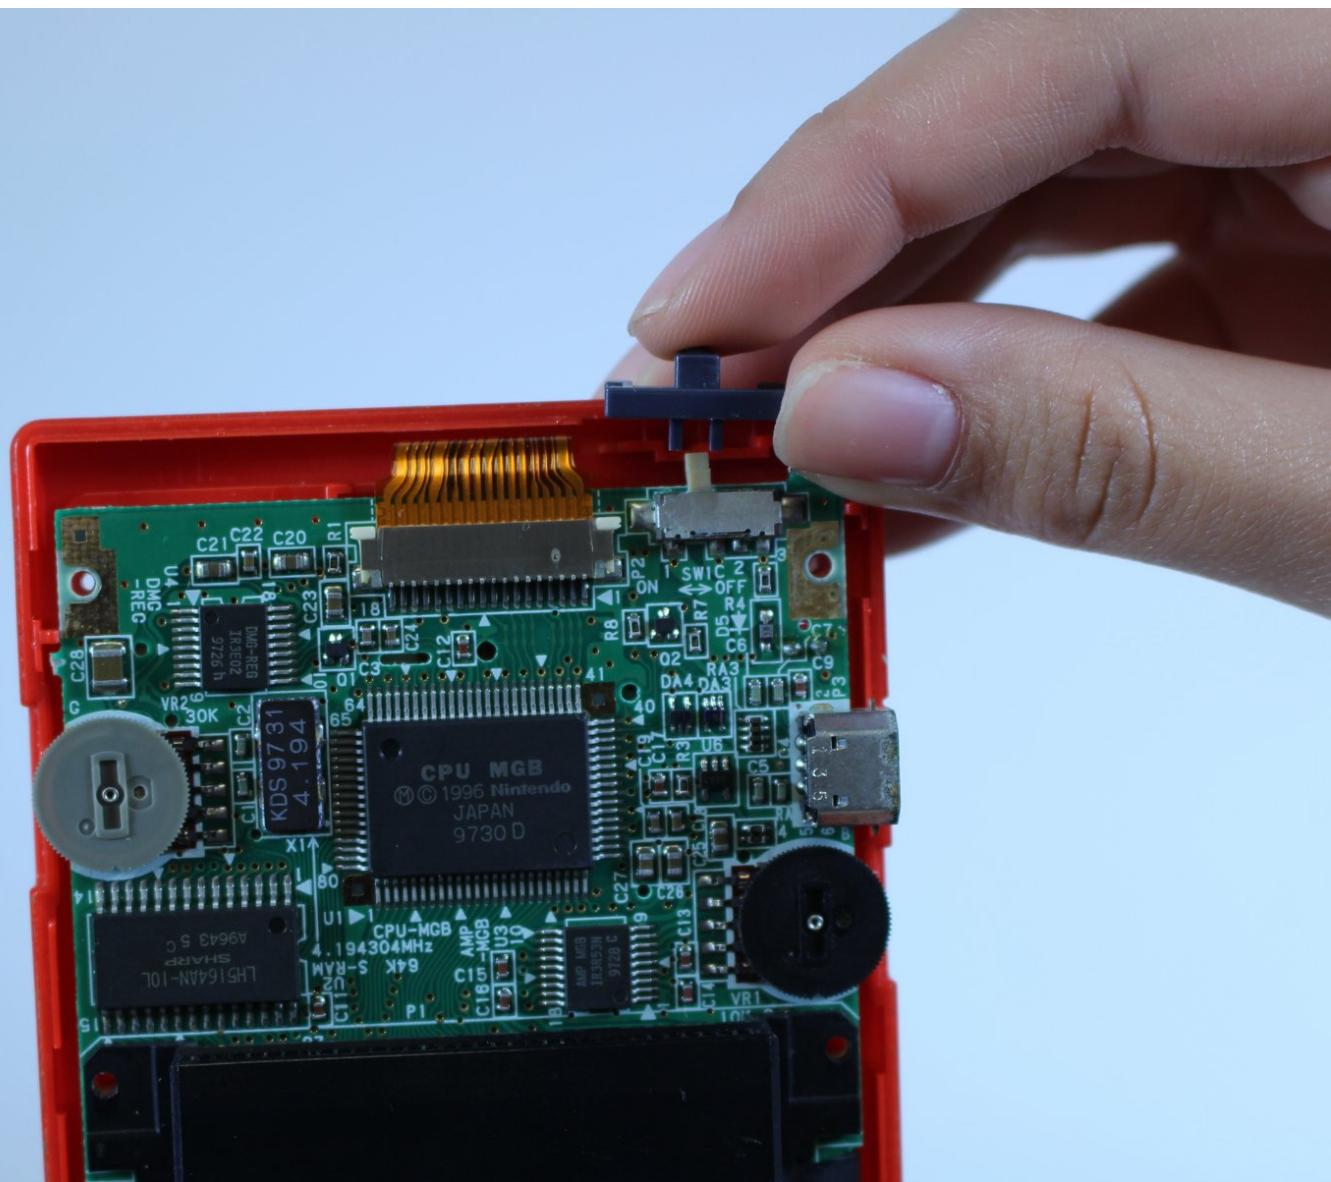

Game Boy Pocket Power Button Replacement

Use this guide to replace a Game Boy Pocket's power button.

Written By: Adriana Rahrig



 **TOOLS:**

- Y1 Tri-point Screwdriver (1)

Step 1 — Remove the external screws




- Place the Game Boy Pocket face-down on a clean, flat surface.
- Use a Y1 tri-wing screwdriver and turn counterclockwise to remove the four external screws.
- Use a Y1 tri-wing screwdriver and turn counterclockwise to remove the two screws inside the battery compartment.

Step 2 — Open the device



- Place your hands on the front and back covers of the Game Boy Pocket, and carefully separate the device.
- *(i)* Set the back cover aside. You will need it to reassemble the device.

Step 3 — Remove the power button

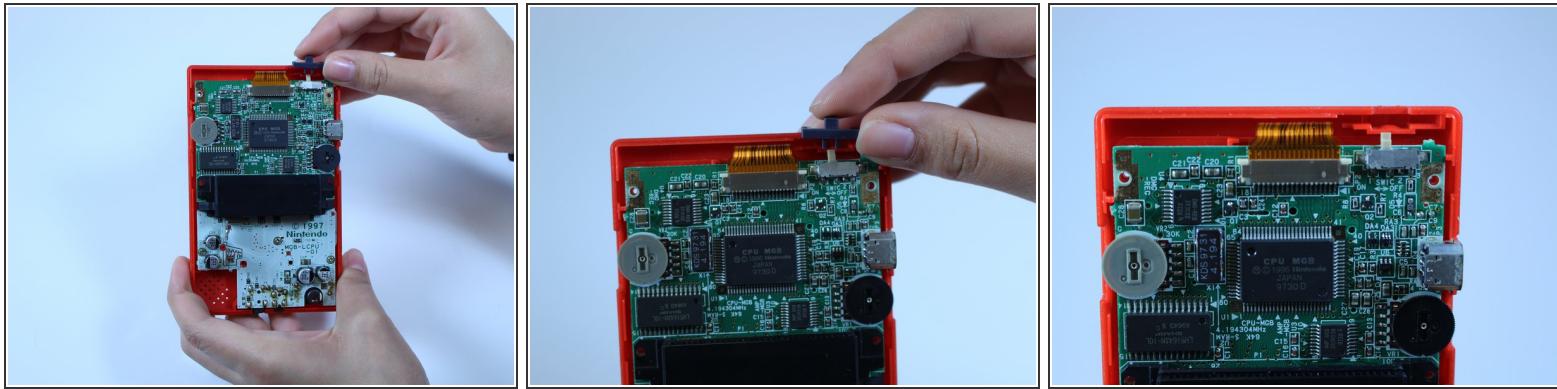

- Use your fingers to remove the grey power button to the right of the ribbon cable.

To reassemble your device, follow these instructions in reverse order.