




# GameStop Universal System Selector Button Replacement

This guide will walk the reader through the replacement of a system selection button for an GameStop Universal System Selector.

Written By: Jared

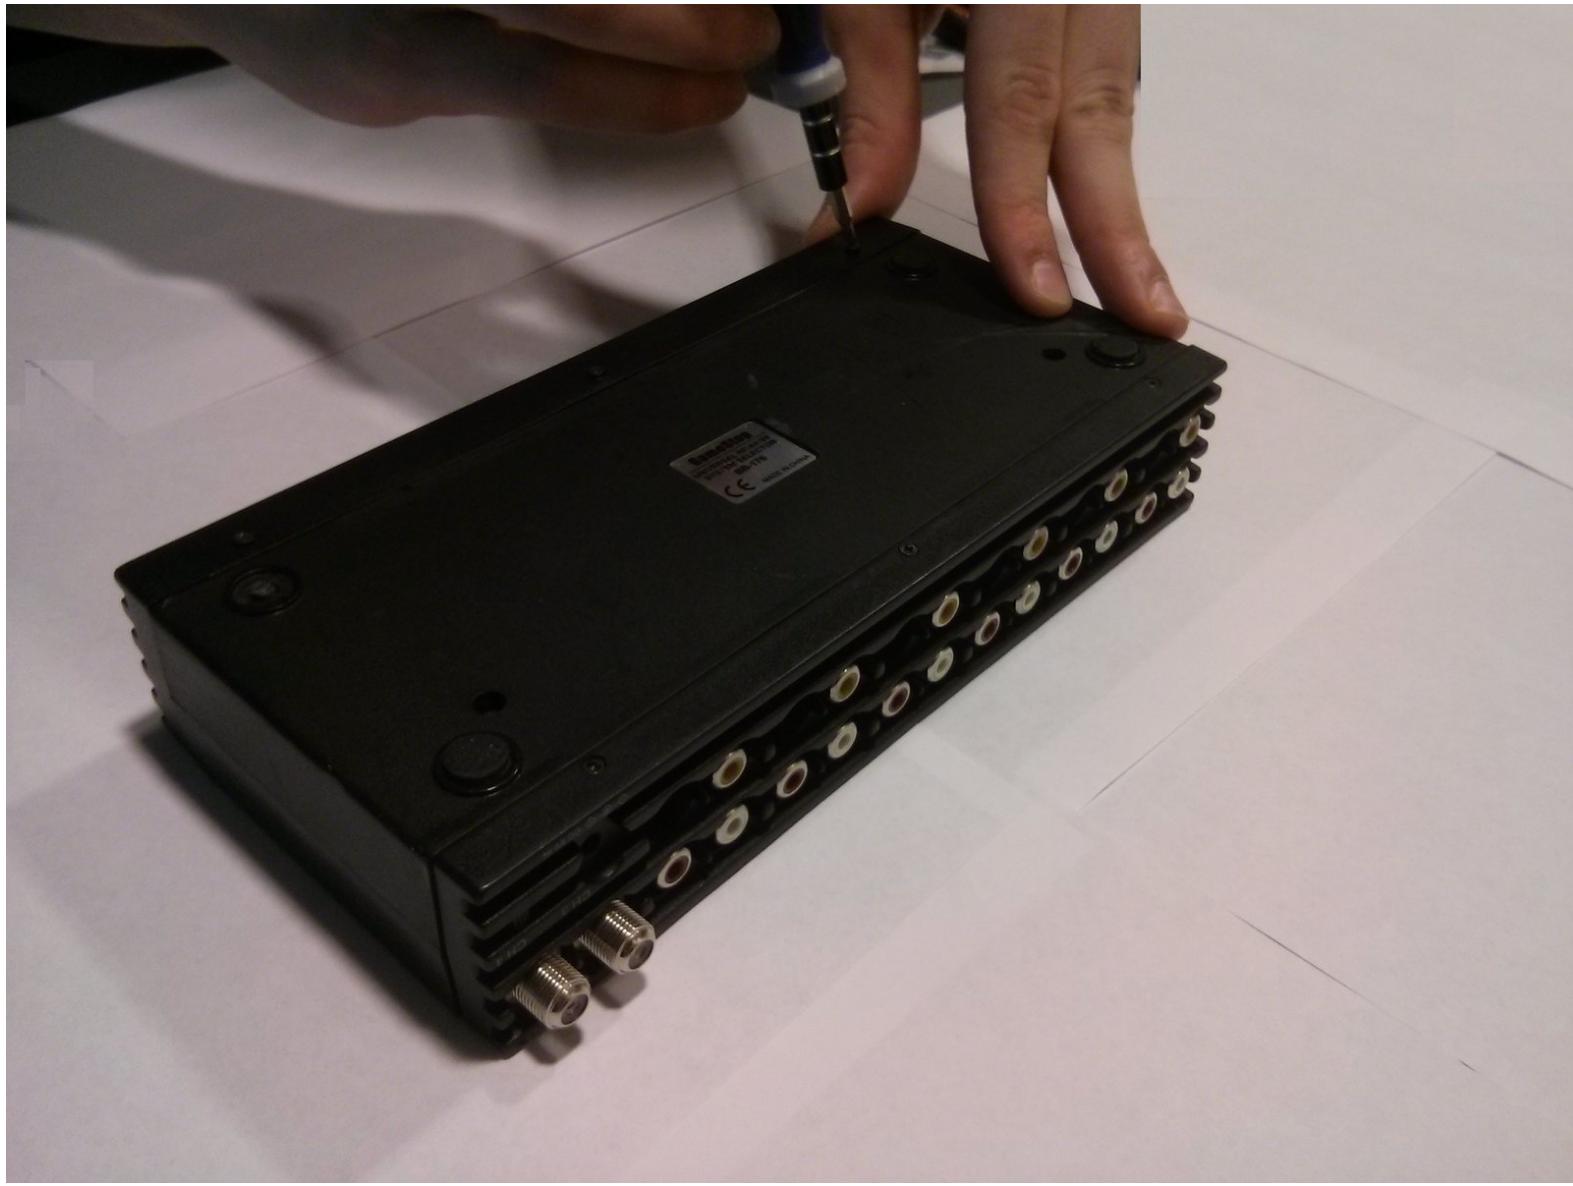


This document was generated on 2019-10-09 06:33:46 PM (MST).

 **TOOLS:**


- **Phillips #00 Screwdriver (1)**

## Step 1 — Button

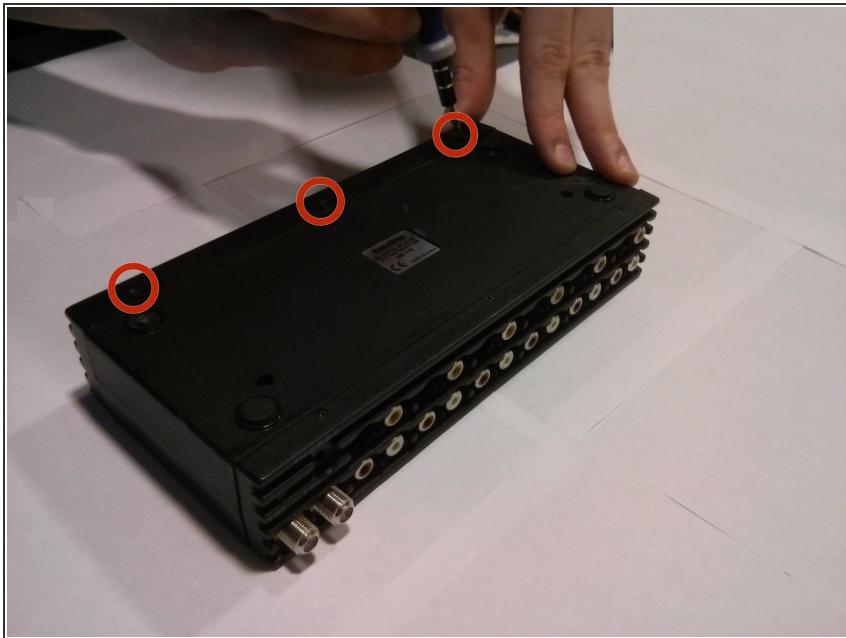


- ⚠ Disconnect the DC 6V IN power cable from the device.
- Remove the three front panel screws on the bottom of the device.

## Step 2

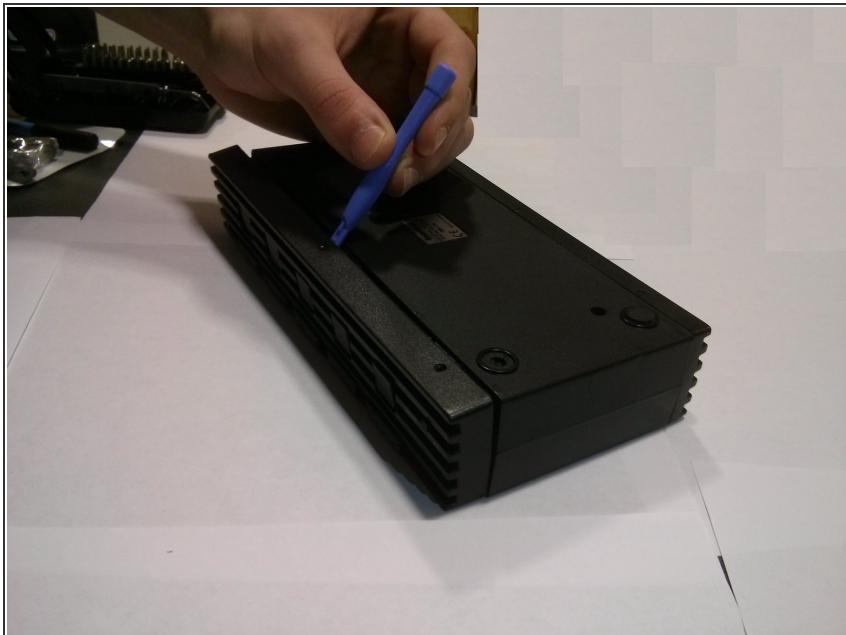

- Carefully pry off the front panel of the device to reveal the button in need of replacement.

## Step 3

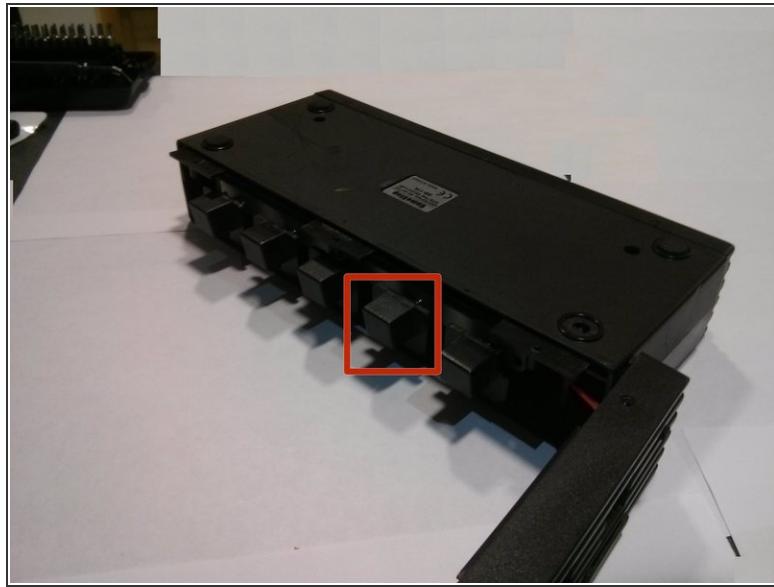


- Pull firmly on the button in need of replacement to free it from its housing.

## Step 4



- Push the replacement button into its new housing.

## Step 5

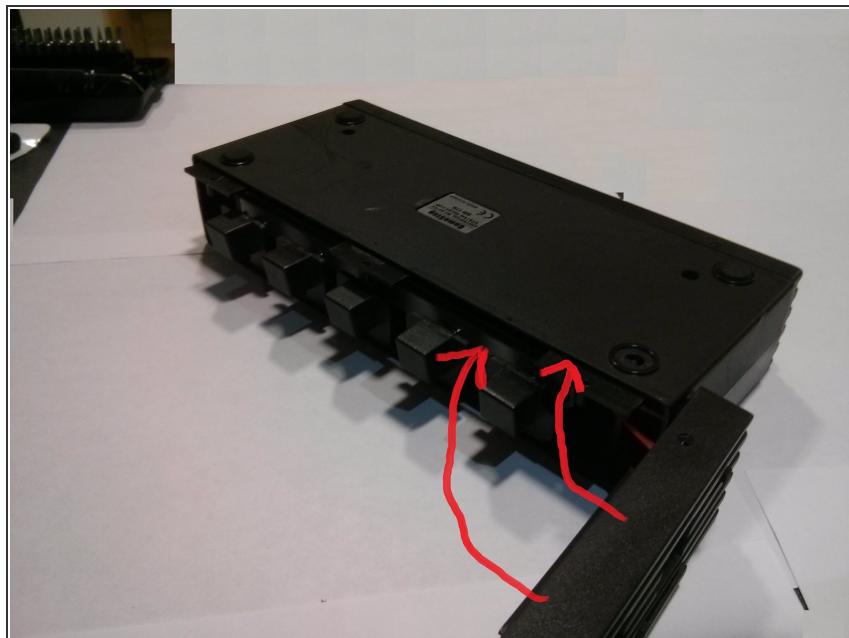

- Snap the front panel back into place and re-insert the 3 front panel screws, completing the replacement.

The system selector button should now be working properly.