



Garden Creations JB5629 Battery Replacement

Use this repair guide to replace a battery on the Garden Creations JB5629.

Written By: Anthony Smithson II



INTRODUCTION

This guide will walk you through the process of replacing a battery that won't charge anymore in a Garden Creations JB5629.



PARTS:

- 1 AA 1.2 V NiCd rechargeable battery (1)

Step 1 — Battery



- Take the Gardens Creations JB5629 in hand.
- Make sure the device is turned off.

Step 2



- Remove the garden stake by pulling it away from the bottom plastic tube.
- Remove the first plastic tube by pulling it away from the tube connector.
- Remove the tube connector by pulling it away from the top plastic tube.
- Remove the top plastic tube by pulling it away from the lamp shade.
- Remove the lamp shade by twisting it away from the lamp head.

Step 3



- Remove the battery cover by pushing down on the tab.
- Replace the battery with 1 AA 1.2 V NiCd rechargeable battery.

To reassemble your device, follow these instructions in reverse order.