



Garmin Dezl 760LMT Battery Replacement

Replace your Garmin's dying or dead battery to return power to your GPS.

Written By: Ryan Williams



This document was generated on 2019-10-02 11:04:32 PM (MST)


INTRODUCTION

This guide will explain how to open your Garmin, detach the battery from the motherboard, and remove the battery from the device safely and quickly.

TOOLS:

- [T6 Torx Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)

Step 1 — Back Panel

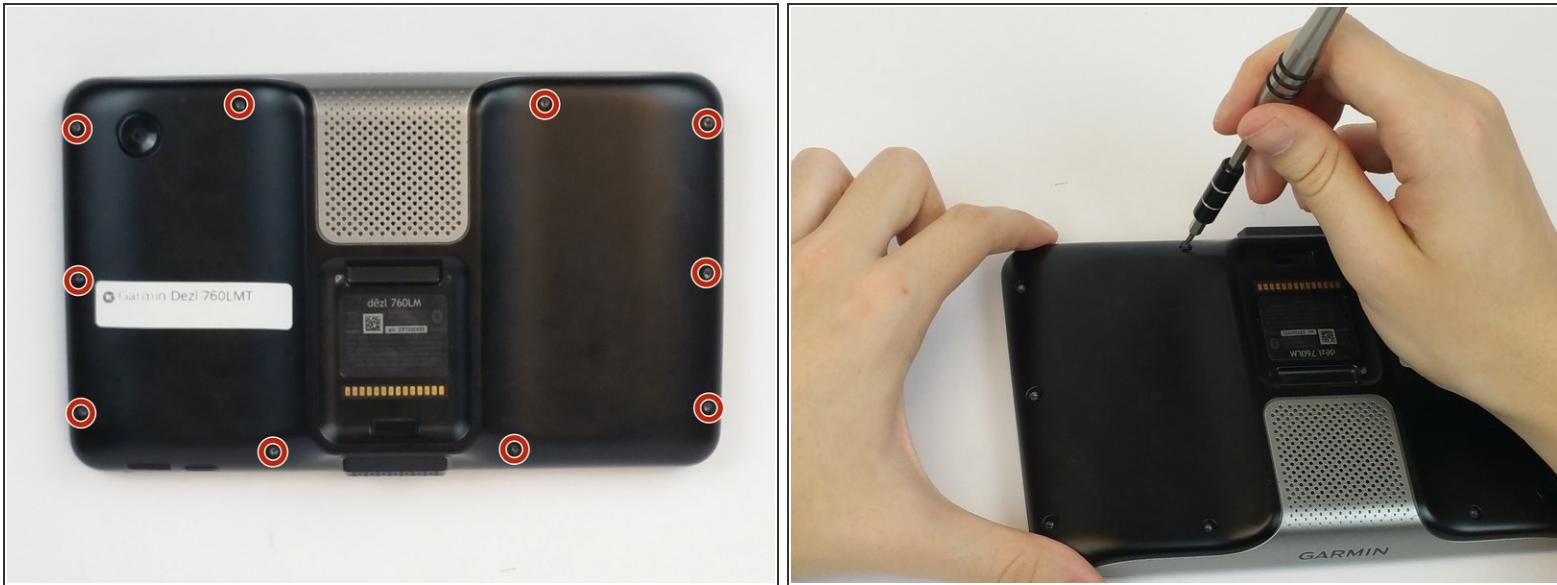

- Using a Torx T6 Screwdriver, remove the ten 7mm screws from the back panel.

Step 2



- Using a metal spudger, pry the device apart.

 To recombine them, line up the two halves of the device and press them together.

Step 3



- Turn the device over, laying it on its back with the screen facing upwards.
- Lift the front panel away from the silver part of the back panel.

⚠ Make sure not to rip the ribbon cable that is connected to the screen and the motherboard.


Step 4 — Battery



⚠ This photo shows the use of a tool that is not ESD safe. Use a nylon spudger to complete this step.

- Use a nylon spudger to pry the battery from the device.
- ☒ During reassembly, place double-sided electrical tape under the battery before pressing it into its slot.

Step 5

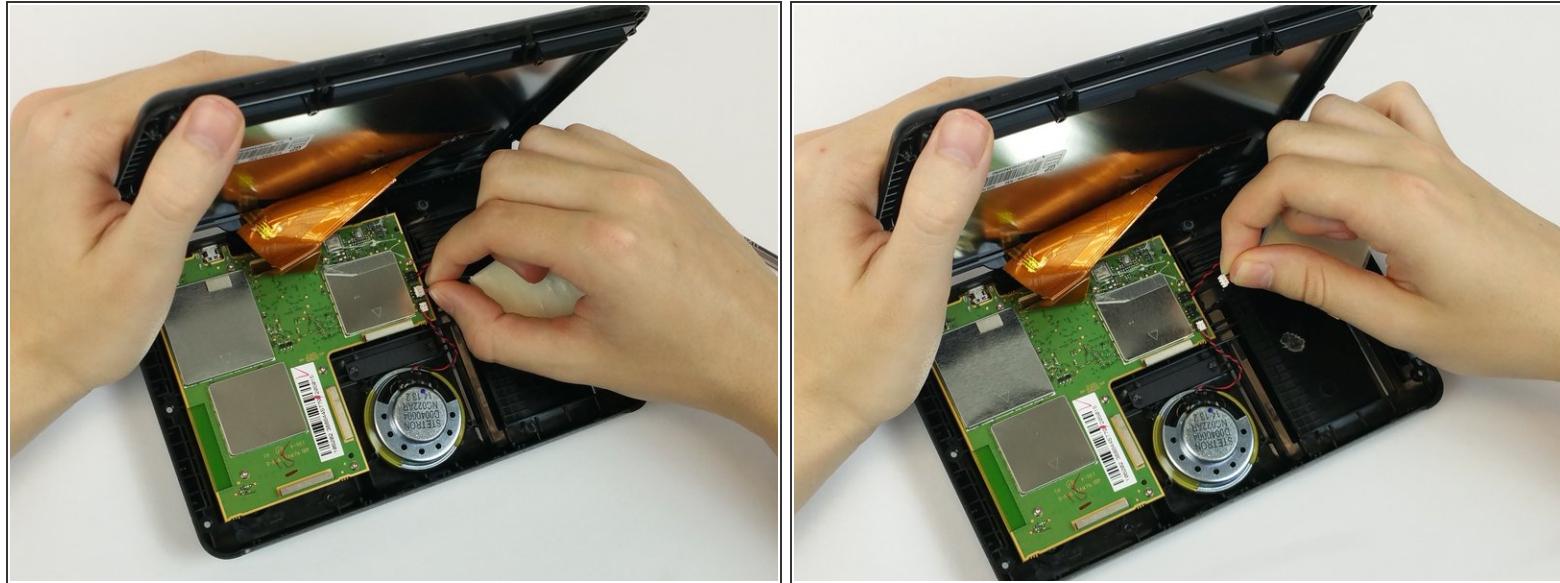

- Grasp the battery wire near the motherboard and lift upward to detach the connector.

To reassemble your device, follow these instructions in reverse order.