




Garmin Dezl 760LMT Screen Ribbon Cable Replacement

Prerequisite Only


Written By: Ryan Williams

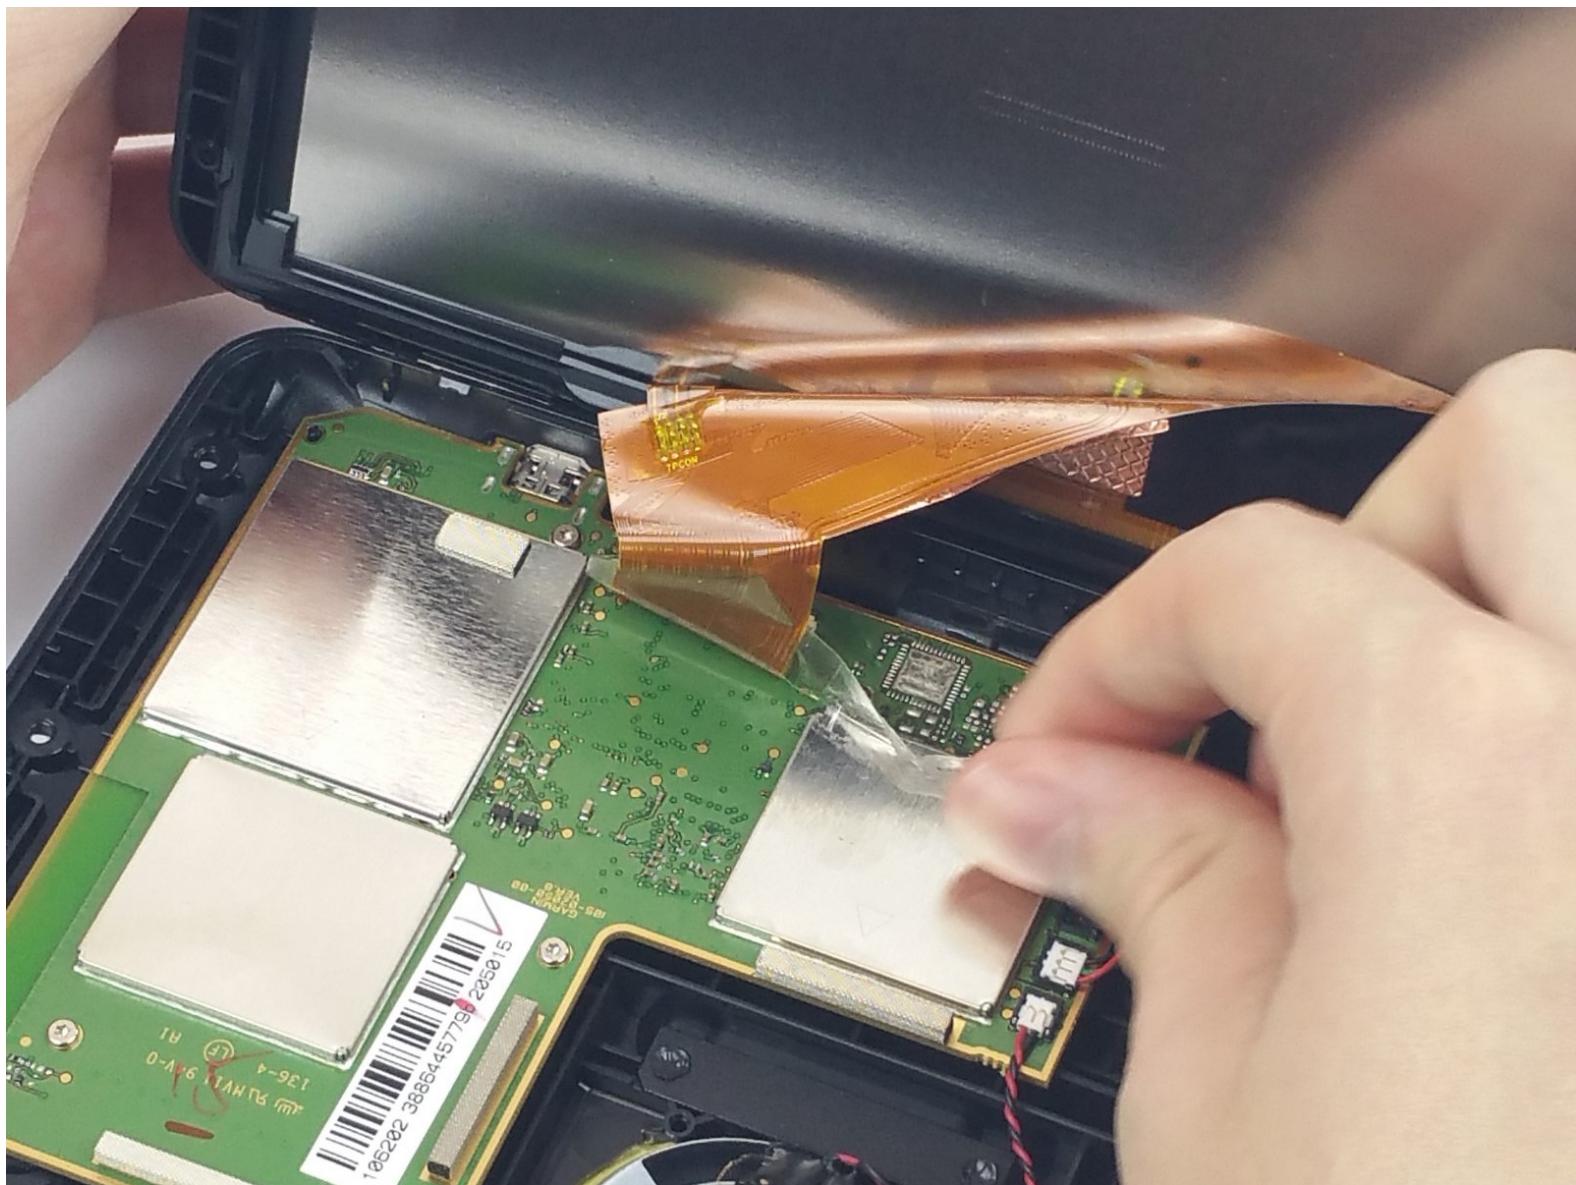

 **TOOLS:**


- Metal Spudger (1)
- Anti-Static Wrist Strap (1)

Step 1 — Screen Ribbon Cable

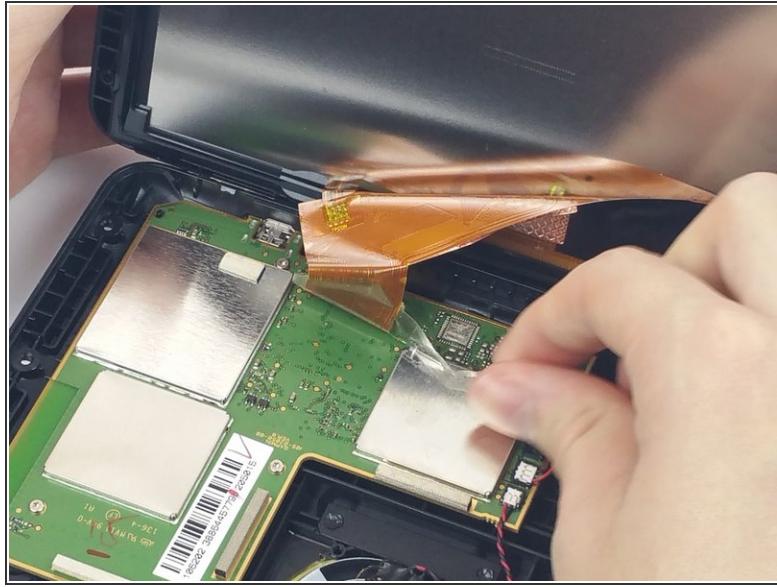

- Lift the screen opposite where the "GARMIN" logo is located. Remove the clear tape holding the ribbon cable to the motherboard.

Step 2

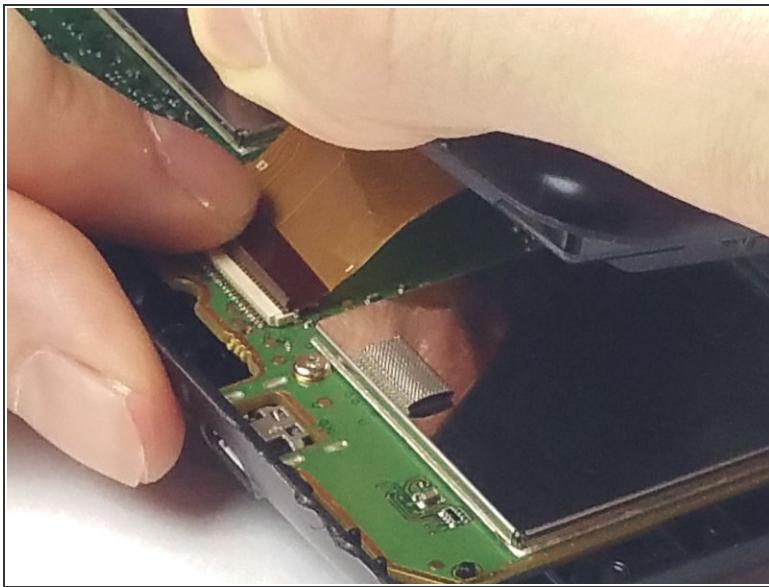

- Find and lift the small grey hinge at the end of the ribbon cable.

⚠ When handling the motherboard, make sure to wear an anti-static wrist strap.

To reassemble your device, follow these instructions in reverse order.