



Garmin Dezl 770LMT Screen Replacement

This guide will help in the disassembly of the screen for the Garmin Dezl 770LMT.

Written By: Aleem Waris



 **TOOLS:**

- [Spudger \(1\)](#)
- [T6 Torx Screwdriver. \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

Step 1 — Back Panel Removal



- Turn the device screen down and using the screwdriver remove all eight screws from the back plate.

Step 2



- Place a nylon spudger in the seam between the front and back panel and carefully lift around the edge of the device.


Step 3



- Use the spudger to pry apart the screen from all around the device.

⚠ Gently lift the screen so not to disconnect the ribbon attaching the screen to the motherboard.

Step 4 — Screen

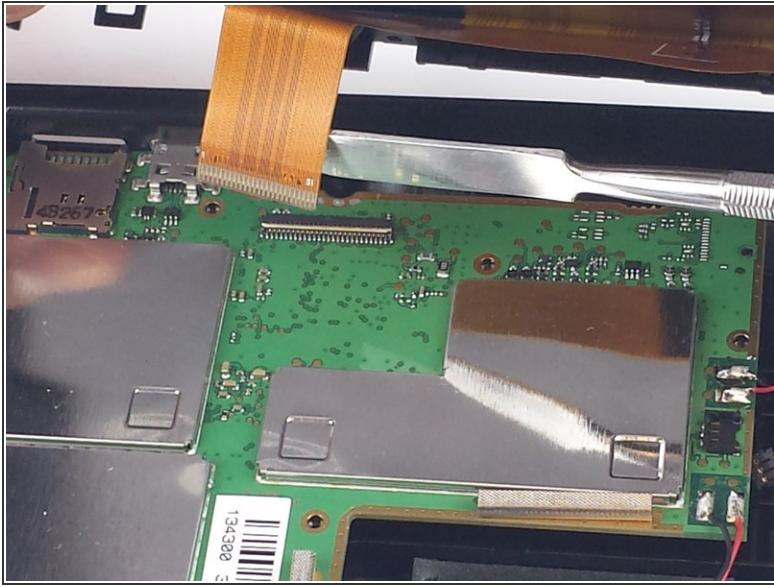

- After you've removed the back cover, you will see a copper colored ribbon connected to a grey hinge.

- Carefully remove the hinge from the cord using a spudger and the ribbon will come out.

! The regular black nylon spudger should be used whenever possible, especially around sensitive internal components.

! Make sure to wear an anti-static wrist strap when handling the motherboard.


Step 5



- Now you have the screen, which is enclosed by another cover. Remove the eight screws that hold it in place.

This document was generated on 2019-09-20 07:38:58 PM (MST).

Step 6

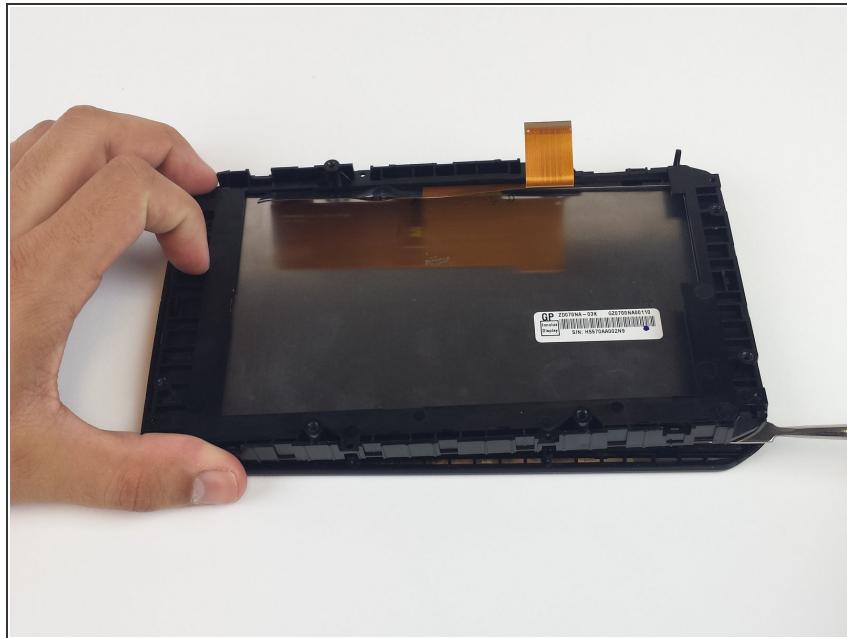

- Once the screws have been taken out, use a spudger to carefully remove the cover. With this cover removed, the screen is now completely exposed.

To reassemble your device, follow these instructions in reverse order.