




Garmin Dezl 770LMT Speaker Replacement

Written By: Francisco Rosado

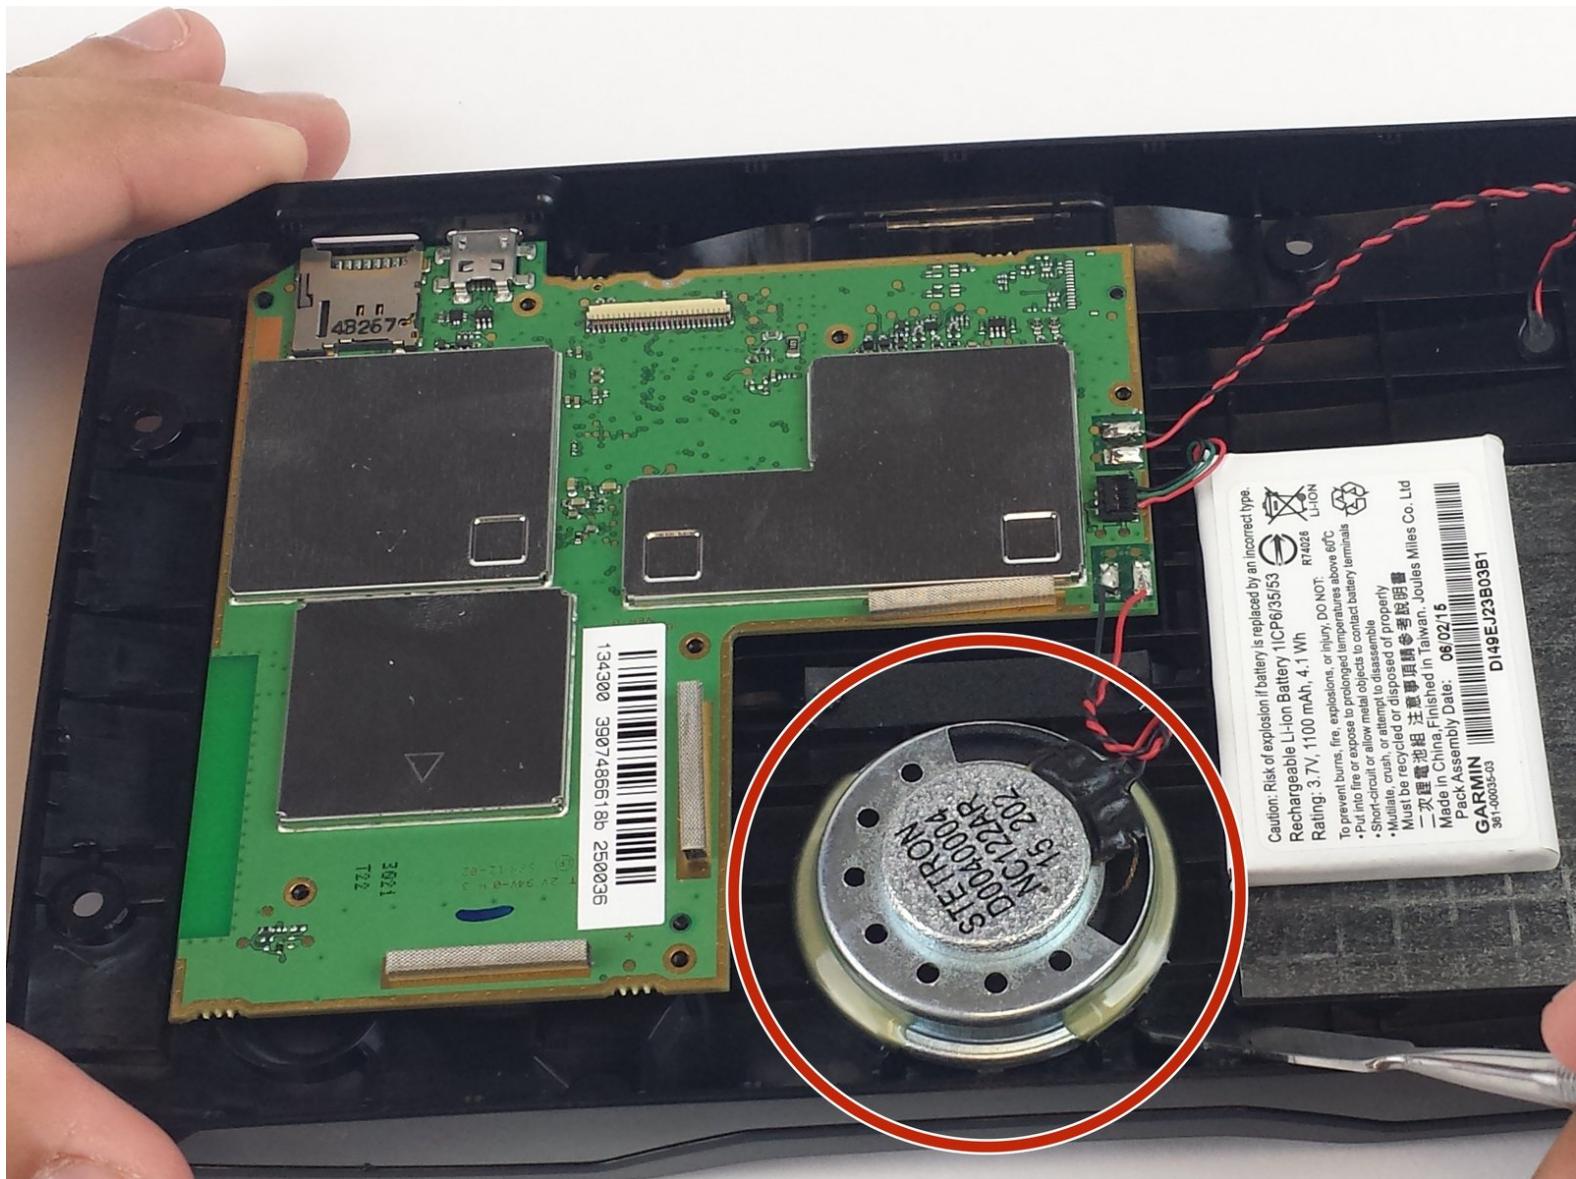

 **TOOLS:**

- [T6 Torx Screwdriver \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Back Panel Removal



- Turn the device screen down and using the screwdriver remove all eight screws from the back plate.

Step 2



- Place a nylon spudger in the seam between the front and back panel and carefully lift around the edge of the device.


Step 3



- Use the spudger to pry apart the screen from all around the device.

⚠ Gently lift the screen so not to disconnect the ribbon attaching the screen to the motherboard.



Step 4 — Speaker

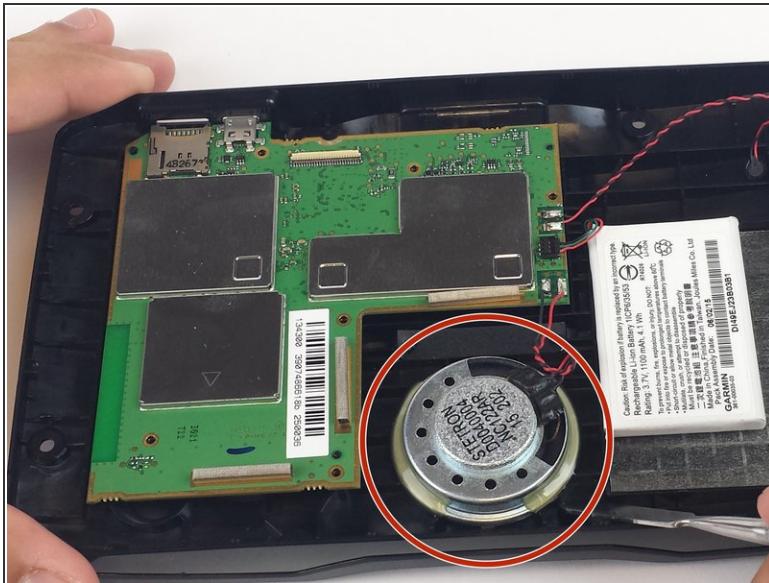

- Using the sharp side of the spudger, scrape away the adhesive surrounding the speaker.
- Slide the spudger beneath the speaker and pull it away from the case.

⚠ The regular black nylon spudger should be used whenever possible, especially around sensitive internal components.

Step 5

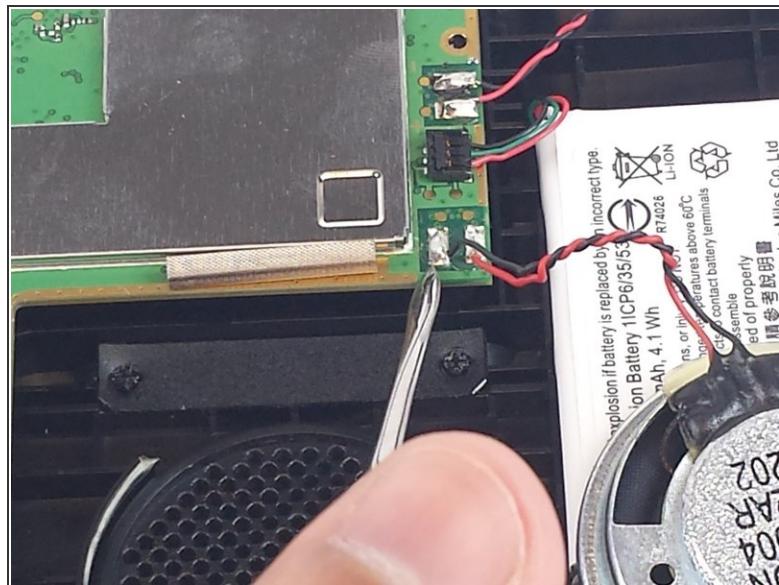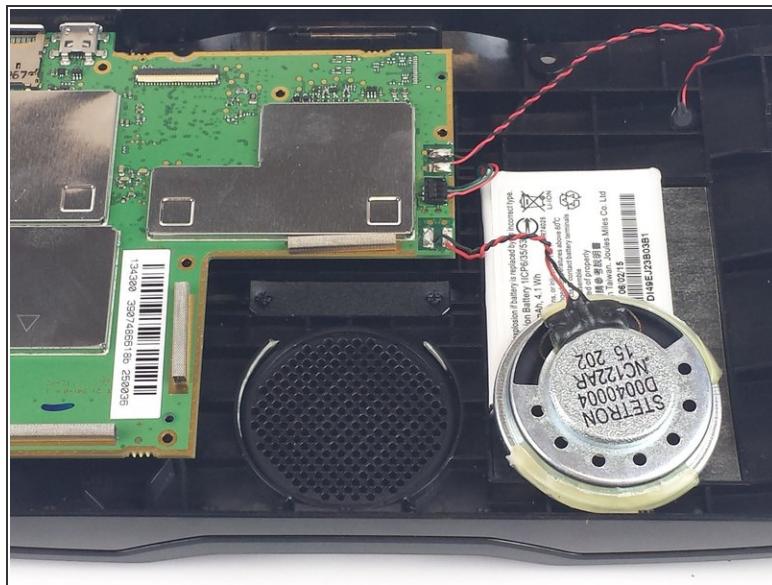

- Grasp the wire connecting the motherboard and pull the wires connecting it.

 Remember to wear an anti-static wrist strap when handling the motherboard.

To reassemble your device, follow these instructions in reverse order.