



# Garmin Etrex Vista CX Battery Replacement

How to replace Garmin Etrex Vista CX batteries.

Written By: Bradley Snead



## INTRODUCTION

This guide illustrates how to remove and replace the batteries for this device. In addition, this step is a prerequisite for multiple manuals regarding this device.

## Step 1 — Battery



- Place the device with the back cover facing up and the metal ring visible.

## Step 2



- Lift the metal ring and rotate it counter-clockwise as shown. This will unlock the cover.

## Step 3



- Remove the cover by lifting straight up to insert or remove 2 AA batteries.

To reassemble your device, follow these instructions in reverse order.