



# Garmin Forerunner 405 Button Replacement

Use this repair guide to replace a button on a Garmin Forerunner 405.

Written By: Kyle Kiwczak



## INTRODUCTION

This guide will walk you through the process of replacing a button on the Forerunner 405.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Unscrew backing




- Unscrew the four 6.35 mm Torx T5 screws securing the backing of the watch.

## Step 2 — Separate Component




- Pull the backing off the watch.

## Step 3 — Separate

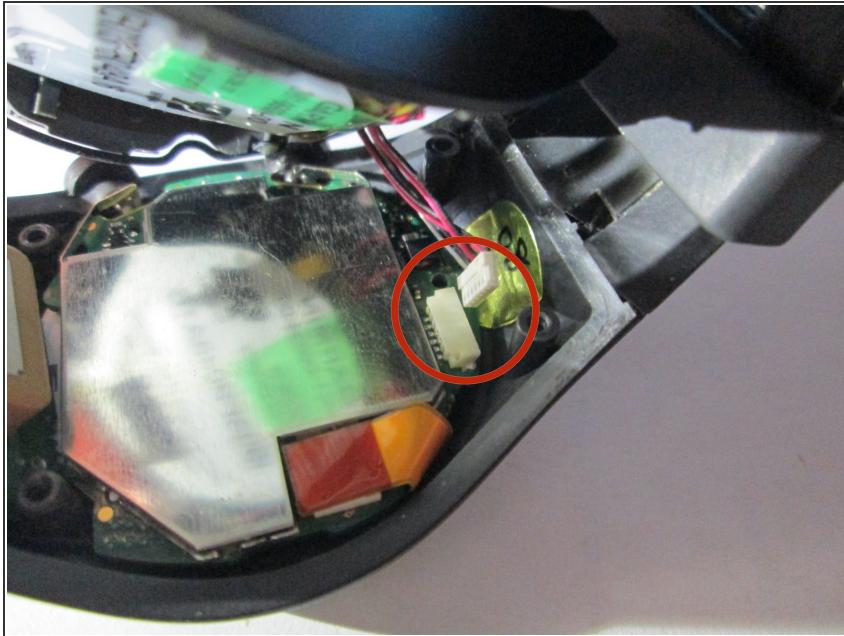

- Pull the battery wires out from the motherboard slowly.

## Step 4 — Unscrew

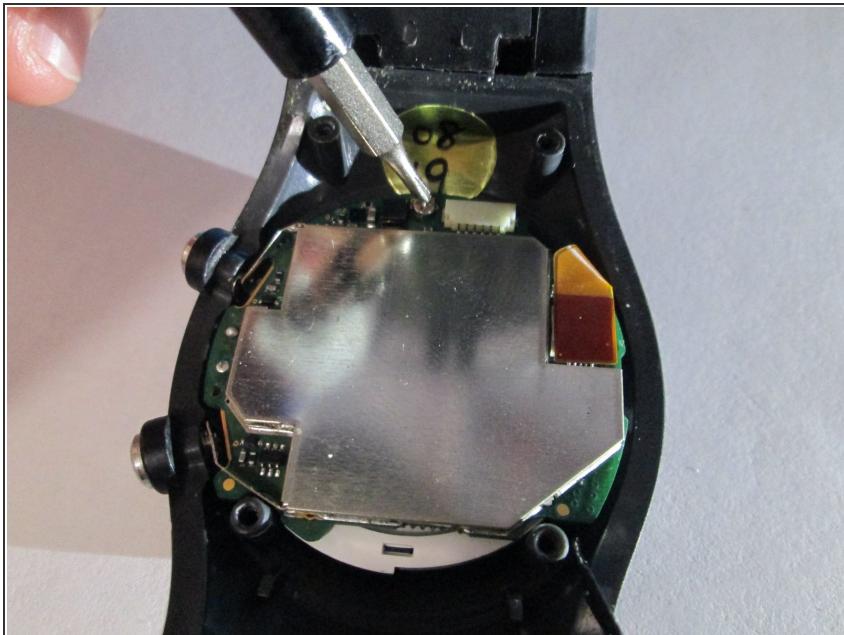

- Unscrew one 4 mm philips screw that attaches the motherboard using a PH000 screwdriver.
- Lift the motherboard out of the watch.

## Step 5 — Pull apart



- Push button in and pinch silver clip with tweezers.
- Pull silver clip off the pin it is on.
- Pull out button and replace.

To reassemble your device, follow these instructions in reverse order.