




# Garmin Nuvi 2455LMT Speaker Replacement

The speaker is easy to replace and only takes 10-15 minutes to open the device and access the logic board. This guide requires a prying tool and the Torx 4 screwdriver.

Written By: anthony della volpe

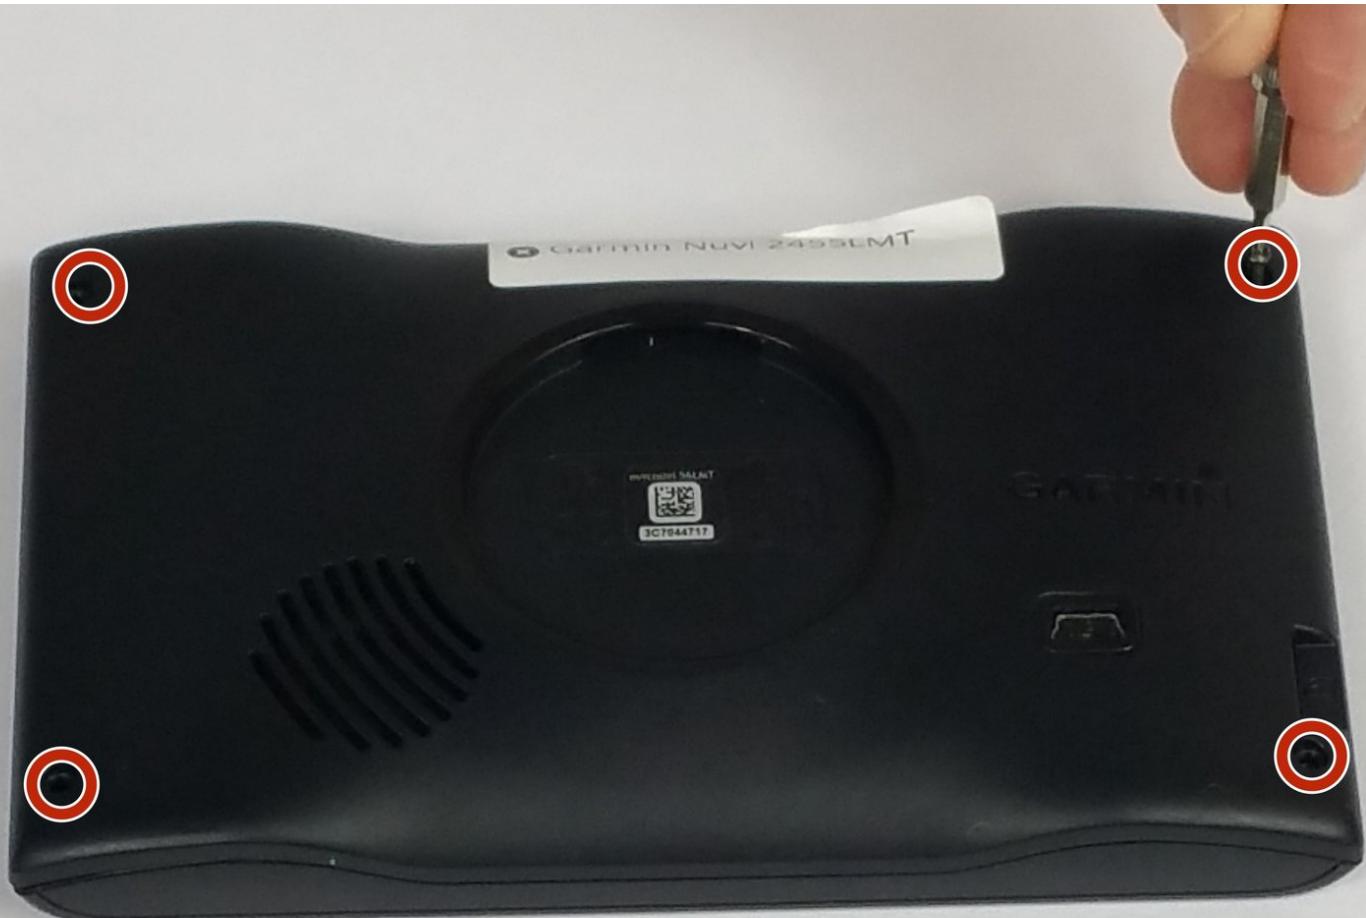

 **TOOLS:**

- [T4 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Speaker



- Remove the four 2.5mm screws from the back assembly with a Torx #04 Screwdriver. Holding the GPS with a free hand while unscrewing the small screws will help stabilize the device.
- Holding the GPS with a free hand while unscrewing the small screws will help stabilize the device.

## Step 2



- Use the plastic opening tool on all four sides of the device to open the Garmin Nuvi LMT2455 Back Panel.

## Step 3



- Open the device carefully being weary of the orange band that is going from the screen to the mother board.

## Step 4



- Using the plastic prying tool, carefully pry the speaker from the plastic backing.
- Remove the speaker from the motherboard by gently pulling on the wire.

To reassemble your device, follow these instructions in reverse order.