



# Garmin Nuvi 2455LMT Touch Screen Replacement

The touch screen replacement is very simple and only takes about 2-5 minutes to complete at most. This guide requires a plastic opening tool.

Written By: Torrance Williams



This document was generated on 2019-10-16 04:36:52 PM (MST).

## INTRODUCTION

This guide shows how to remove the touch screen on your Garmin Nuvi 2455LMT through the back panel assembly.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Back Panel Assembly



- Remove the four 2.5mm screws from the back assembly with a Torx #04 Screwdriver.
- Holding the GPS with a free hand while unscrewing the small screws will help stabilize the device.

## Step 2



- Use the plastic opening tool on all four sides of the device to open the Garmin Nuvi LMT2455 Back Panel.
- To properly remove the back cover assembly pry open both the back and sides of the assembly.

## Step 3



- Open the device carefully being wary of the orange band that is going from the screen to the motherboard.
- Remove the orange band by carefully lifting the lip that connects it to the motherboard.

## Step 4 — Touch Screen



- Locate the edge of the screen that fits into the plastic case
- To separate the connector, gently push the tip of a spudger under the clip.
- Then, swing the clip over to the other side of the socket, so that it lays flat against the cable.

## Step 5



- Use the plastic opening tool to wedge between the plastic cover and screen.
- Using your hands, gently push the front of the screen towards you to push the screen out of the casing.

To reassemble your device, follow these instructions in reverse order.