




# Garmin Nuvi 2557LMT Screen Replacement

Replace the screen on your Garmin Nuvi 2557LMT.

Written By: Monica Webber

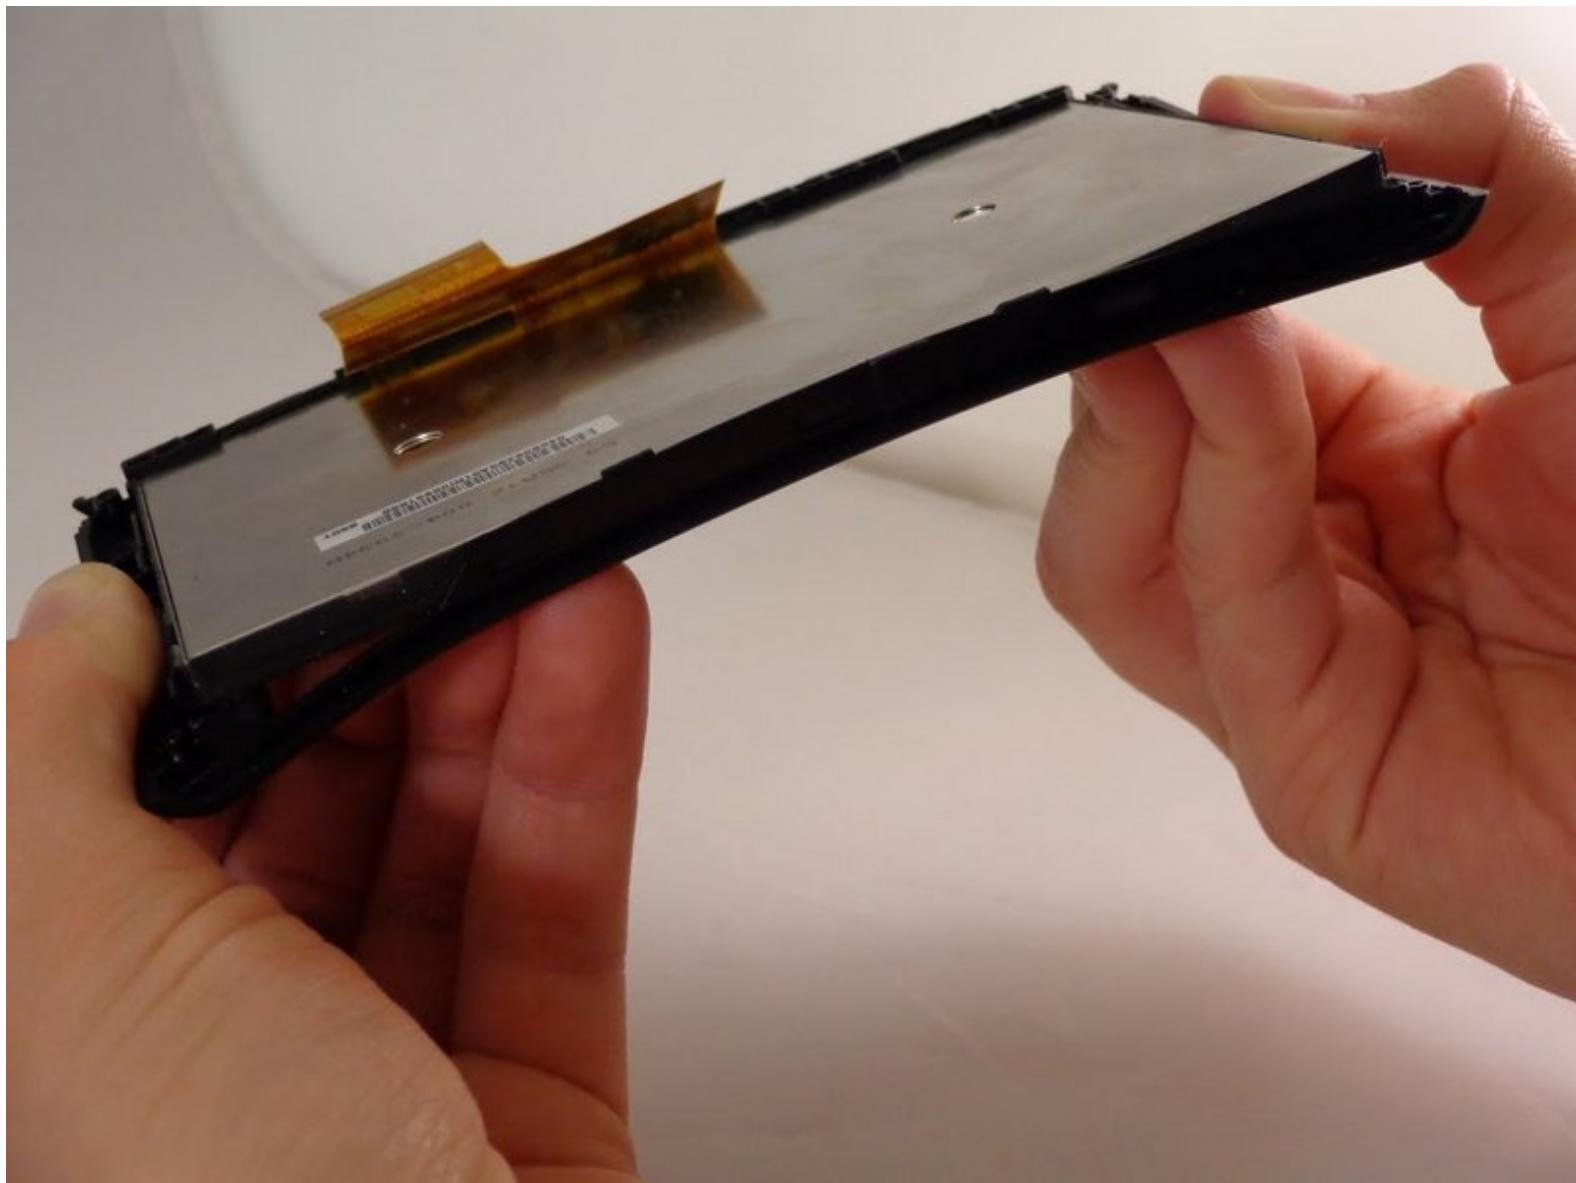

## INTRODUCTION

The tools needed are T5 Torx Screwdriver and a plastic opening tool in order to get into the device. After that - your hands will be enough.

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Garmin Nuvi 2557LMT Disassembly



- Using a T5 Torx screwdriver, remove four 6 mm screws from the four corners of the back of the device.

## Step 2



- Grip the device with your hands. Using your thumbs pull the nameplate towards yourself and off the device.

## Step 3



**i** There is a visible separation between the front and the back of the device.

- Using a plastic opening tool, pry open the device along this separation.


**!** Trying to open the device on the opposite side will rip the motherboard-display connector.

## Step 4



- Carefully pull apart the device by opening it up on the opposite side of the nameplate.

## Step 5 — Screen

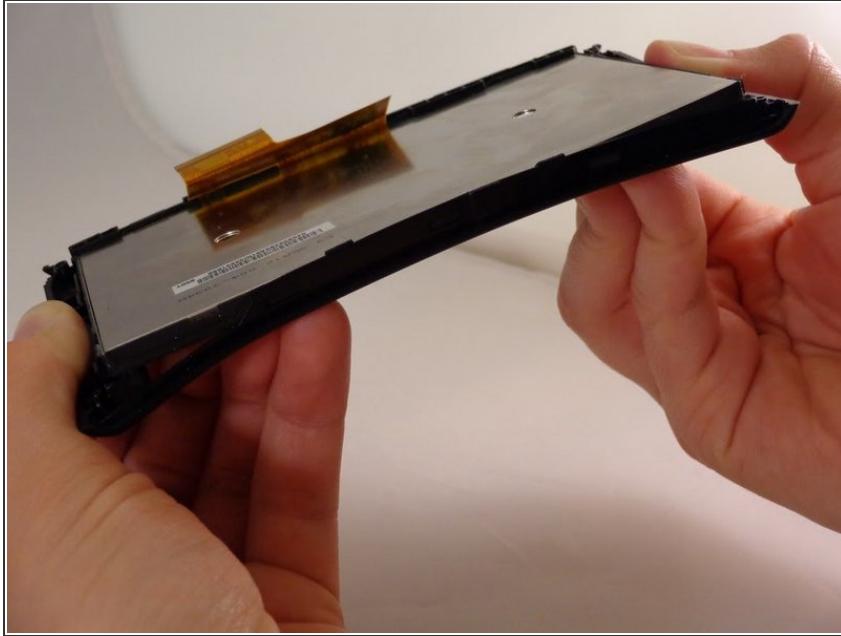

- With the screen facing down, firmly grip the sides of the screen frame and pop the screen out.

To reassemble your device, follow these instructions in reverse order.