



# Garmin Nuvi 2557LMT Speaker Replacement

Replace the speaker in your Garmin Nuvi 2557LMT.

Written By: Monica Webber



## INTRODUCTION

The tools you will need are a T5 Torx screwdriver, plastic opening tool, and soldering equipment. The speaker might be glued to the back of the device and is connected to the motherboard.

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Garmin Nuvi 2557LMT Disassembly



- Using a T5 Torx screwdriver, remove four 6 mm screws from the four corners of the back of the device.

## Step 2



- Grip the device with your hands. Using your thumbs pull the nameplate towards yourself and off the device.

## Step 3



**i** There is a visible separation between the front and the back of the device.

- Using a plastic opening tool, pry open the device along this separation.


**!** Trying to open the device on the opposite side will rip the motherboard-display connector.

## Step 4



- Carefully pull apart the device by opening it up on the opposite side of the nameplate.


## Step 5 — Speaker

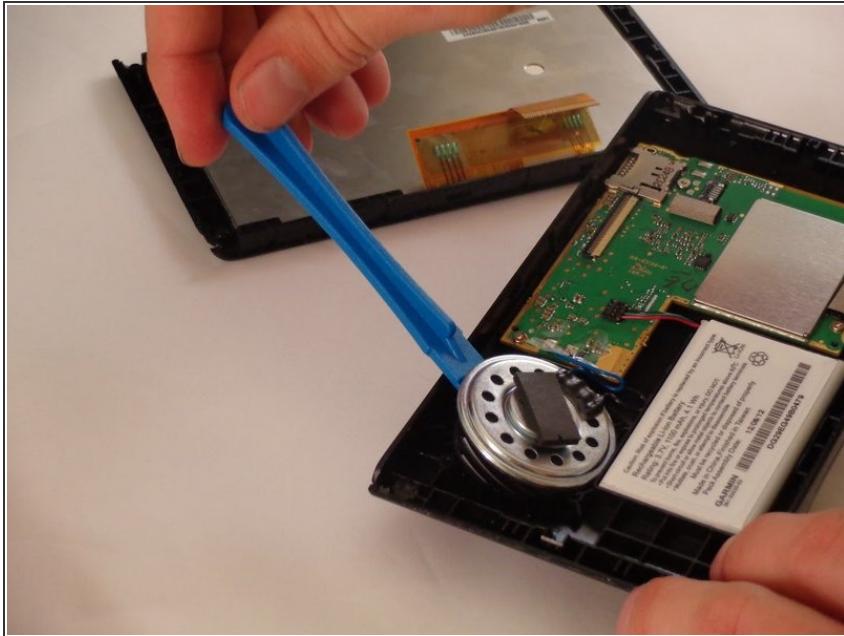

- Using a plastic opening tool, wedge the speaker from the device.

**⚠** Don't pull it out of the device too far. It is still connected to the motherboard wire.

## Step 6

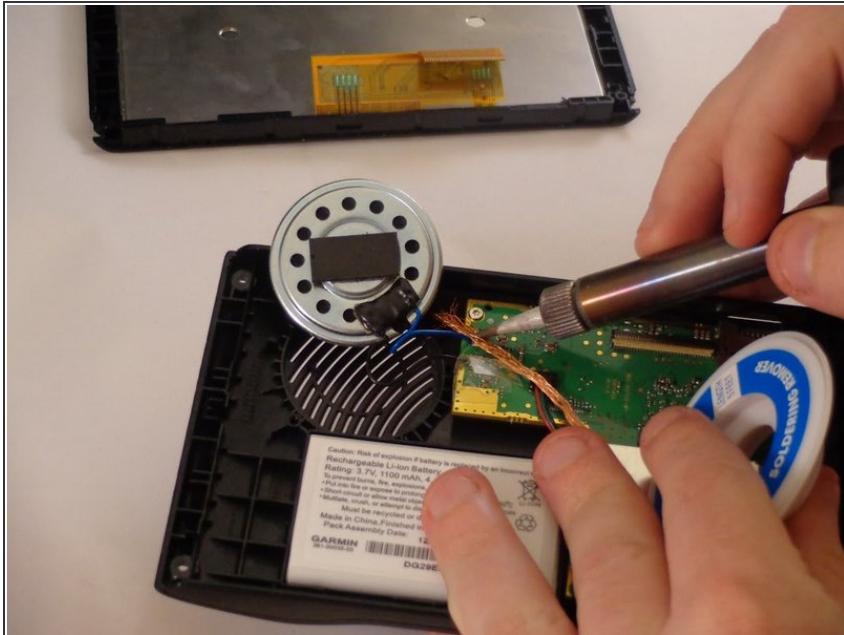

- Using a soldering iron, desolder the wire connection between the speaker and the device.

To reassemble your device, follow these instructions in reverse order.