


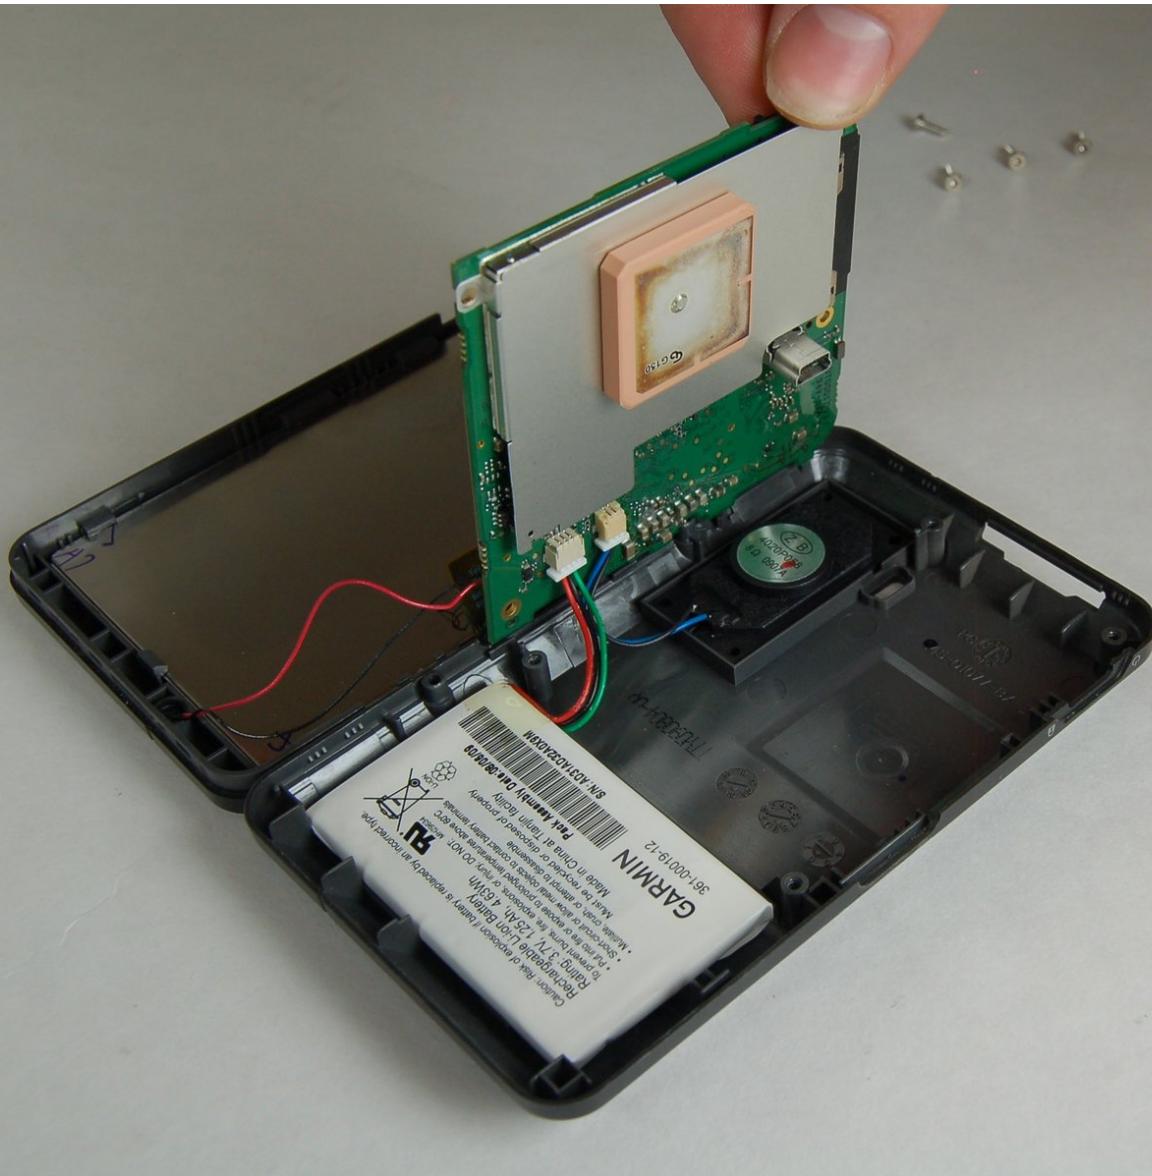

Garmin Nuvi 265WT Audio Replacement

Replace a dead or distorted speaker


Written By: Patricia Gonzalez



 **TOOLS:**

- [Spudger \(1\)](#)

Step 1 — Speaker

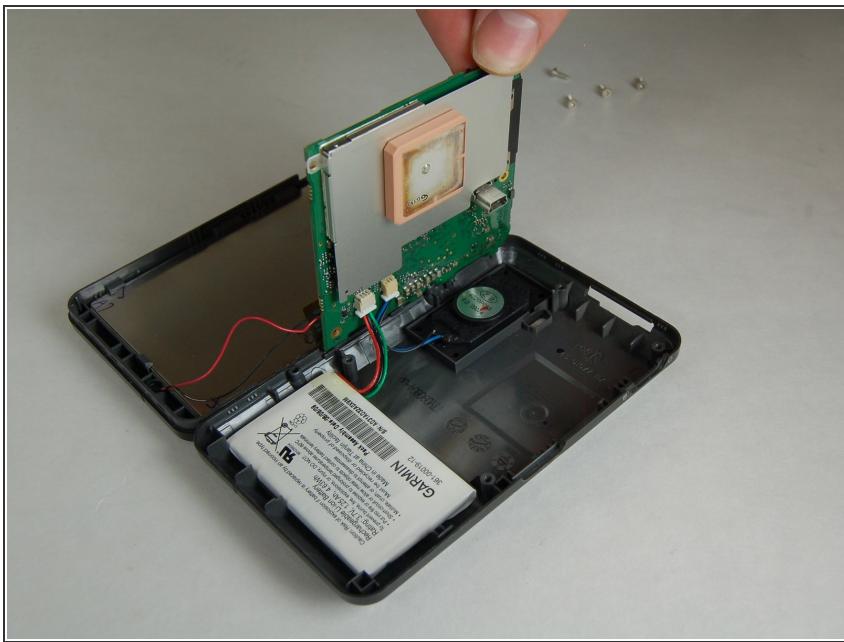

- Lift up the Mother Board

Step 2



- Slowly remove the Blue/Black wires to un clip the Mother Board.

Step 3



- Use the nylon spudger to remove the speaker.

! The regular black nylon spudger should be used whenever possible, especially around batteries and other sensitive internal components.

To reassemble your device, follow these instructions in reverse order.