



Garmin StreetPilot C330 Outer Casing Replacement

Opening up the device in order to perform repairs.

Written By: Adrian Leon



 **TOOLS:**

- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

Step 1 — Outer Casing



- Use a plastic spudger tool to remove the plastic frame.
- Insert the tool into the groove in the center of the top of the outer frame and lever it gently until it pops out.

Step 2



- Use a Phillips head screw driver to remove all four screws in the corners around the screen.
- ☒ Set the screws aside for later.

Step 3



- Gently pull from both ends to separate the front panel from the back.


⚠ Do not force the pieces apart wider than the length of the connecting wires or you will damage the wiring.

Step 4



- Locate the white wire clip. Gently unplug it using either your fingers or tweezers.

Step 5

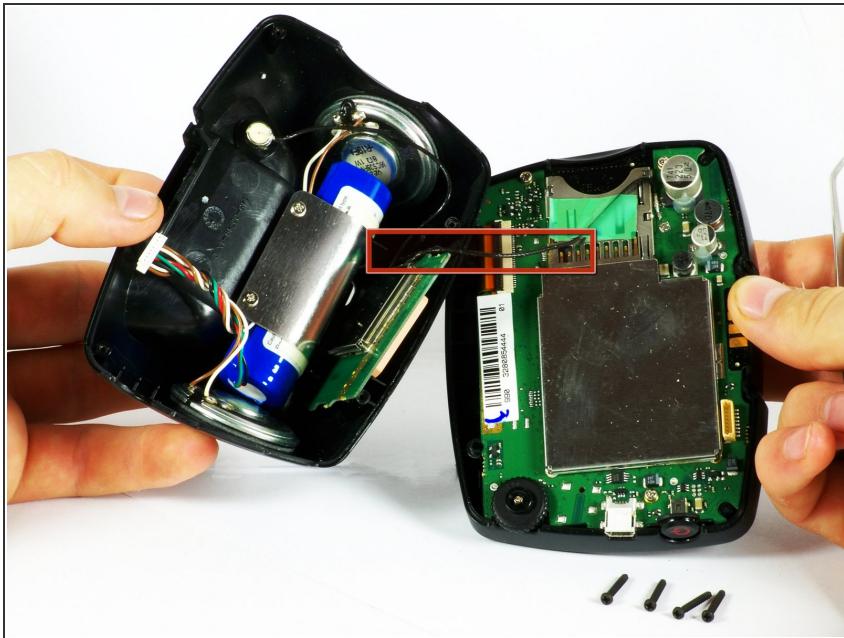

- Carefully expose both halves of the device.

⚠ Be sure to not pull the two halves apart too hard to avoid damaging the black wire.

Your device should be ready to use once more.