


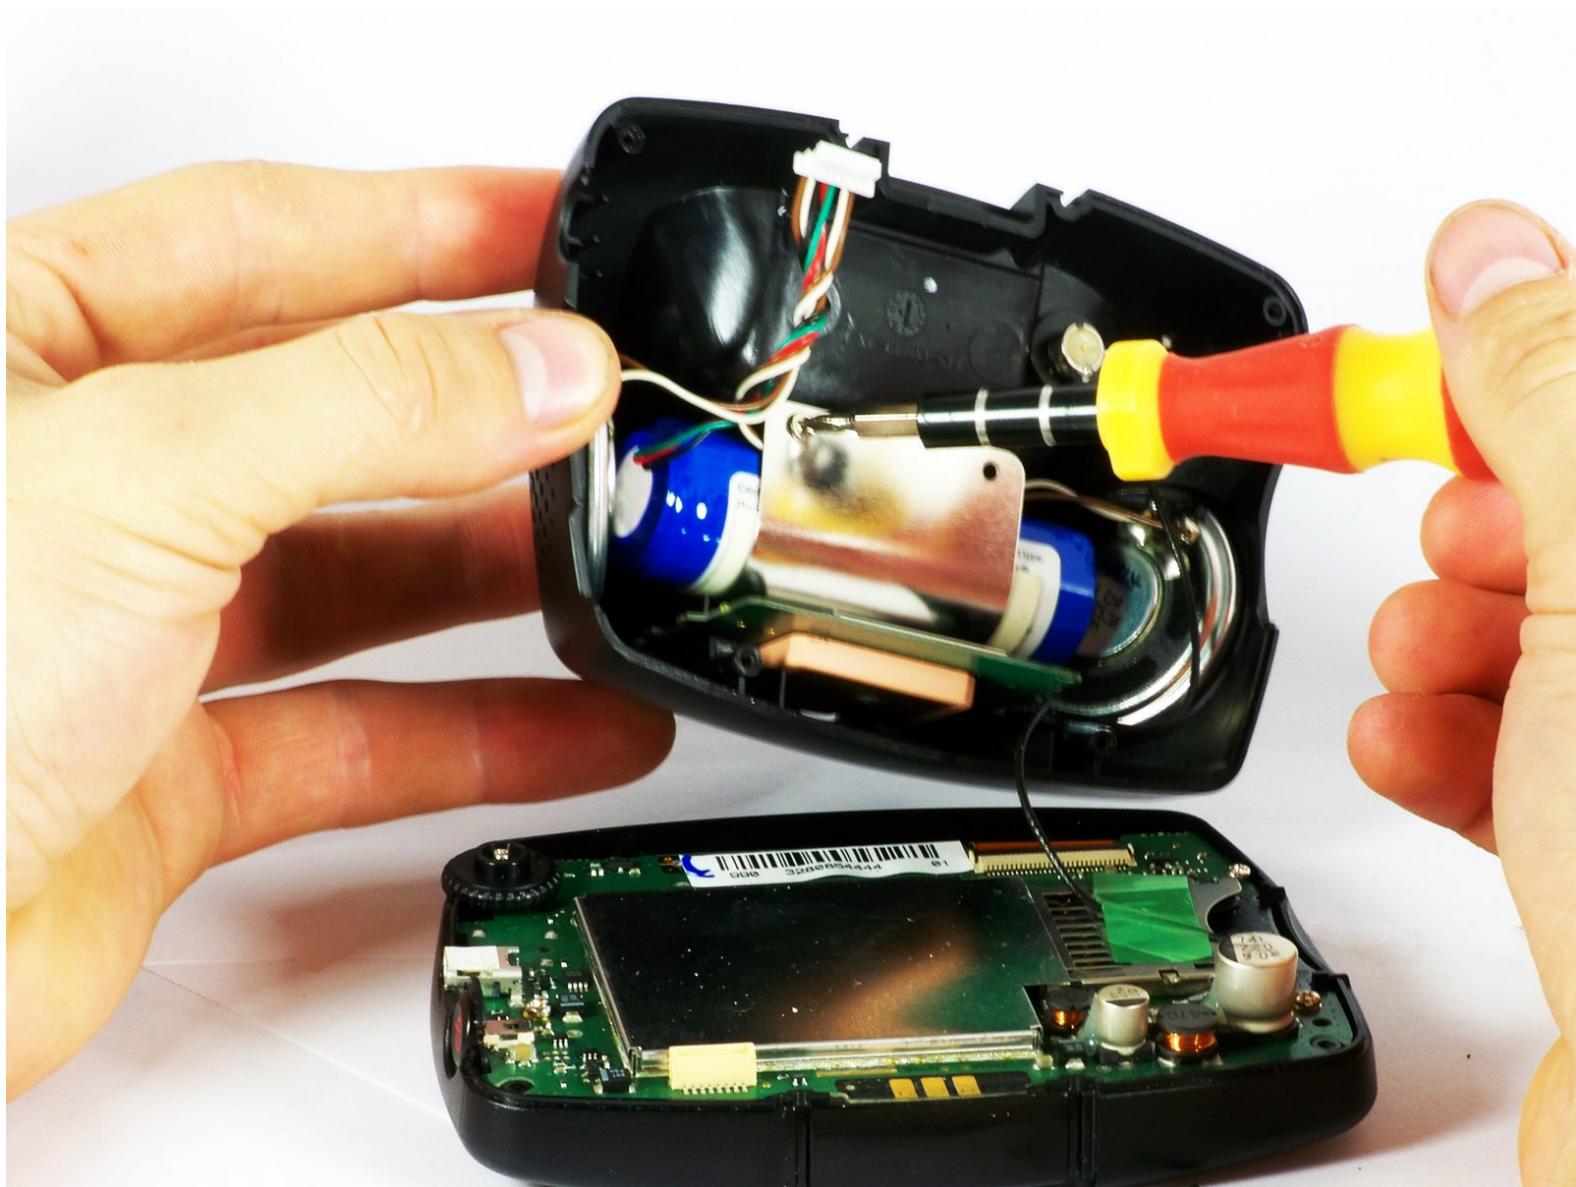

# Garmin StreetPilot c330 Battery Replacement

This repair guide will show you how to remove and replace the battery.

Written By: Adrian Leon



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)

 **PARTS:**

- [Garmin StreetPilot Battery](#) (1)

## Step 1 — Outer Casing



- Use a plastic spudger tool to remove the plastic frame.
- Insert the tool into the groove in the center of the top of the outer frame and lever it gently until it pops out.

## Step 2



- Use a Phillips head screw driver to remove all four screws in the corners around the screen.
- Set the screws aside for later.


## Step 3



- Gently pull from both ends to separate the front panel from the back.

**⚠** Do not force the pieces apart wider than the length of the connecting wires or you will damage the wiring.

## Step 4

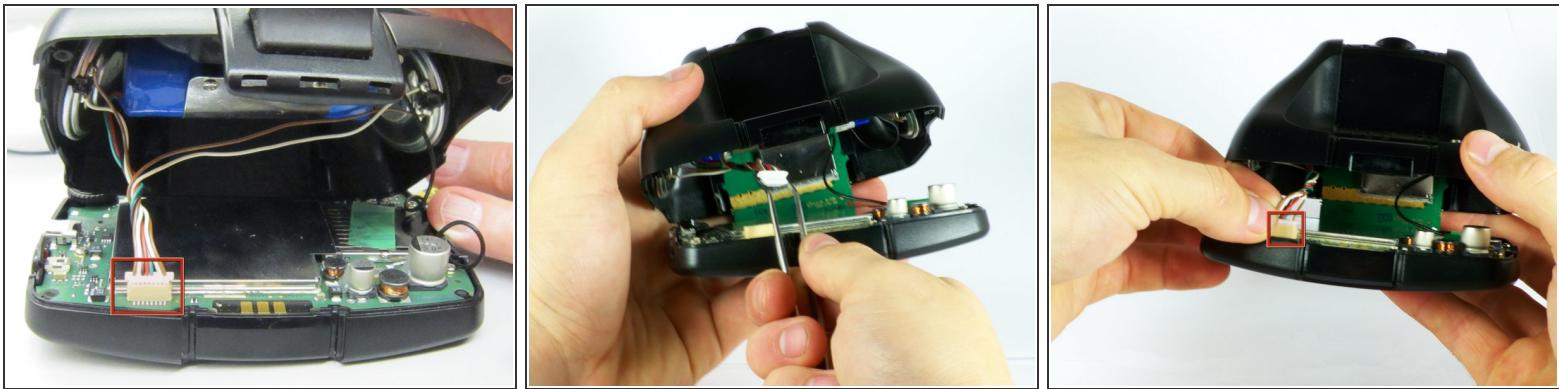

- Locate the white wire clip. Gently unplug it using either your fingers or tweezers.

## Step 5



- Carefully expose both halves of the device.


 Be sure to not pull the two halves apart too hard to avoid damaging the black wire.

## Step 6 — Battery



- Locate the battery bracket and two screws.
- Remove both screws.

## Step 7

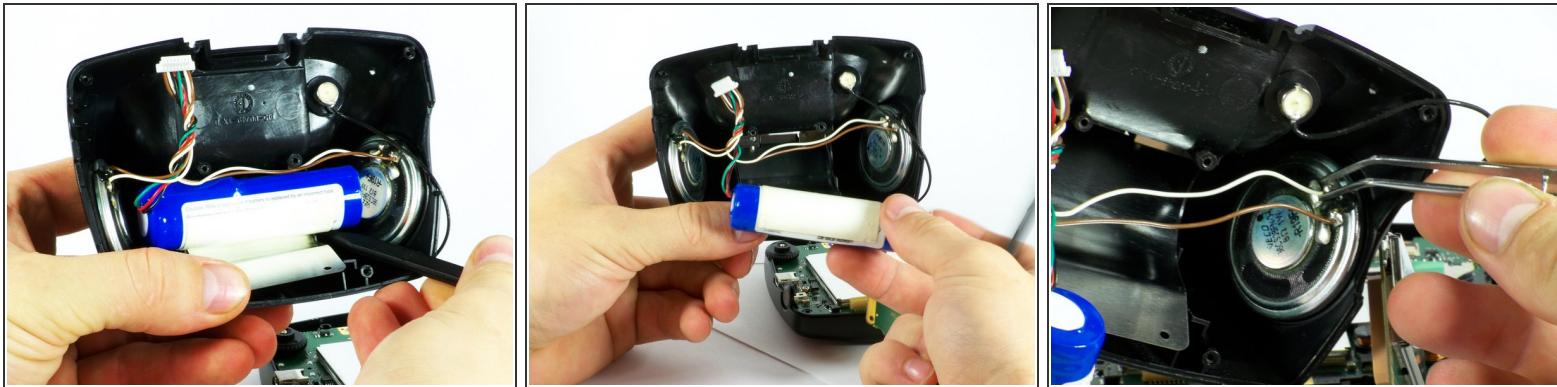

- Carefully peel the metal bracket away from battery.
- Pull the battery away from back cover.

*(i)* You may need to use a soldering iron and tongs to remove battery from the speakers.

To reassemble your device, follow these instructions in reverse order.