


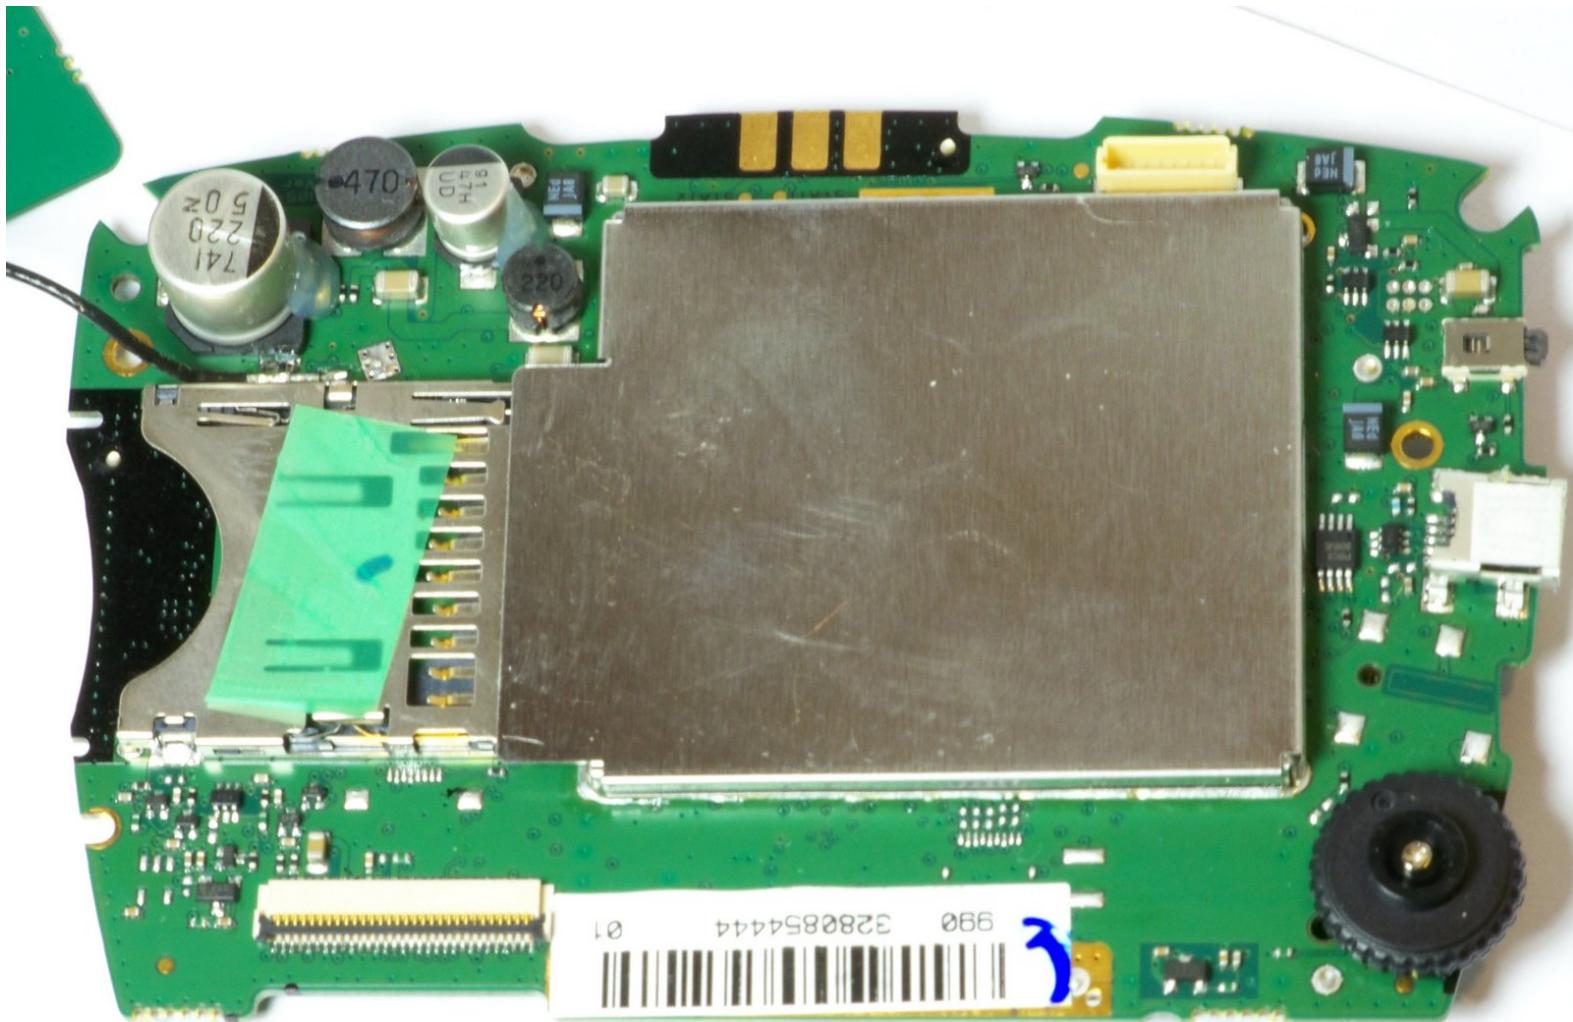

Garmin StreetPilot c330 Screen Replacement

This guide will show the user how to remove and replace the screen for the Garmin StreetPilot c330.

Written By: Adrian Leon



 **TOOLS:**

- [Tweezers \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Outer Casing



- Use a plastic spudger tool to remove the plastic frame.
- Insert the tool into the groove in the center of the top of the outer frame and lever it gently until it pops out.

Step 2



- Use a Phillips head screw driver to remove all four screws in the corners around the screen.
- Set the screws aside for later.

Step 3



- Gently pull from both ends to separate the front panel from the back.


⚠ Do not force the pieces apart wider than the length of the connecting wires or you will damage the wiring.

Step 4



- Locate the white wire clip. Gently unplug it using either your fingers or tweezers.


Step 5

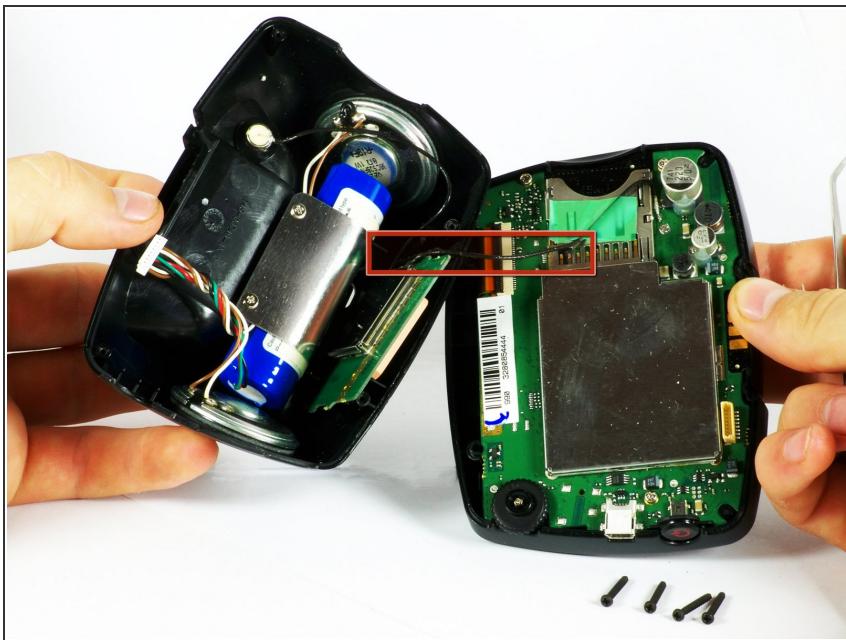

- Carefully expose both halves of the device.

⚠ Be sure to not pull the two halves apart too hard to avoid damaging the black wire.


Step 6 — Screen

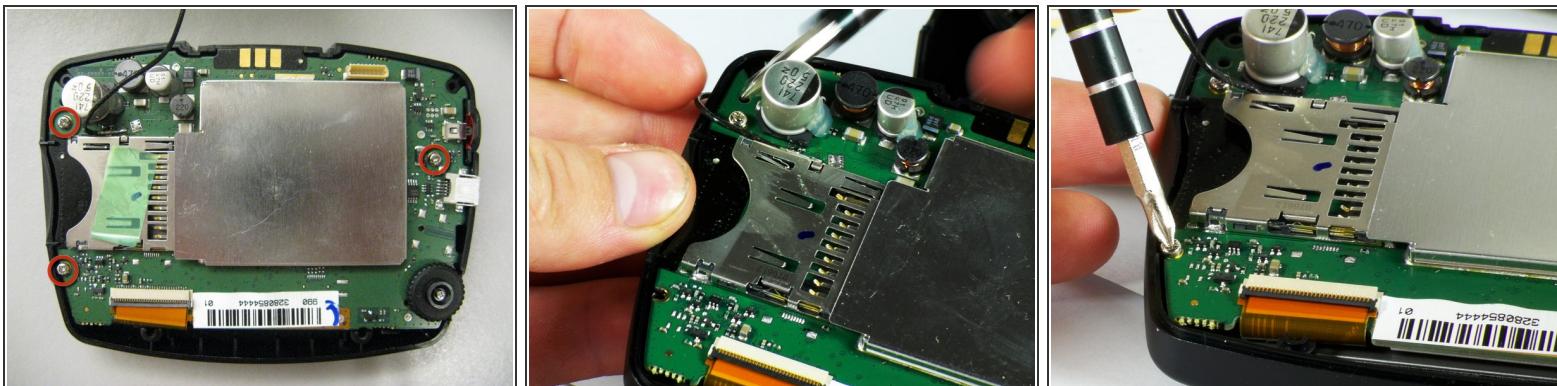

- Locate the three screws holding the motherboard in place.
- Remove screws.


📌 Set screws aside in a safe place.

Step 7

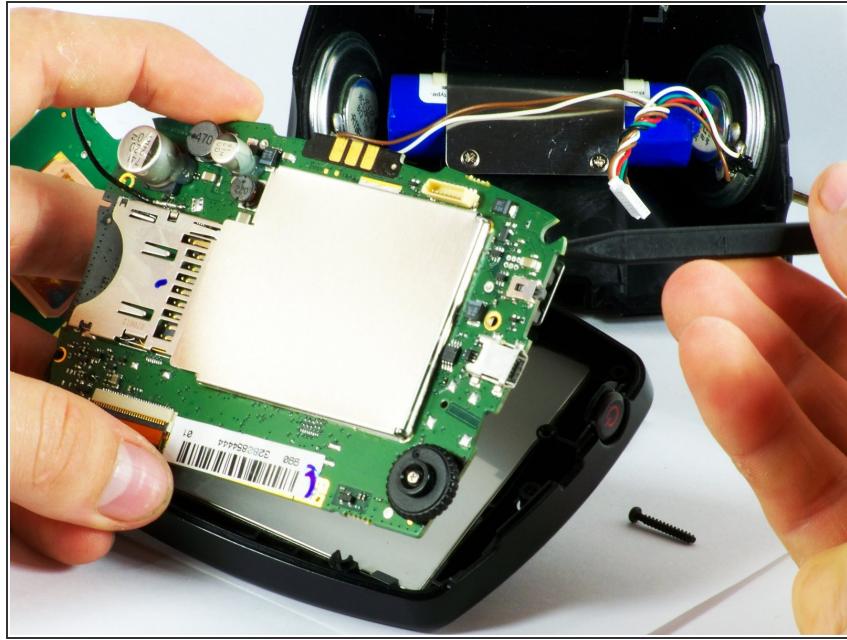

- Use Spudger to lift up motherboard.

Step 8

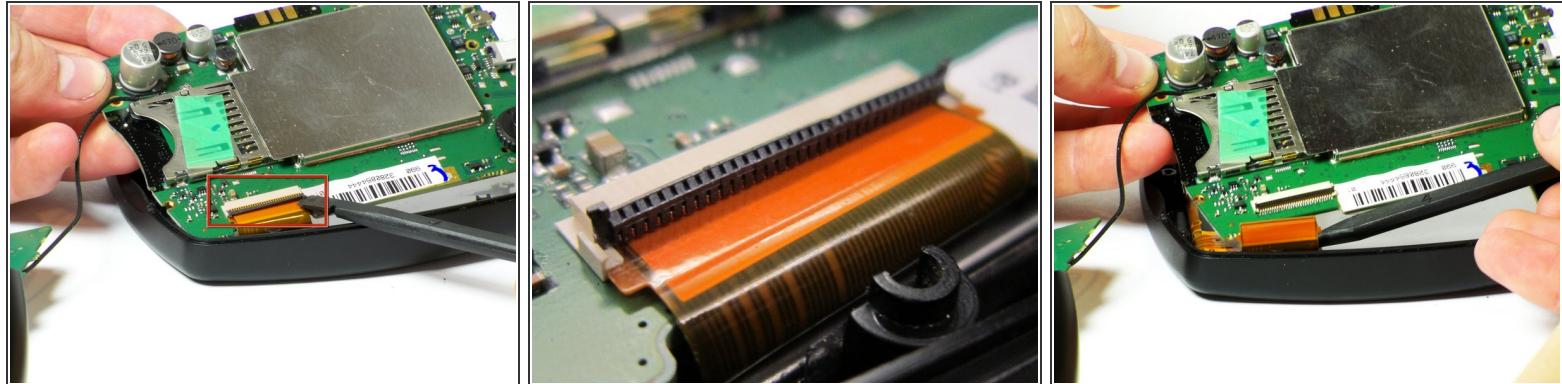

- To remove the ribbon cable, lift the black latch using the spudger tool.
- Separate the connection using either your fingers, tweezers, or the spudger.

Step 9



- Slide the spudger tool under the first flexible tab located on the right side of the bottom of the screen.
 - The tab is denoted by a red box in the photo.
 - There are two tabs at the top of the screen that are not flexible
- Rotate the spudger outward until the tab is no longer holding the screen.
- Push the screen out from the front.

Step 10



- Find the second flexible tab near the screen's wires and slide spudger under tab.
- *(i)* The tab is denoted by a red box in the photo.
- Rotate spudger outward until the tab is no longer holding the screen.
- Push the screen out from the front.

Step 11





- Separate the screen from the front cover.

Step 12




- Have your new screen ready to insert, making sure it is fully unwrapped.
- Find the tabs used to secure the screen as highlighted in the photo.
- Slide the bottom of the screen under the permanent tabs.
 - The permanent tabs are denoted by blue boxes in the photo.
- Use the spudger tool to raise the flexible tabs in order to reinsert the screen completely into the front cover.

Step 13

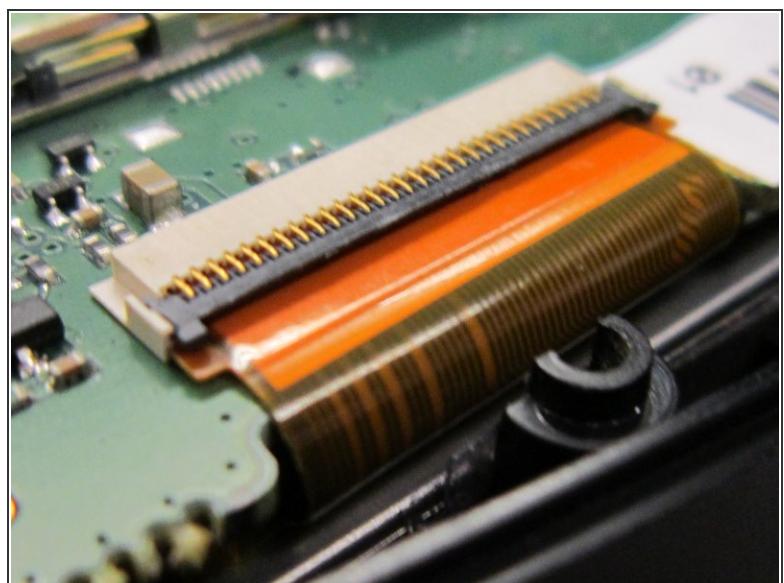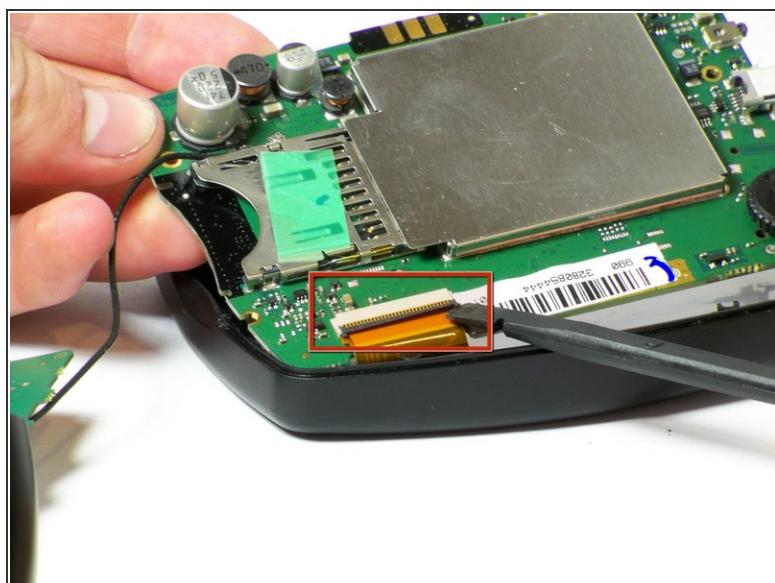

- Reinsert the ribbon cable into the slot you removed it from.
- Lower the black latch using the spudger tool.

Step 14

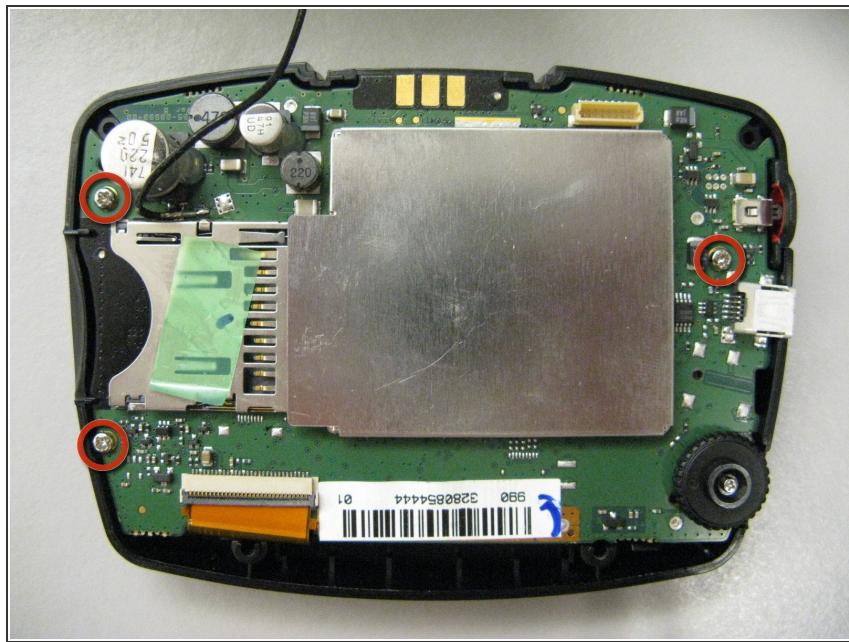

- Reattach the motherboard with the three screws you removed previously.
- Use the silver screws.

Step 15



- Locate the white wire clip.
- Plug it back in.

Step 16



- Screw the front panel back onto the base using the four screws you removed in step 2.
- Use the black screws.

Step 17



- Gently pop the plastic frame back into place.

Your device is now ready for normal use.