


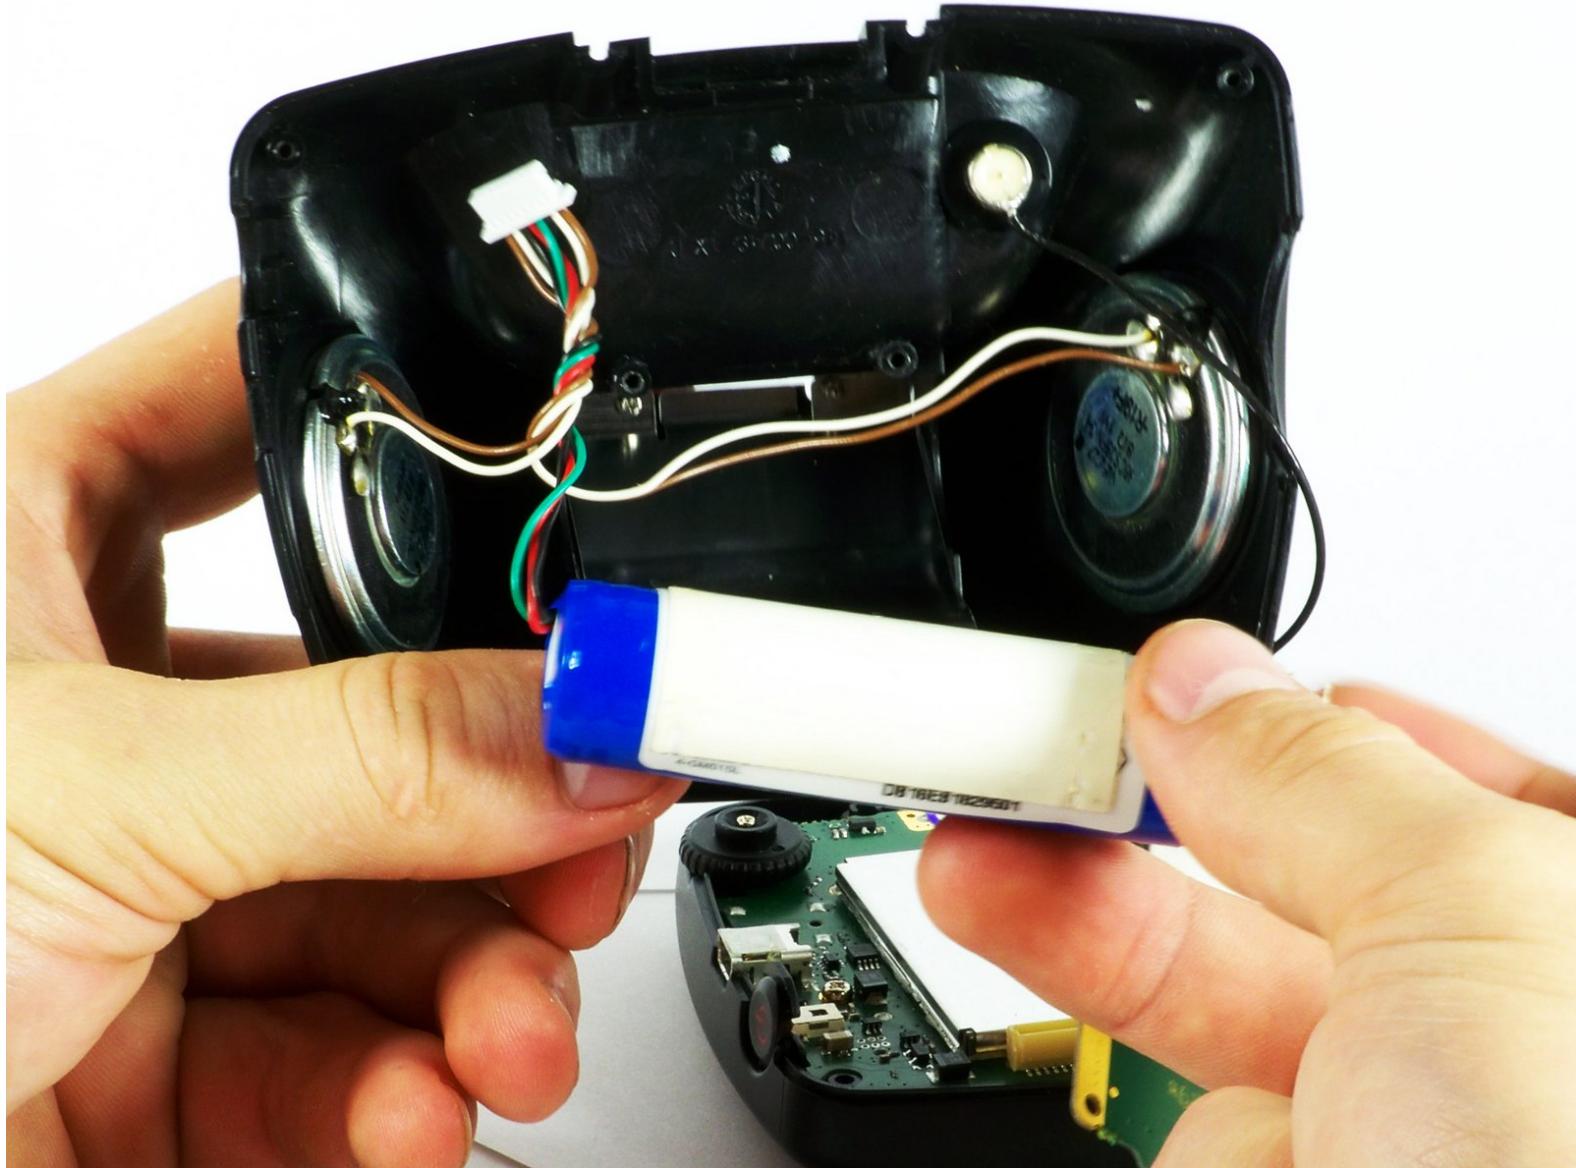

Garmin StreetPilot c330 Speakers Replacement

This repair guide will show you how to remove and replace the speakers.

Written By: Michael



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Workstation](#) (1)

Step 1 — Outer Casing



- Use a plastic spudger tool to remove the plastic frame.
- Insert the tool into the groove in the center of the top of the outer frame and lever it gently until it pops out.

Step 2



- Use a Phillips head screw driver to remove all four screws in the corners around the screen.
- Set the screws aside for later.


Step 3



- Gently pull from both ends to separate the front panel from the back.

⚠ Do not force the pieces apart wider than the length of the connecting wires or you will damage the wiring.

Step 4

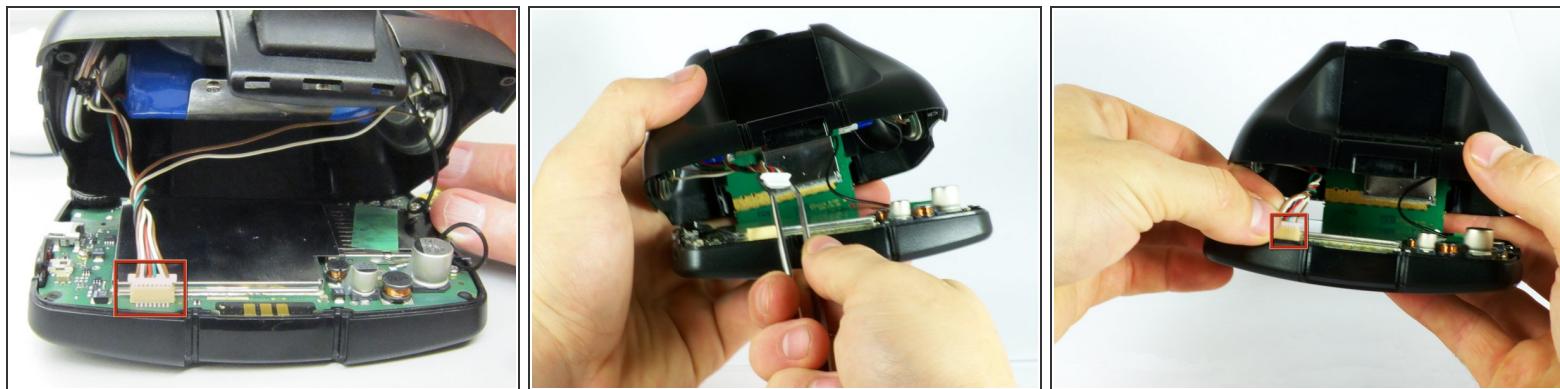

- Locate the white wire clip. Gently unplug it using either your fingers or tweezers.

Step 5



- Carefully expose both halves of the device.


⚠ Be sure to not pull the two halves apart too hard to avoid damaging the black wire.

Step 6 — Battery



- Locate the battery bracket and two screws.
- Remove both screws.

Step 7

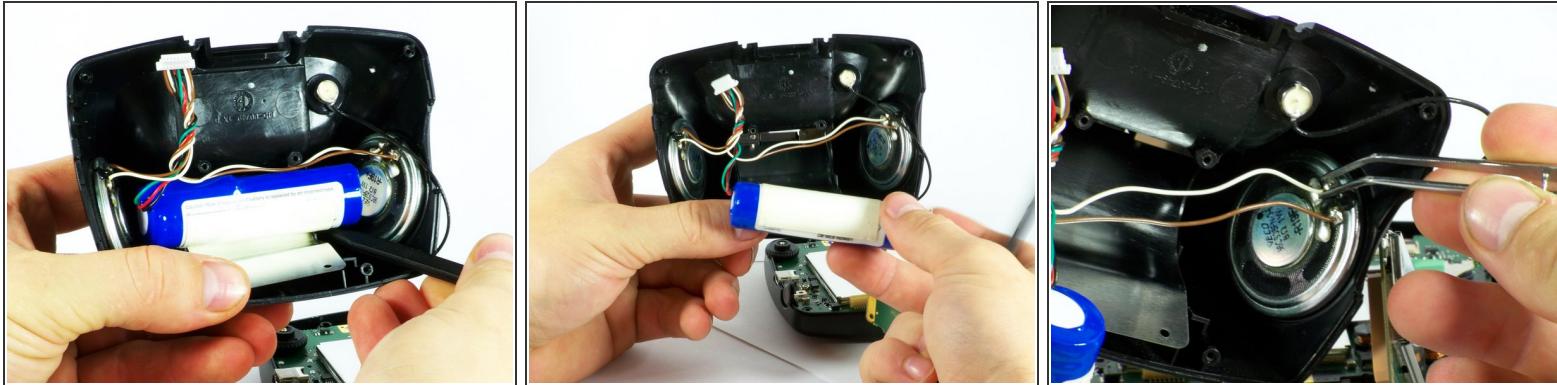

- Carefully peel the metal bracket away from battery.
- Pull the battery away from back cover.

(i) You may need to use a soldering iron and tongs to remove battery from the speakers.

Step 8 — Speakers



- Carefully use spudger to pry speakers from outer casing.
- Once removed, you may use a soldering iron to remove wires from speakers.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-17 04:12:20 PM (MST).

