



Gateway 3545GZ RAM Replacement

This guide demonstrates how to upgrade and/or replace the RAM (or memory) in the Gateway 3545GZ.

Written By: Nathan Parr



 **TOOLS:**

- Phillips #1 Screwdriver (1)

Step 1 — RAM



- Unscrew the panel with a PH1 Phillips-Head screwdriver located at the bottom center of the notebook and remove to allow clear access to the RAM.
- (i)* The screw length is 7mm.

Step 2



- Using your thumbs, simultaneously press the two silver tabs on the outer edges of the RAM.
- Next, remove the card, and insert its replacement.

To reassemble your device, follow these instructions in reverse order.