



Gateway 600YGR DVD Disc Drive Replacement

This guide will walk you through the steps required to replace the disk drive.

Written By: Brent Bachelor



INTRODUCTION

This guide provides the step by step directions for removing and replacing a damaged DVD disk drive. There are no prerequisite guides that need to be completed in order to use this guide. There are no tools required to complete this guide.



PARTS:

- [Gateway600YGR DVD Disk Drive \(1\)](#)

Step 1 — DVD Disc Drive



- Turn your device over so the bottom is face up and locate the DVD disc drive.

Step 2



- Slide the tab indicated in red to the right.
- Simultaneously push the button indicated in orange.
- The DVD disk drive should partially eject itself.

Step 3



- Pull the DVD disk drive out.
- ☒ For reinstallation slide new DVD disc drive into slot until a click is heard.

To reassemble your device, follow these instructions in reverse order.