




Gateway ID49C07U DVD Drive Replacement

Written By: Patrick McGrail

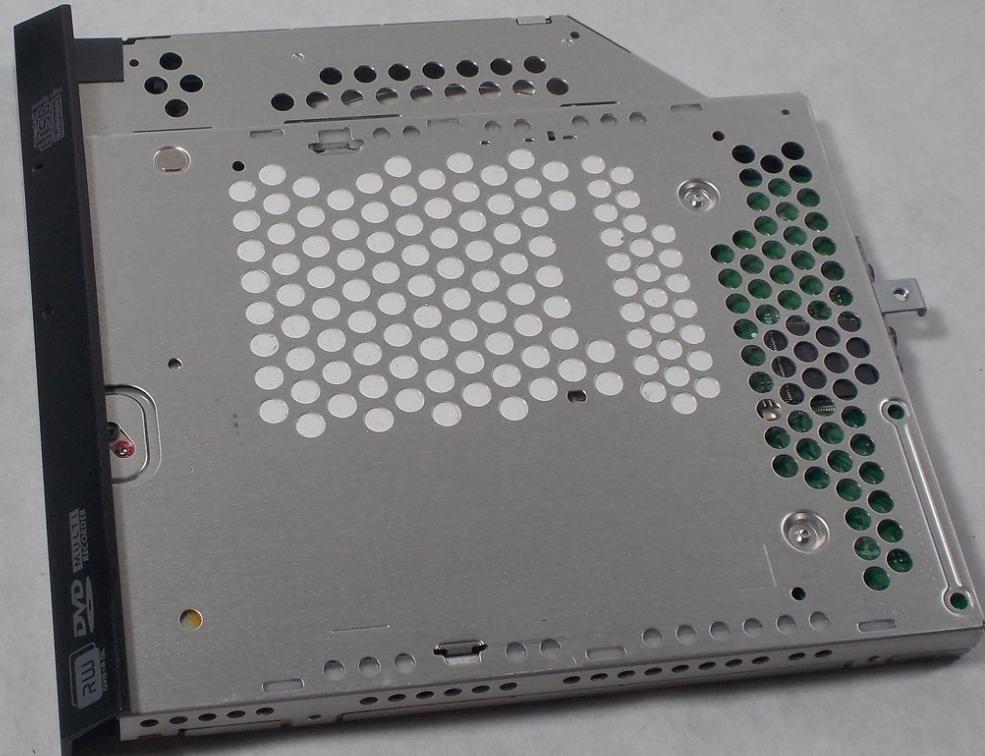

 **TOOLS:**

- [JIS Driver Set \(1\)](#)
 - [J0](#)
 - [Metal Spudger \(1\)](#)
-

Step 1 — Battery




- Turn the laptop over so the bottom of the device is facing upwards with the hinge facing away from you.

Step 2



- Locate the switch on the top left of the laptop labeled with a padlock symbol.
- Flip the switch in the direction of the unlocked padlock symbol.

Step 3

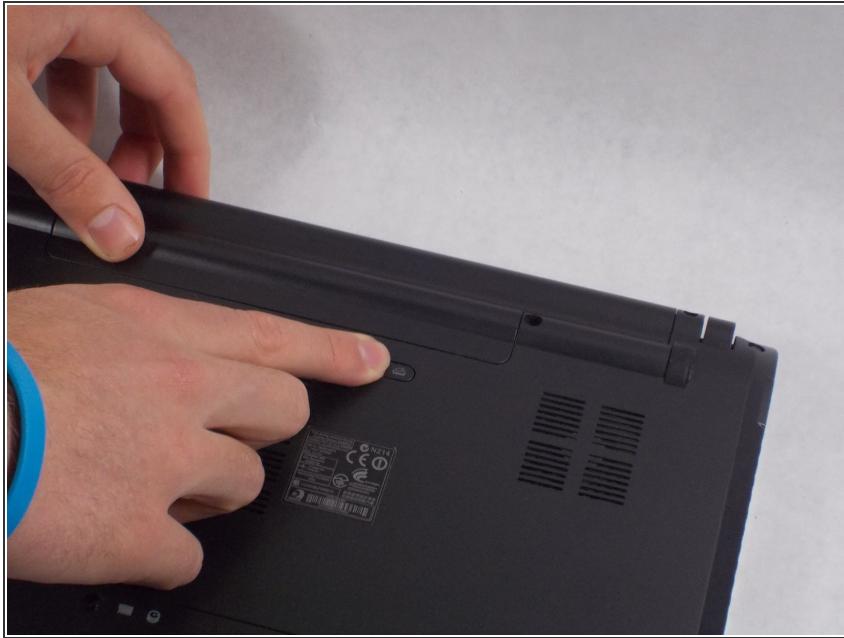

- Locate the switch that releases the battery and slide it to the right.

Step 4



- While holding the release switch to the right, pull the battery away from you.

Step 5 — DVD Drive



- Locate screw towards the center of the device and unscrew it

Step 6



- Use a metal spudger to pry off the DVD drive.
- Once loosened, use your hand to pull the DVD drive out.

To reassemble your device, follow these instructions in reverse order.