



Gateway NV52 Optical Disc Drive Replacement

This guide will give instructions on how to remove the Optical Disc Drive.

Written By: Tim En



INTRODUCTION

The Optical Disc Drive is not required to be taken out to have more access to the other components of the laptop.

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Heavy-Duty Spudger** (1)

Step 1 — Optical Disc Drive



- Remove the single 3/16" screw with the Phillips #0 Screwdriver that secures the Optical Drive.

Step 2



- Slightly wiggle the Optical Drive from the laptop using the Heavy Duty Spudger.

Step 3



- Using your hands, gently slide the Optical Drive out of the slot.
- Set the Optical Drive in a safe designated area.

To reassemble your device, follow these instructions in reverse order.