




Gateway NV59C66u RAM Replacement

This will show the user how to disassemble and access the ram directly

Written By: Jackson Gandee

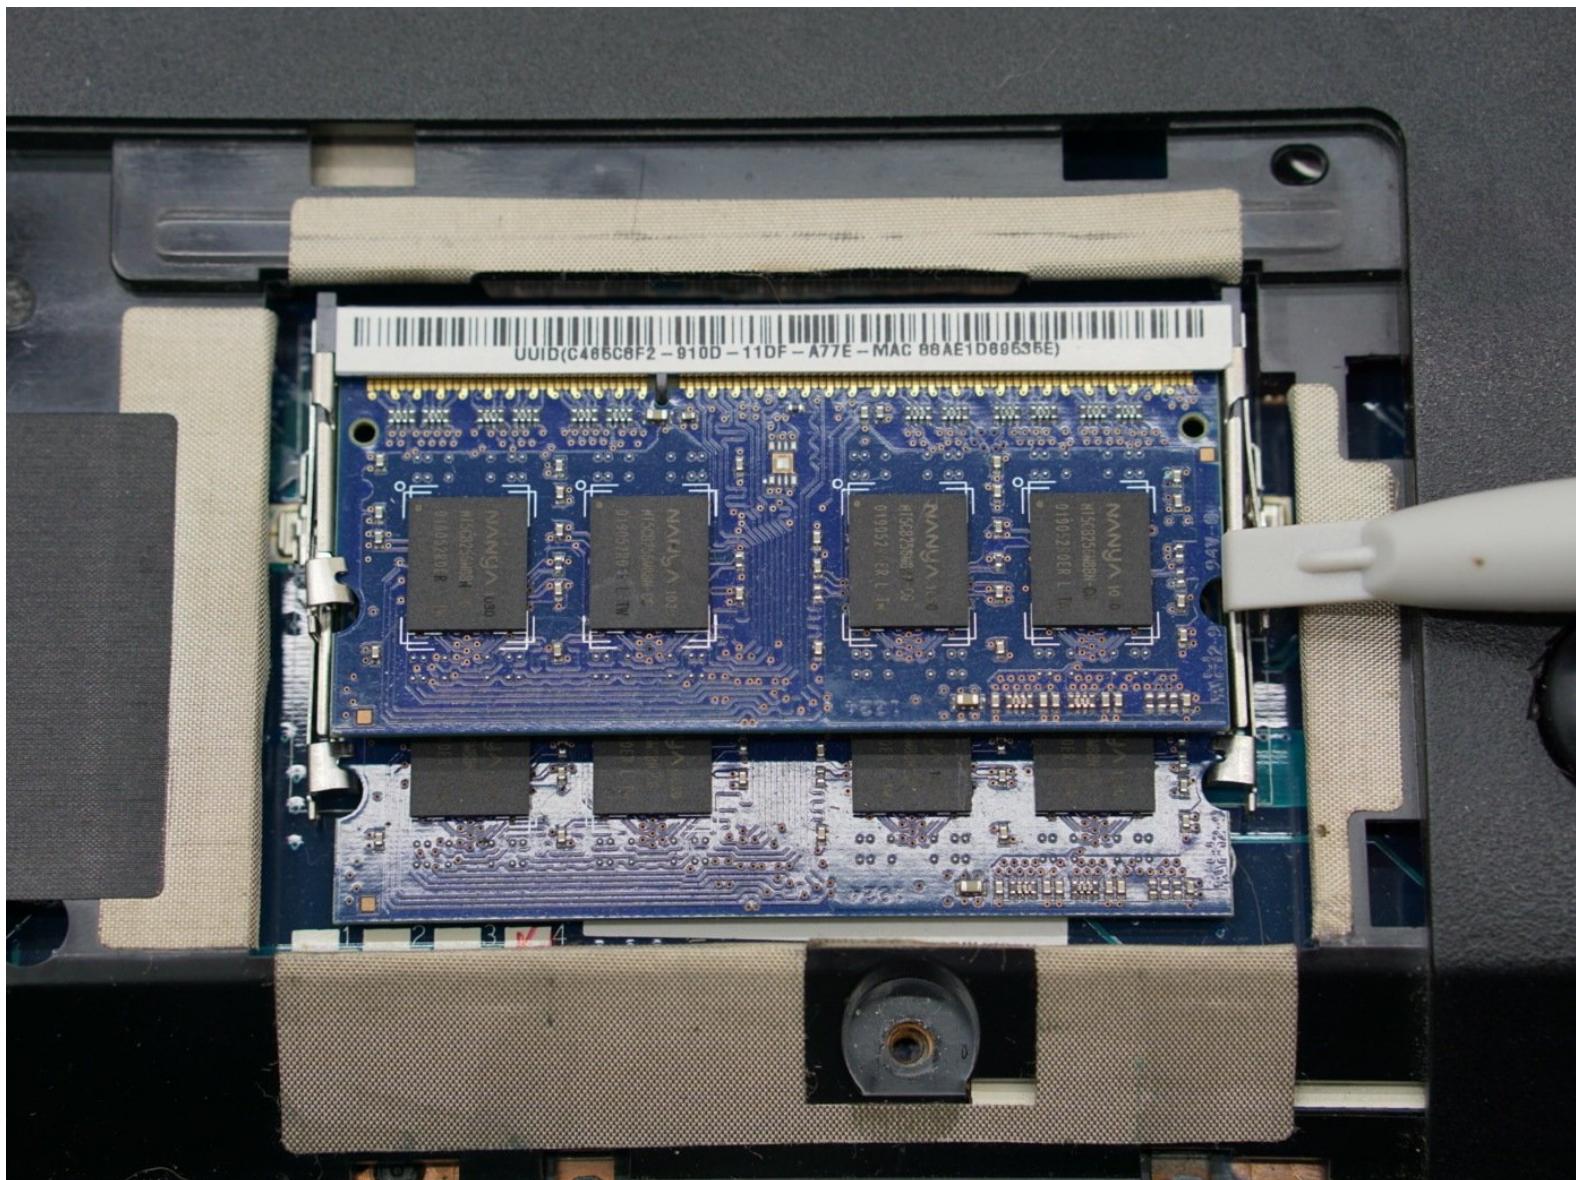

 **TOOLS:**

- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — RAM





- Remove the four Phillips #0 screws from the back cover.

Step 2




- Gently remove the cover with a plastic opening tool to gain access to the RAM.

Step 3

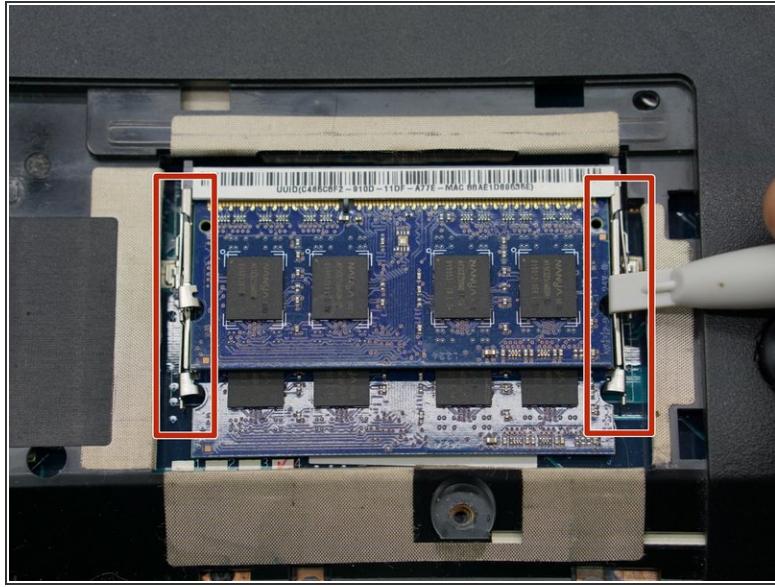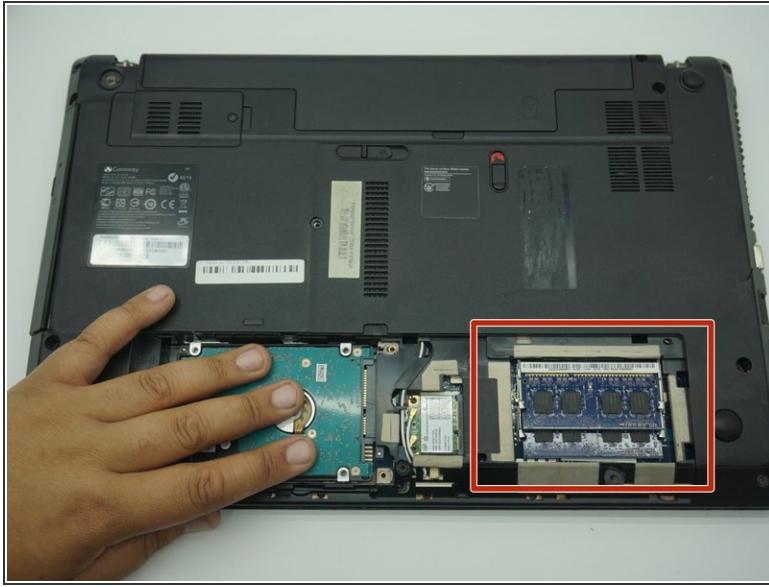

- Free the RAM by unlatching the holders. The two arms on either side of the RAM card should be pried away from one another.
- *(i)* The RAM will then pop up to rest at an angle to the laptop.

Step 4

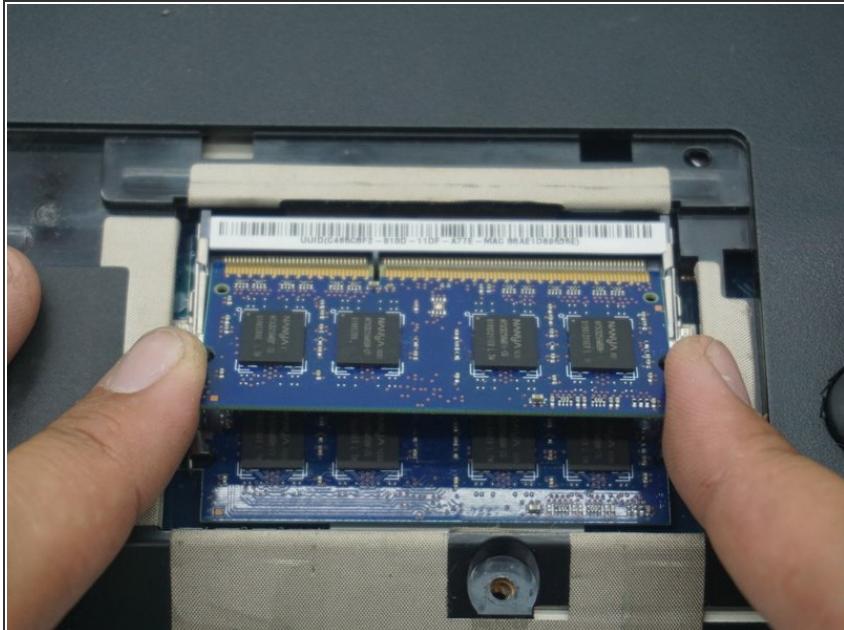

- Slide the RAM out from the port.

To reassemble your device, follow these instructions in reverse order.