



# General Electric Create Jason Wu Casing Disassembly

In order to access many of the camera's components, the plastic casing must be completely removed from both sides.

Written By: Kylan Hennessy



This document was generated on 2019-09-22 12:20:56 AM (MST).

## INTRODUCTION

This guide will show how to carefully remove the front and back plastic casing that surrounds the camera.

### **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Precision screwdriver kit \(Phillips bits\)](#) (1)

### **PARTS:**

- [Magnetic Project Mat](#) (1)

## Step 1 — General Electric Create Jason Wu Casing Disassembly



- Begin by removing the 5 screws (located: 2 screws on either side and 1 screw on the bottom) using the PH000 head in the Precision Phillips Screwdriver.
- These screws were missing in our example. These screws should have been small Phillips PH000 screws 1.5mm in length.
- ⚠ These screws are very small. To keep from losing any pieces, place all small metals on a magnetic project mat.

## Step 2



- After the screws are removed, pull the front casing up and away from the camera.
- If the casing is difficult to remove, use a plastic opening tool to gently pry up on the front as shown.

This document was generated on 2019-09-22 12:20:56 AM (MST).

## Step 3



- Using your hands or an opening tool, pry off the silver frame, taking special care at the top of the camera where the buttons are as it is a little harder to pry off.
- *i* If the back casing is loose from the camera body, it may be easier to perform step 4 first, then accomplish this step. Proceed as your unit allows.

## Step 4



- The last part of the casing to disconnect is the back that houses the LCD screen.
- The screen is attached by a connection ribbon. Gently pull the casing and screen away from the camera body to disconnect the casing.

*i* The LCD screen is held onto the back casing by a small amount of adhesive. This may come loose during this process. Do not worry if they become separated.

**!** This plug and the connection ribbon are fragile, try not to tear the connection ribbon when disconnecting.

To reassemble your device, follow these instructions in reverse order.